



The Complete Tutbury Furniture Range



Care and User Guide



Customer Service: +44 (0) 1889 272 056

IMPORTANT: PLEASE REGISTER YOUR HEX LIVING PRODUCT AFTER ASSEMBLY

Using the unique serial number, simply register your product at **www.hexliving.co.uk** or use the QR code above to access the HEX Living lifetime warranty and online support.

Affix Serial Number
HERE

Contents

1.	Individual Products	3-5
2.	Protective Covers	6
3.	Corner Sofa Assembly	7
4.	Dual Height Square Table Assembly	8
5.	Installation Advice	9
6.	Assembly Guidelines	9
7.1	Care Advice - General	10
7.2	Care Advice - Outdoor Cushion Precautions	11
8.	Limited Warranty	11

IMPORTANT: Keep this manual for future reference.



PRIOR TO ASSEMBLY:

Please read this guide thoroughly before beginning the assembly and check that you have the correct components.

Pre-assembled parts must not be altered by the user.

If for any reason you need assistance, turn off the unit and contact our customer service team on +44 (0) 1889 272 056.

1. Individual Products

Corner Sofa

Size: W 230 x D 230 x H 86cm

Product Code:

Anthracite Grey: 0232-CS-AG

Sage Green: 0232-CS-SG

Olive Green: 0232-CS-OG

Graphite Black: 0232-CS-GB

Porcelain White: 0232-CS-PW

Cushion Code:

Grey: 0232-CUSH-CS-GY

Oatmeal: 0232-CUSH-CS-OM

Assembly:

See instructions, on page 7.



Sofa

Size: W 153 x D 82 x H 86cm

Product Code:

Anthracite Grey: 0232-1S-AG

Sage Green: 0232-1S-SG

Olive Green: 0232-1S-OG

Graphite Black: 0232-1S-GB

Porcelain White: 0232-1S-PW

Cushion Code:

Grey: 0232-CUSH-1S-GY

Oatmeal: 0232-CUSH-1S-OM



Chair

Size: W 73 x D 82 x H 86cm

Product Code:

Anthracite Grey: 0232-1C-AG

Sage Green: 0232-1C-SG

Olive Green: 0232-1C-OG

Graphite Black: 0232-1C-GB

Porcelain White: 0232-1C-PW

Cushion Code:

Grey: 0232-CUSH-1C-GY

Oatmeal: 0232-CUSH-1C-OM



CAUTION:

Whilst every effort has been made in the manufacture of your appliance to remove any sharp edge, you should handle all components with care to avoid accidental injury.

1. Individual Products (Continued)

Large Bench

Product Code:

Anthracite Grey: 0232-1BL-AG

Sage Green: 0232-1BL-SG

Olive Green: 0232-1BL-OG

Graphite Black: 0232-1BL-GB

 
Porcelain White: 0232-1BL-PW

Size: W 120 x D 50 x H 43cm

Cushion Code:

Grey: 0232-CUSH-1C-GY

Oatmeal: 0232-CUSH-1C-OM

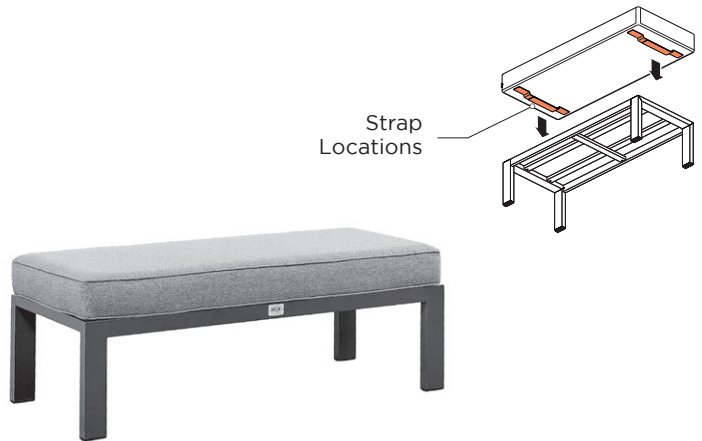

Footstool

Size: W 60 x D 60 x H 43cm

Product Code:

Anthracite Grey: 0232-1F-AG

Sage Green: 0232-1F-SG

Olive Green: 0232-1F-OG

 
Graphite Black: 0232-1F-GB

Porcelain White: 0232-1F-PW

Cushion Code:

Grey: 0232-CUSH-1F-GY

Oatmeal: 0232-CUSH-1F-OM

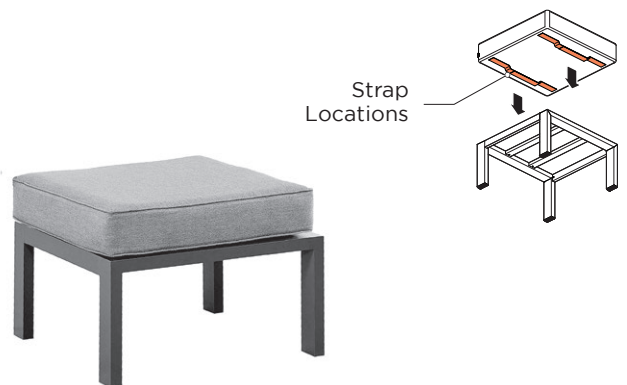

Dual Height Square Table

Size: W 127 x D 127 x H 67 cm

Product Code:

Anthracite Grey: 0232-DT-AG

Sage Green: 0232-DT-SG

Olive Green: 0232-DT-OG

Graphite Black: 0232-DT-GB

Porcelain White: 0232-DT

Assembly:

See instructions, on page 8.



Fire Pit Table

Size: W 127 x D 127 x H 90 cm

Product Code:

Anthracite Grey: 0232-FT-AG

Sage Green: 0232-FPT-SG

Olive Green: 0232-FT-OG

Graphite Black: 0232-FT-GB

Porcelain White: 0232-FT-PW

Assembly:

Refer to the fire pit table manual.



1. Individual Products (Continued)

Recliner

Size: W 200 x D 78 x H 117cm

Product Code:

Anthracite Grey: 0232-1R-AG

Sage Green: 0232-1R-SG

Olive Green: 0232-1R-OG

 
Graphite Black: 0232-1R-GB

Porcelain White: 0232-1R-PW

Cushion Code:

Grey: 0232-CUSH-1R-GY

Oatmeal: 0232-CUSH-1R-OM

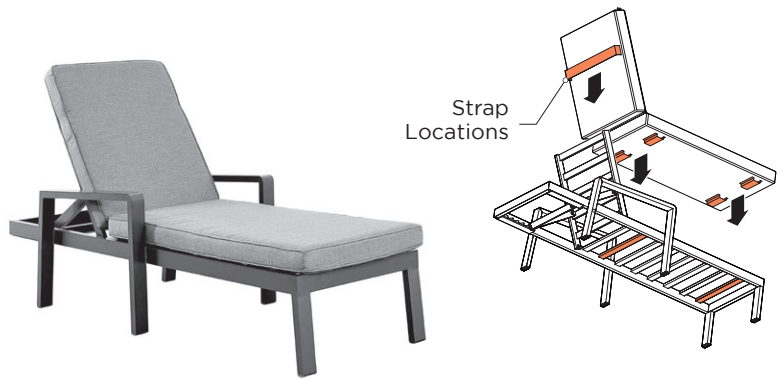

Side Table

Size: W 40 x D 40 x H 43cm

Product Code:

Anthracite Grey: 0232-ST-AG

Sage Green: 0232-ST-SG

Olive Green: 0232-ST-OG

Graphite Black: 0232-ST-GB

Porcelain White: 0232-ST-PW



Cantilever Parasol and Base

Size: L 3.0 x W 3.0 x H 2.5 m

Product Code:

Anthracite Grey: 0232-PS-AG

4 pc Heavy Duty Base: 50 x 50 cm

Assembly:

Refer to the Parasol user manual.

Protective cover: Included.



Cantilever Parasol and Base with LED's

Size: L 3.0 x W 3.0 x H 2.5 m

Product Code:

Anthracite Grey: 0232-PS-LED-AG

4 pc Heavy Duty Base: 50 x 50 cm

Assembly:

Refer to the Parasol user manual.

Protective cover: Included.



2. Protective Covers

 
A range of high-quality, heavy-duty, waterproof outdoor covers meticulously designed to perfectly fit all your HEX Living products offering all year-round protection.

Product Description:

Bench Large Cover
Chair Cover
Footstool Cover
Recliner Cover
Two Seater Sofa Cover
Corner Sofa Cover
Dual Height Table Cover
Fire Pit Table Cover
Rectangular Dual Height Table Cover
Side Table Cover

Product Code:

0232-COVER-1BL
0232-COVER-1C
0232-COVER-1F
0232-COVER-1R
0232-COVER-1S
0232-COVER-CS
0232-COVER-DT
0232-COVER-FT
0232-COVER-RDT
0232-COVER-ST

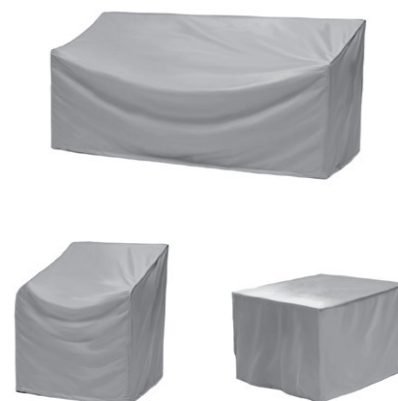


Key Features:

- Perfect fit: Tailored specifically to fit your HEX Living product for optimal coverage.
- Robust construction: Made from a weatherproof and breathable 750 denier polyester fabric for exceptional durability.
- UV stabilized: Treated to resist fading caused by sun exposure.
- Breathable mesh air vents: Minimalise condensation buildup due to temperature fluctuations, reducing moisture and helping to prevent mildew.
- Waterproof: Provides all-weather protection, guarding against rain, snow, dust, and grime.
- Made in the UK: Manufactured using high-quality materials and expertise, ensuring reliable performance for whatever the British weather throws at you.

For more information: Contact our customer service team on +44 (0) 1889 272 056.

Reference: 699-0836FCL - Outdoor furniture cover sample leaflet.

 3. Corner Sofa Assembly

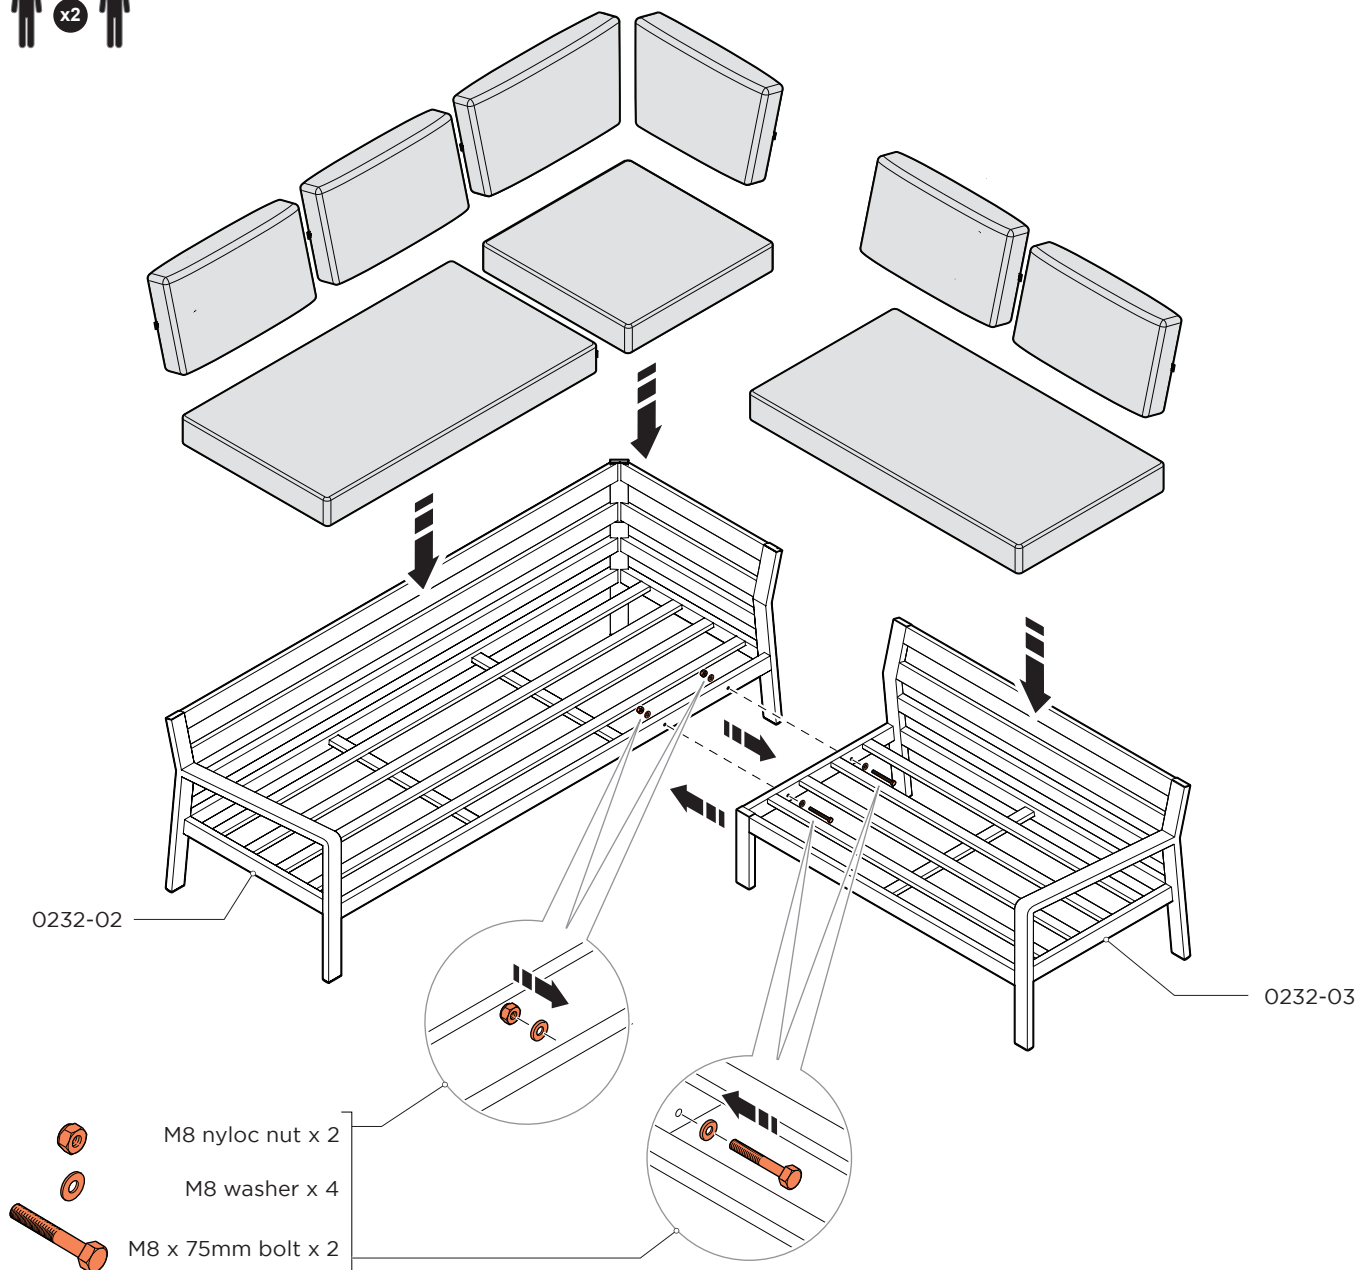


Tool needed: 13mm socket
or spanner will be required.



1


Locate and secure frame together using the fixings shown above.

 4. Dual Height Square Table Assembly

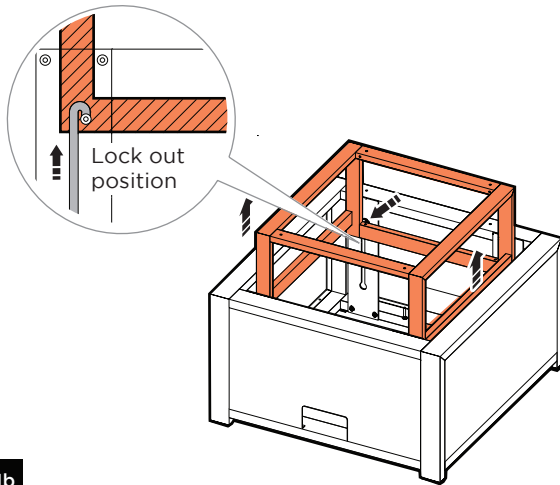

1b

 Locate and lift inside table arms into the locked position as shown above.

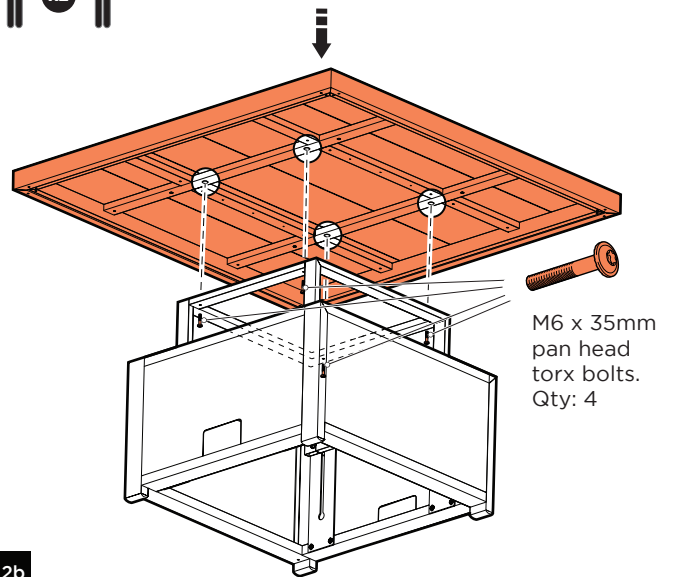

2b

Locate and secure M6 x 35mm pan head torx bolts to table top as shown above.

Locate and secure 4x Torx M6 x 35mm flanged bolts. As shown above.
Tool required: T30 torx bit.

Operation Procedure to Change Table Height

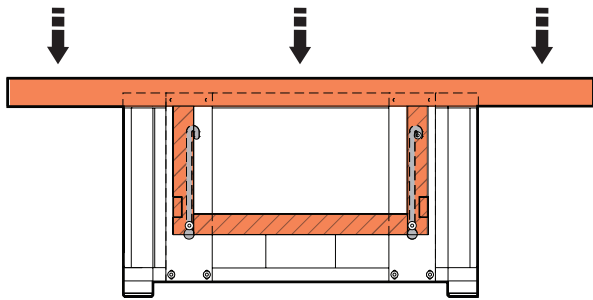


Fig.4 - Table in coffee table position.

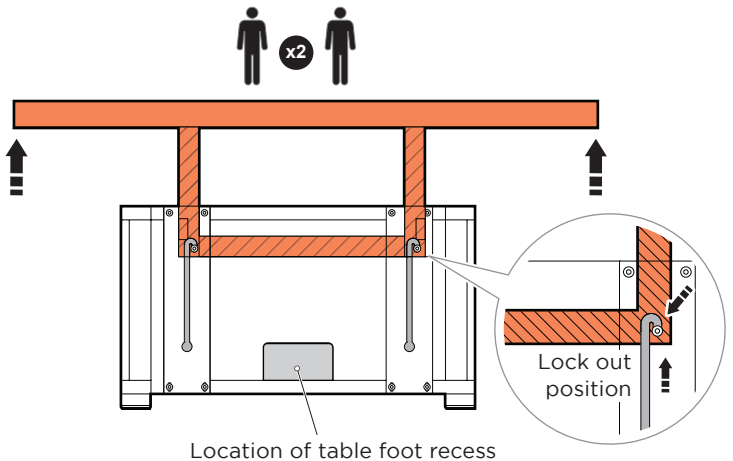


Fig.5 - Table in dining position.

This procedure will require two people.



To lower to minimum height (coffee table position) (Fig.4).

1. Place a foot in both table recesses at adjacent sides (Fig.6). (these will help steady the table base, when lifting).
2. Lift slightly upwards to unlock table top.
3. Lower gently in a downwards direction, until the table top stops.

To lift table to maximum height (dinning height position) (Fig.5).

1. Place a foot in both table recesses at adjacent sides (Fig.6). (these will help steady the table base, when lifting).
2. Lift table to maximum height, lift in an upwards direction until table locks outs.

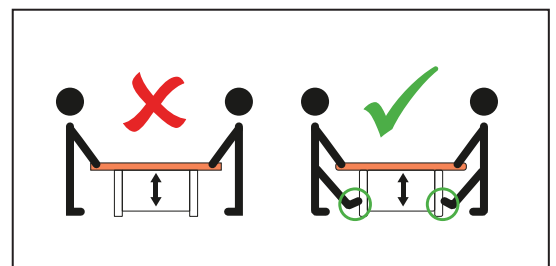


Fig.6 - Correct way of lifting / lowering the table top.

5. Installation Advice



Before beginning the assembly, check that you have the correct components. If for any reason you need assistance, please contact our customer service team on +44 (0) 1889 272 056.

Important Information

Note: The safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Please keep these documents safe for future use.

Safety Instructions

Cautions and instructions in this manual cannot cover all possible situations and conditions that may occur. Common sense and caution are factors which cannot be built into these products.

6. Assembly Guidelines

Please read these instructions carefully before assembly and use.

- Before assembling your garden furniture, ensure all plastic wrapping and protective film are fully removed. Removal of clutter, debris and sharp objects, to reduce damaging components during assembly.
- Find a large, clean, and level surface to assemble your garden furniture. ensure you have enough space to work safely and efficiently.
- Some components of your furniture can be large or heavy. For safety and ease, we recommend having two people assemble the product. This helps prevent injury and reduces the risk of damaging parts during assembly.
- Handle with care: Avoid dragging pieces across hard surfaces. Lift and position components gently to avoid injury or damage,
- Follow the assembly instructions and use the recommended tools. Avoid improvising with sharp instruments that could scratch and damage the furniture or cause injury.
- Always wear appropriate safety gloves during assembly, some edges and corners may be sharp and can cause minor cuts if handled without protection.
- Each component is designed to fit smoothly, forcing parts may result in damage to the furniture.
- When applicable, tighten all components by hand first. Once all steps are completed, go back and fully tighten till firmly secure with the recommended handtool.
- **Note:** For specific guidance relating to fire pit table assembly, please refer to the separate manual.

TWO PERSON ASSEMBLY

Most procedures will not require two people but it may be easier to have assistance.



PERSONAL PROTECTION EQUIPMENT

We advise appropriate personal protective equipment is worn during assembly.



Congratulations on purchasing your new HEX Living product.

Designed and built to stand the test of time, HEX Living products are low maintenance; requiring little more than a periodic clean to keep them looking their very best.

Here's some advice on how to look after your items:

- Regularly wipe down metal frames with detergent-free, warm soapy water and a non-abrasive sponge to clean. Avoid using bleach, abrasive cleaners or pressure washing.
- Perform maintenance checks at least once a year and ensure all fixings are secure.
- Clean cushions using a soft brush and a mild fabric cleaner.
- To avoid permanent stains, clean up spillages immediately.
- Always dry your furniture completely to prevent moisture build-up, especially before covering or storing.
- Place coasters beneath glasses and tableware to prevent the marking your table top.

Important information

- Please open with care, avoid using sharp tools like Stanley knives or scissors, as they may accidentally damage your new garden furniture. Such damage is not covered under warranty.
- We recommend you use covers to protect your outdoor furniture from weather damage, when not in use. Covers must be removed periodically to minimise moisture build up.
- Remove garden furniture covers with care, whilst durable, they can rip when removed with excessive force.

7.2. Care Advice - Outdoor Cushion Precautions

Outdoor cushions are designed for comfort and style, but they're not totally weatherproof. Prolonged exposure to moisture and direct sunlight can lead to water damage, mould and fading. Our outdoor cushions have UV-Resistant and shower-proof qualities, however they are only designed to handle occasional exposure to moisture, and are not designed to withstand heavy downpours.

To protect from cushions from weather-damage, consider these simple precautions:

- **Storage:** Use a waterproof deck box, shed or bring cushions indoors during heavy downpours.
- **Covers:** Consider purchasing our HEX Living made-to-measure removable covers, made from high quality waterproof fabric, washable and long lasting, see page 6 for more details.
- **Drying:** After exposure to moisture, unzip and air-dry cushions completely.
- **Clean regularly:** Wipe down with mild soap and water; avoid harsh chemicals.
- **Elevate off wet surfaces:** Prevent water pooling and mildew by keeping cushions raised.



White Residue: Our outdoor cushions have been treated with a fire-retardant protective barrier, so sometimes after drying you may notice small white patches on your cushions. These can easily be removed by using a clean, damp cloth to gently rub the affected area.

Once wiped clean allow the cushion to air dry naturally. Repeat the process if any white patches remain, until they are fully removed. This simple cleaning method should help restore your cushions to their intended appearance.

By following these simple steps: Your outdoor cushions should stay dry and protected from water damage — season after season.

For clever outdoor storage solutions visit our website, or contact our customer service team on **+44 (0) 1889 272 056**.

8. Limited Warranty

HEX Living products come with a lifetime warranty on all metal components and a one year warranty on fire pit elements, commencing from the date of purchase. The warranty includes manufacturing deficiencies and defective parts and extends to the replacement of these parts. Expenses for shipping, installation, replacement of worn parts and other cost are not covered by the warranty. The warranty lapses in case of mishandling and if any kind of unauthorised modifications are made to the appliance.

IMPORTANT: Keep this manual for future reference.

