# **Hixon**



# Large Metal Storage Shed Assembly Guide

8 x 8 ft (2.4 x 2.4 m)



**IMPORTANT: PLEASE REGISTER YOUR HEX LIVING PRODUCT BEFORE ASSEMBLY** 

Using the unique serial number, simply register your product at www.hexliving.co.uk to access and download the lifetime warranty and video assembly instructions.

> Affix Serial Number HERE





PLEASE READ THIS DOCUMENT FULLY PRIOR TO STARTING ASSEMBLY PROCEDURE

The objective of this instruction is to illustrate the recommended assembly sequence for this product, any deviation from this will be the sole responsibility of whoever carries out the assembly.

#### IMPORTANT: IT IS ADVISABLE THAT THE PRODUCT IS ASSEMBLED AT, OR AS CLOSE AS POSSIBLE TO WHERE IT WILL BE FINALLY LOCATED

Ensure there is adequate clearance where the product is to be located:

Exterior dimensions including overhang (W x D x H)	2400 x 2440 x 2134mm
Footprint dimensions (W x D)	2300 x 2300mm
Clearance required for door to open (W x H)	Doors open outwards 1454 x 1819mm

#### TWO PERSON ASSEMBLY

Most procedures will not require two people but it may be easier to have assistance.

#### PERSONAL PROTECTION EQUIPMENT

We advise appropriate personal protection equipment is worn during assembly including eye protection and gloves.



## CARING FOR YOUR HEX LIVING PRODUCT

Your HEX Living product is designed to stand the test of time, which is why we're happy to offer a Lifetime Warranty on our products. With zero maintenance required, simply assemble your HEX Living product and enjoy putting it to great use in your garden.

Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:

- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will ensure dirt or mud simply wipes away.
- Periodically clear the roof of fallen leaves.
- If your product has guttering, remove leaves and garden debris as you would on your home.

#### PRODUCT REGISTRATION

**IMPORTANT:** Prior to assembly, please ensure you have registered your HEX Living product using the unique serial number found on the cover of this document, please visit **www.hexliving.co.uk** to register your product and access the HEX Living Lifetime Warranty and video instructions.

#### GROUND ANCHOR KIT

A Ground Anchor Kit is supplied, this is to secure the product to a solid concrete base, the shed has x4 clamp plates in each corner along with additional clamp plates located centrally.


#### WE STRONGLY ADVISE THAT THE SHED IS ANCHORED USING THIS KIT

The diagram illustrates the typical fixing method, once the shed is assembled, access the clamp brackets by removing the appropriate floor panel and secure as required.


#### GROUND ANCHOR KIT

Part Ref: FK8 M8 x 50mm Coach Screw Qty: x12



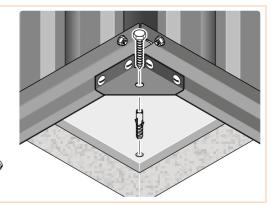




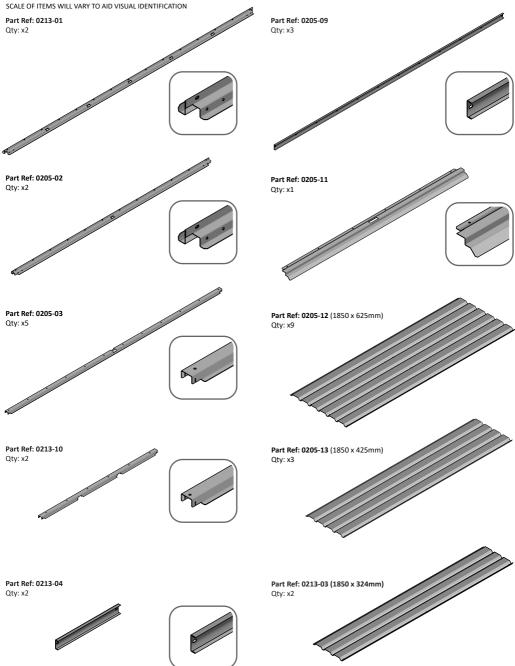




SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

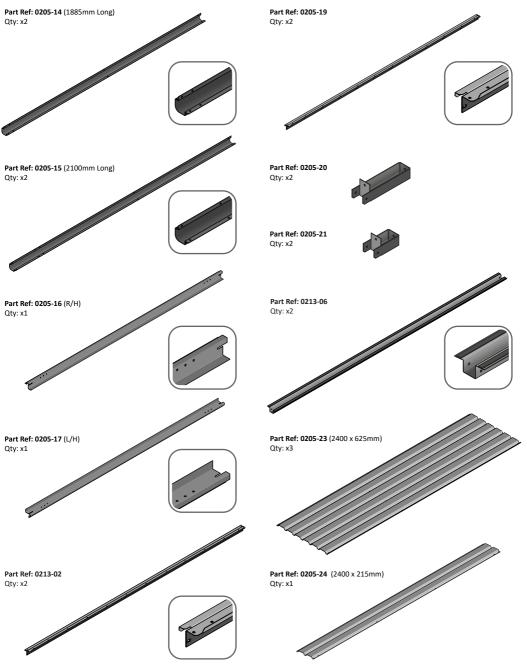




SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

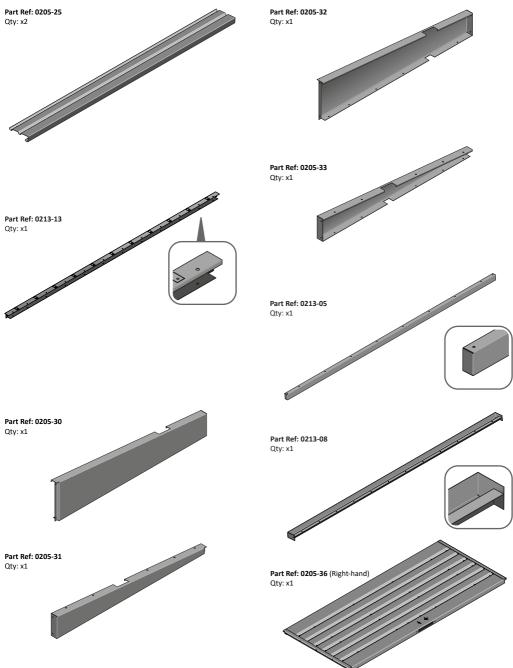




SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

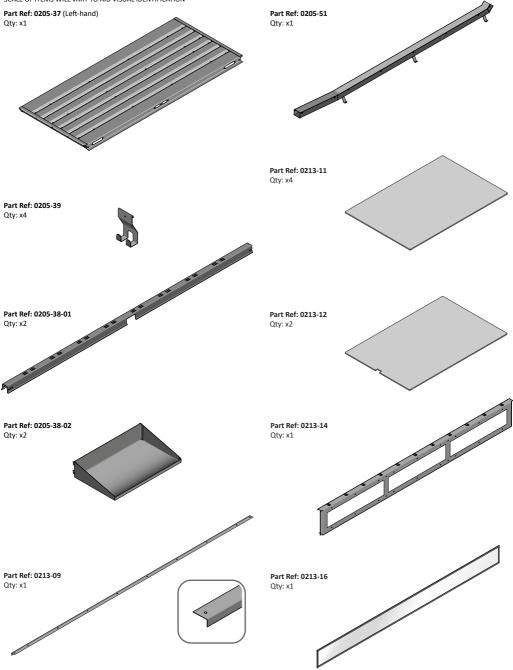



SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

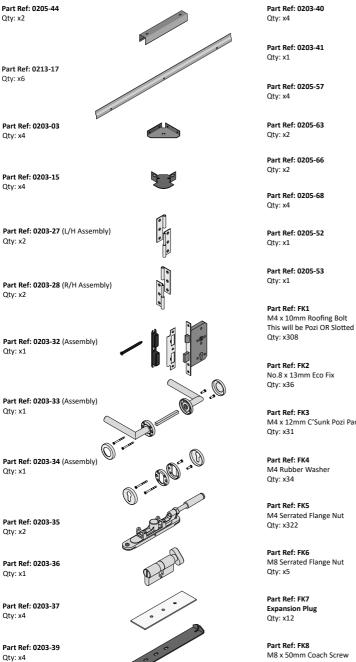

M4 x 12mm C'Sunk Pozi Pan

M4 Rubber Washer

M4 Serrated Flange Nut

Part Ref: FK6 M8 Serrated Flange Nut

Part Ref: FK7 **Expansion Plug** 

Part Ref: FK8 M8 x 50mm Coach Screw Qty: x12












LOCATE AND SECURE A CORNER BRACE 0203-03 AT EACH LOCATION INDICATED.

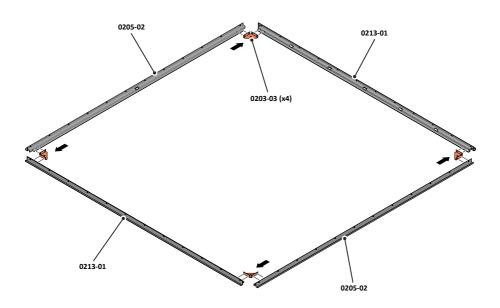

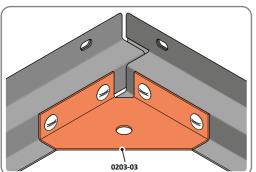


SECURE EACH CORNER BRACE 0203-03 AS SHOWN ABOVE.

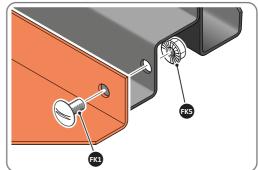


PLEASE NOTE: SECTION VIEW OF TYPICAL FIXING METHOD




LOCATE AND SECURE A FLOOR BRACE 0205-03 AT EACH LOCATION INDICATED.

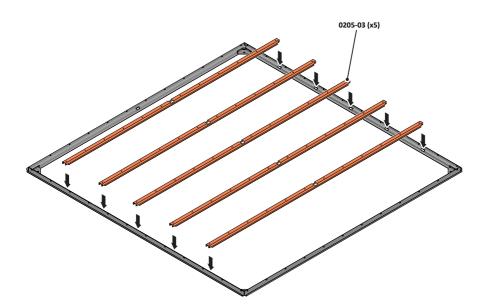

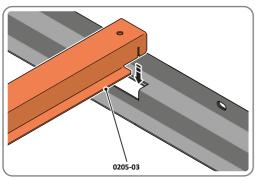


SLOT EACH FLOOR BRACE 0205-03 INTO POSITION AS SHOWN ABOVE.

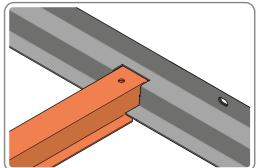


PLEASE NOTE: ENSURE TOP OF FLOOR BRACE IS LEVEL WITH TOP OF FLOOR RAIL




LOCATE AND SECURE A FLOOR BRACE 0213-10 AT EACH LOCATION INDICATED.

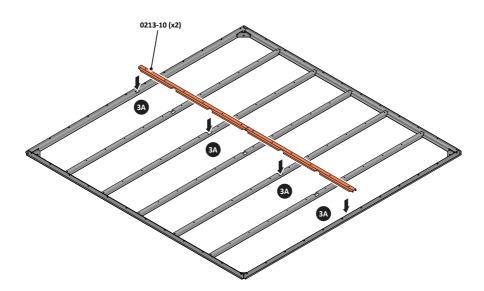

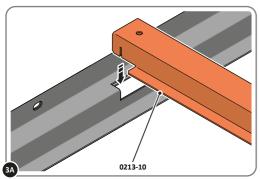

SLOT EACH FLOOR BRACE 0213-10 INTO POSITION AS SHOWN ABOVE.

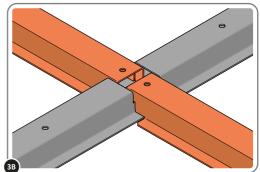



SLOT EACH FLOOR BRACE 0213-10 INTO POSITION AS SHOWN ABOVE. PLEASE NOTE: ENSURE TOP OF FLOOR BRACE IS LEVEL WITH TOP OF FLOOR RAIL




LOCATE AND LOOSELY ATTACH WALL PANEL 0213-03 (1850 x 324mm).



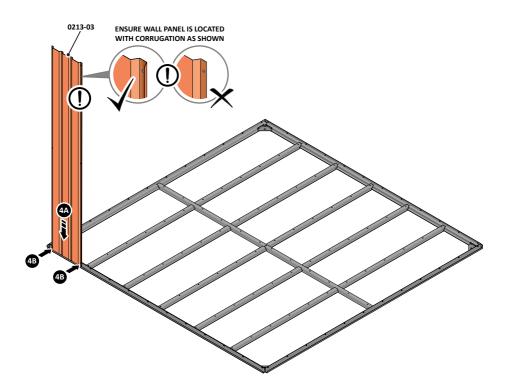

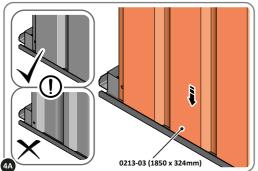

LOCATE WALL PANEL 0213-03 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

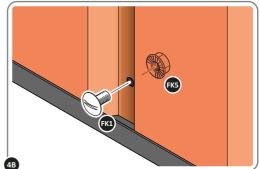



LOOSELY ATTACH WALL PANEL ONTO FLOOR RAIL AT x2 LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINTS AT THIS STAGE.




LOCATE AND LOOSELY ATTACH CORNER POST 0205-15 (2100mm).



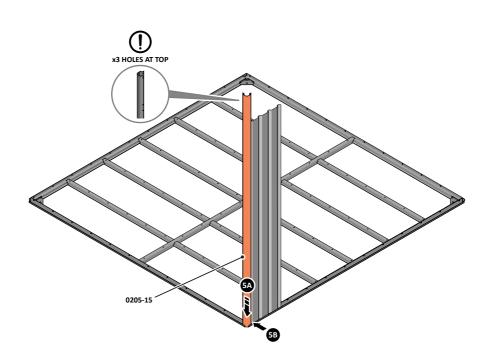

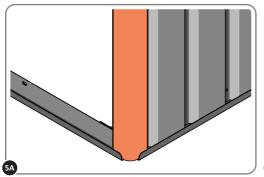


LOCATE CORNER POST 0205-15 (2100mm) AS SHOWN ABOVE.

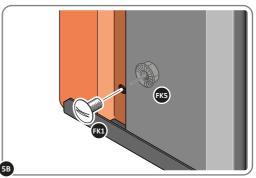


LOOSELY ATTACH CORNER POST AT LOCATION INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.




LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-04 ONTO WALL PANEL.

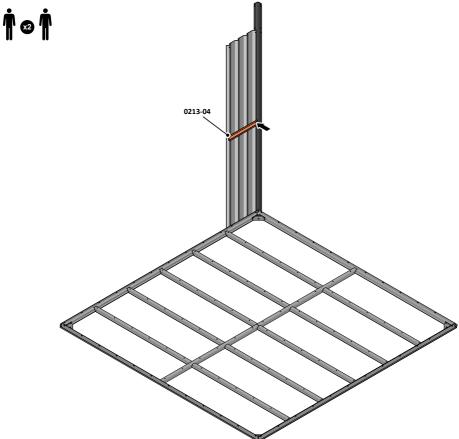

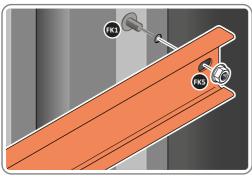



LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-04 AS SHOWN AT LOCATION INDICATED ABOVE.

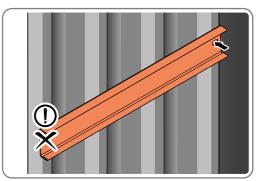


LOOSELY ATTACH AT LOCATION INDICATED ONLY. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

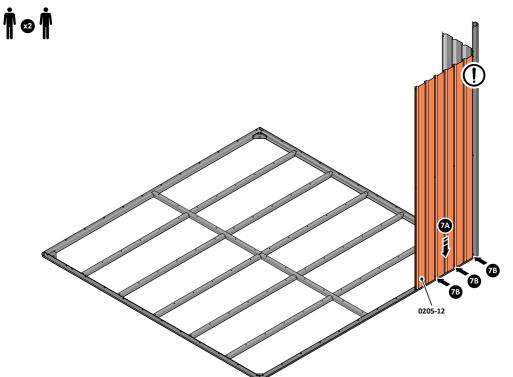

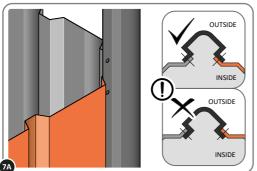


LOCATE FIRST WALL PANEL 0205-12 (1850 x 625mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

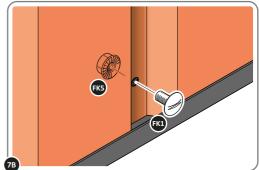


LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.



LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09. Ì∞Ì 0205-09

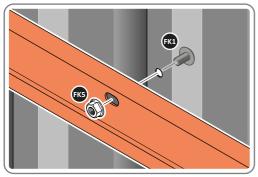



LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09 AS SHOWN AT x3 LOCATIONS INDICATED ABOVE.

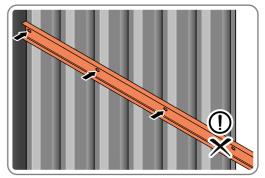


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

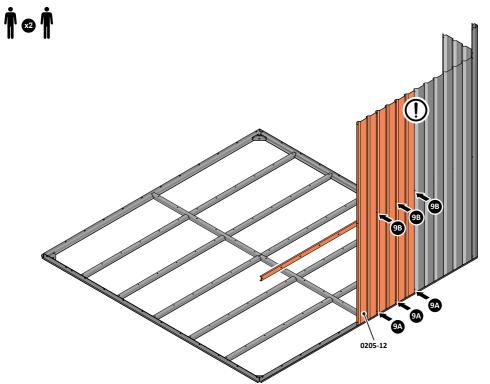

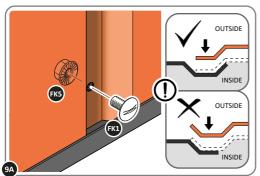


LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

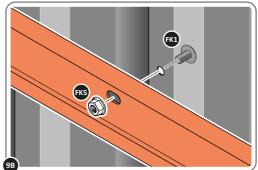


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

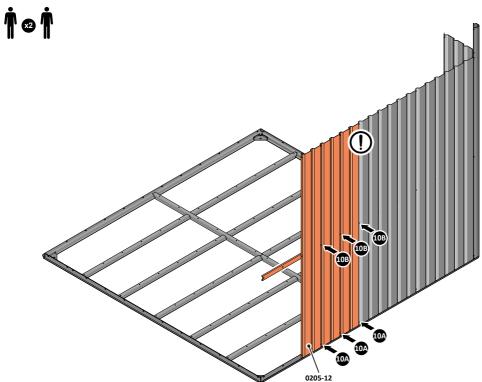

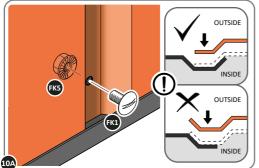


LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

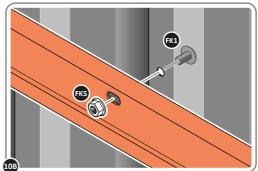


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

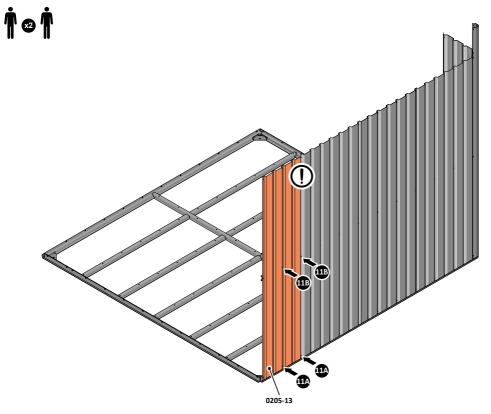

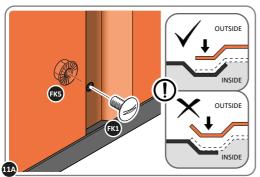


LOCATE AND LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

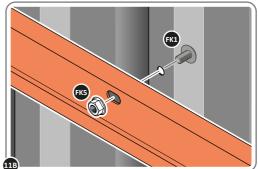


LOOSELY ATTACH AT x2 LOCATIONS INDICATED ONLY.




LOCATE AND LOOSELY ATTACH CORNER POST 0205-14 (1885mm).

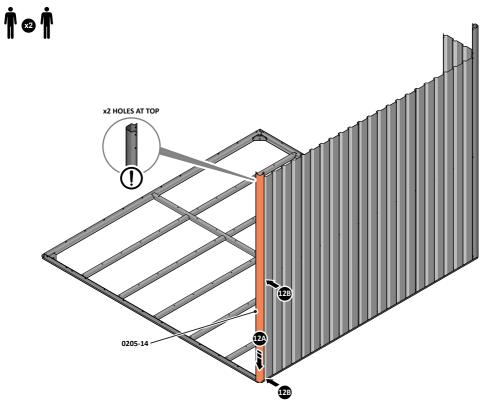

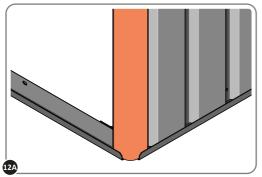


LOCATE CORNER POST 0205-14 (1885mm) AS SHOWN ABOVE.

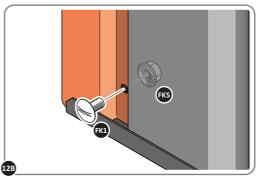


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

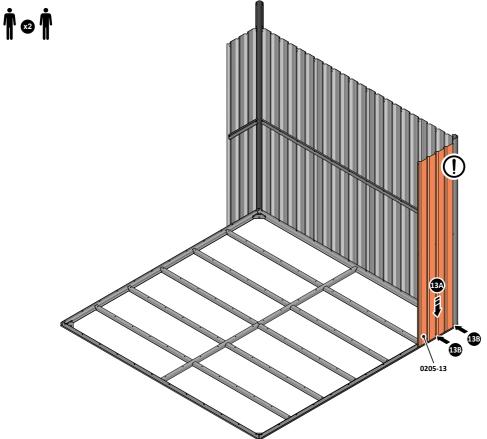

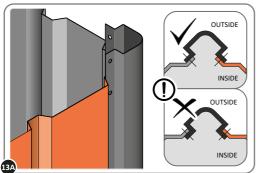


LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

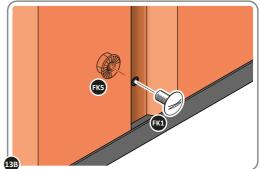


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

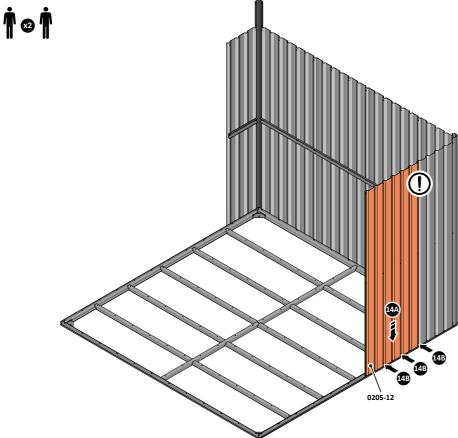

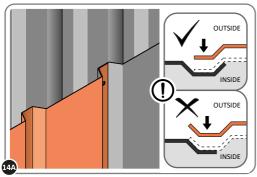


LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

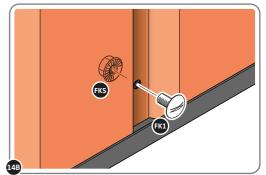


LOOSELY ATTACH BACK WALL PANEL AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.




LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-09

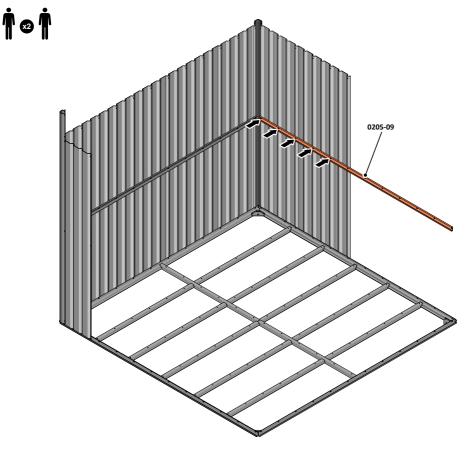

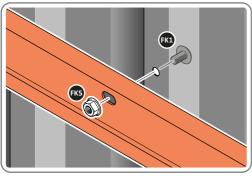



LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-09 AS SHOWN AT x5 LOCATIONS INDICATED ABOVE.

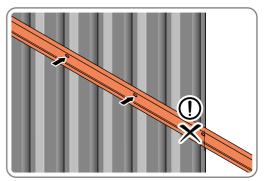


LOOSELY ATTACH AT x5 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.



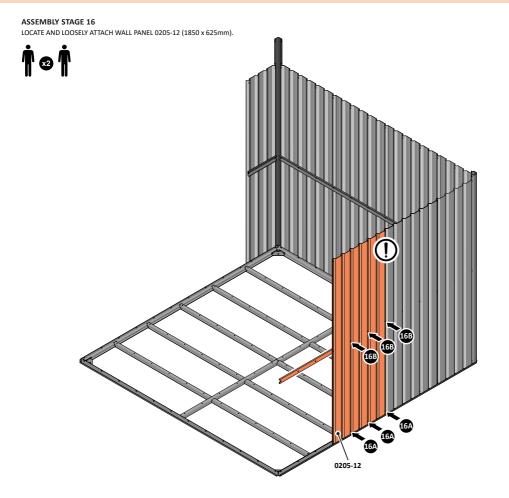

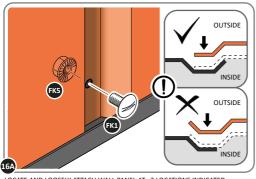



LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

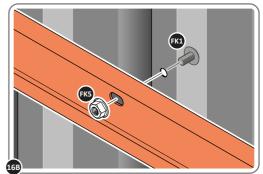


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.



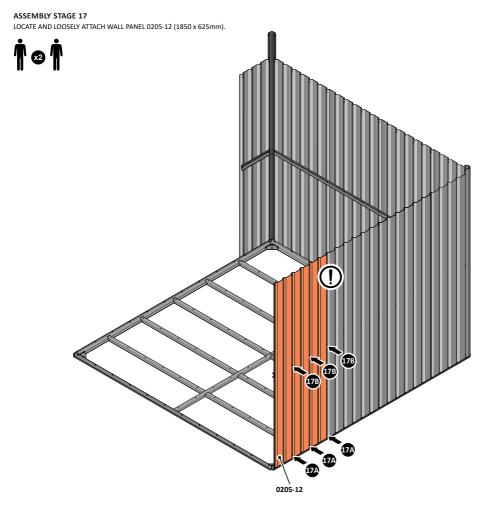


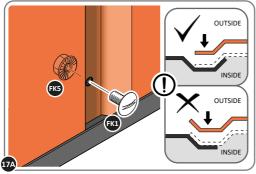


LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

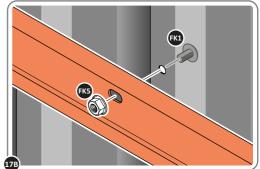


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.

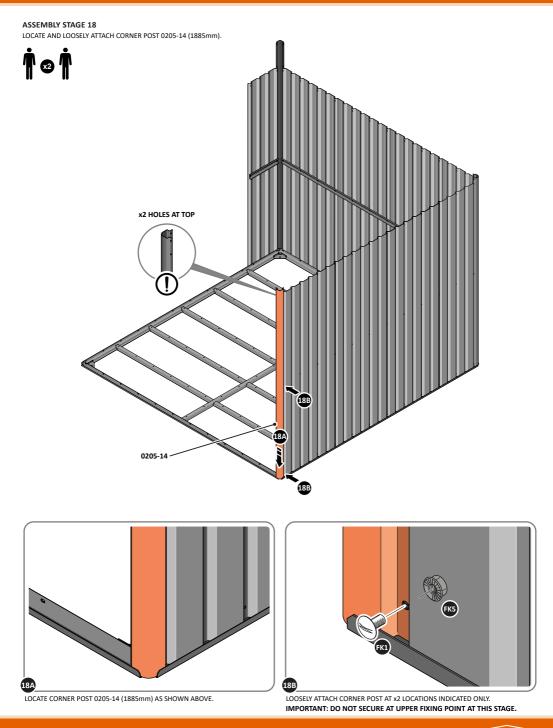


LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

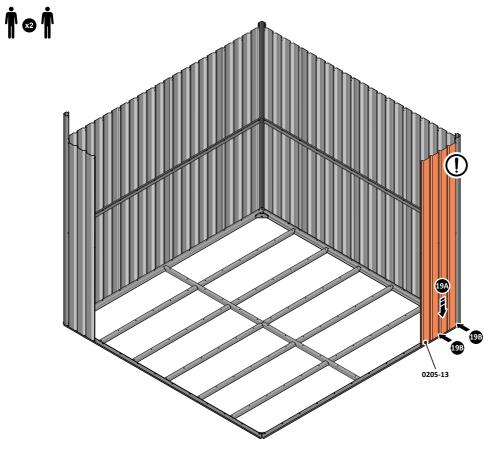

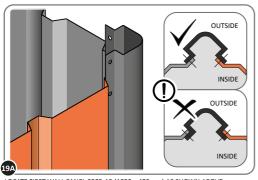


LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

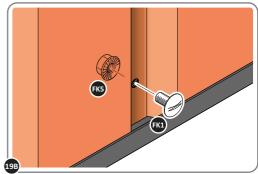


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

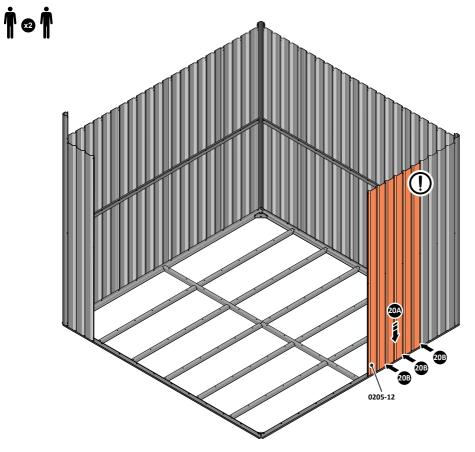

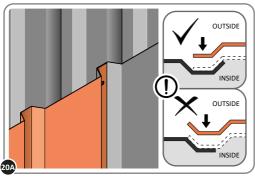


LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

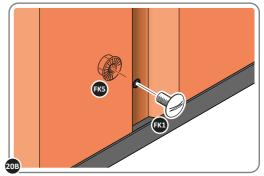


LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.




LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09.

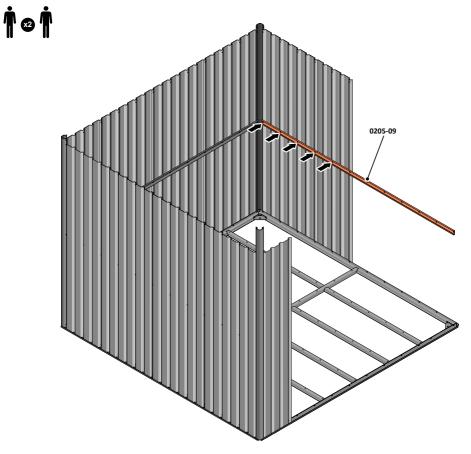

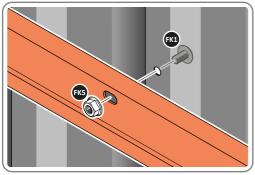


LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09 AS SHOWN AT x5 LOCATIONS INDICATED ABOVE.

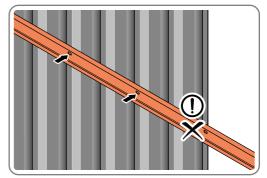


LOOSELY ATTACH AT x5 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

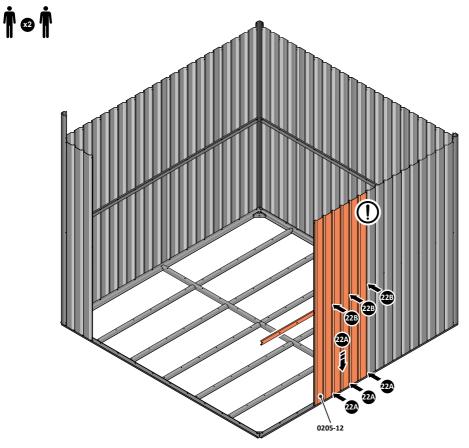

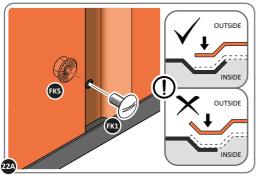


LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

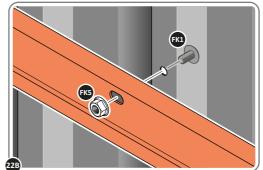


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.




LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

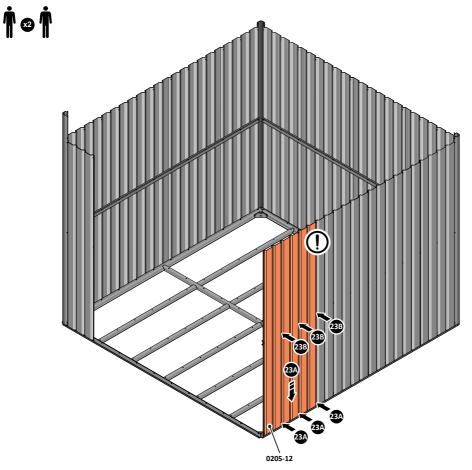

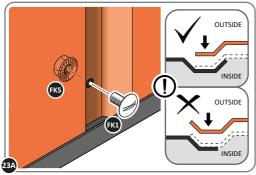


LOCATE AND LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

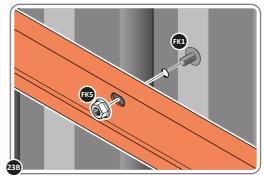


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.




LOCATE AND LOOSELY ATTACH CORNER POST 0205-15 (2100mm).

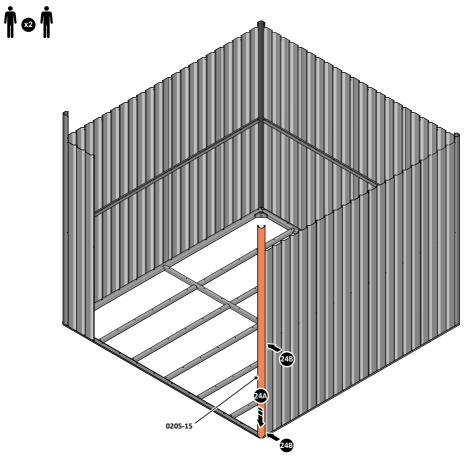

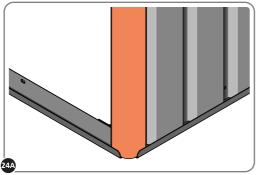



LOCATE CORNER POST 0205-15 (2100mm) AS SHOWN ABOVE.

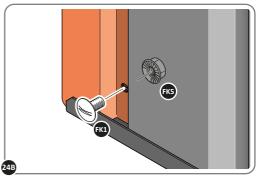


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0213-03 (1850 x 324mm).

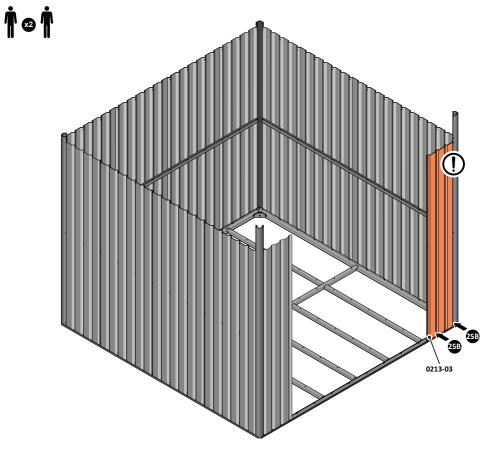

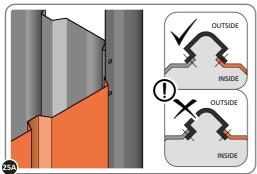


LOCATE WALL PANEL 0213-03 (1850 x 324mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

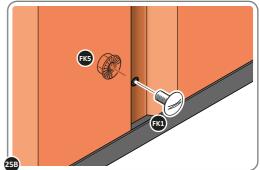


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.




LOCATE AND LOOSELY ATTACH RIGHT-HAND DOOR POST 0205-16. LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-04 ONTO WALL PANEL.

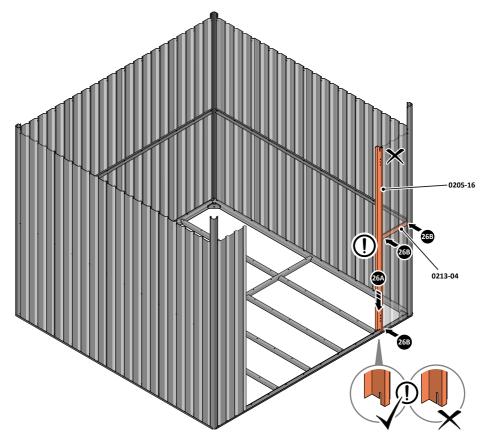

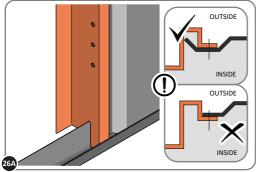


LOCATE RIGHT-HAND DOOR POST 0205-16 AS SHOWN ABOVE. IMPORTANT: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

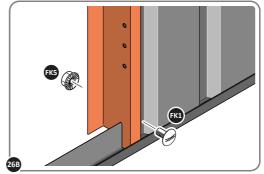


SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.




LOCATE AND LOOSELY ATTACH LEFT-HAND DOOR POST 0205-17. LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-04 ONTO WALL PANEL.

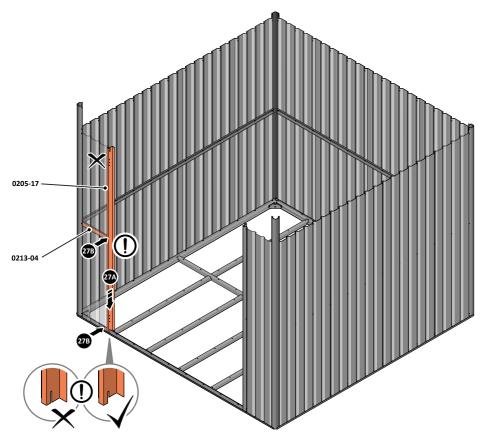

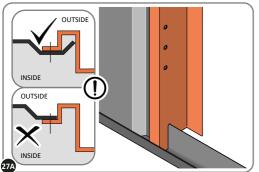


LOCATE LEFT-HAND DOOR POST 0205-17 AS SHOWN ABOVE. IMPORTANT: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

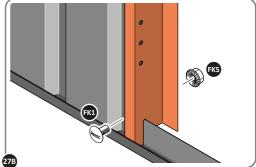


SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.




LOCATE AND LOOSELY ATTACH SHORT ROOF RAIL 0205-19.

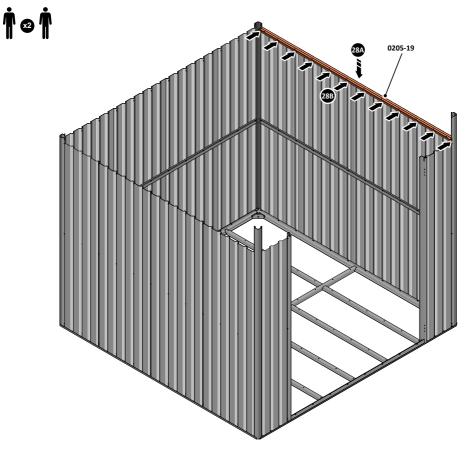

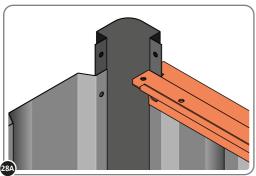


LOCATE SHORT ROOF RAIL 0205-19 AS SHOWN ABOVE.

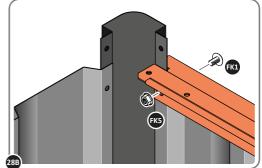


LOOSELY ATTACH AT x12 LOCATIONS INDICATED.




LOCATE AND LOOSELY ATTACH SHORT ROOF RAIL 0205-19.

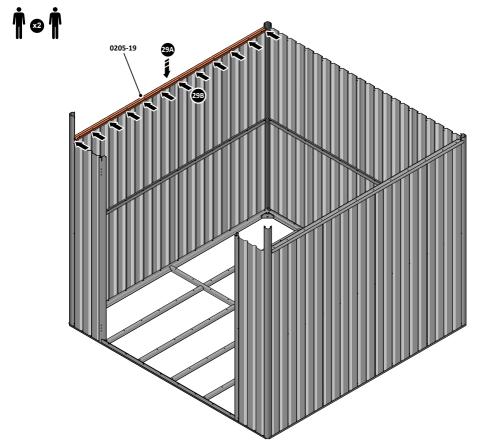

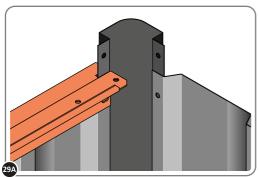


LOCATE SHORT ROOF RAIL 0205-19 AS SHOWN ABOVE.

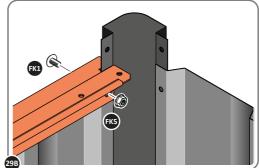


LOOSELY ATTACH AT x12 LOCATIONS INDICATED.




LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0213-02.

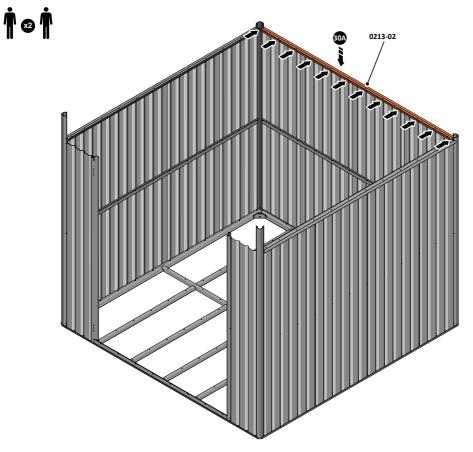

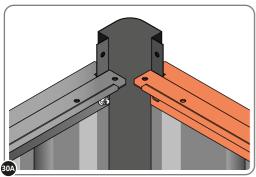


LOCATE LONG ROOF RAIL 0213-02 AS SHOWN ABOVE.

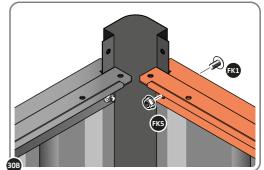


LOOSELY ATTACH AT x12 LOCATIONS INDICATED.




LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0213-02.

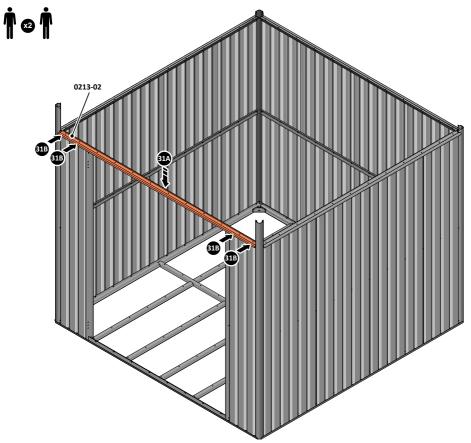

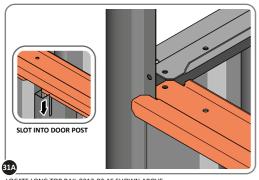


LOCATE LONG TOP RAIL 0213-02 AS SHOWN ABOVE.

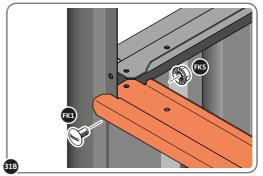


LOOSELY ATTACH AT x4 LOCATIONS INDICATED.




LOCATE GROUND ANCHOR BRACKETS 0205-57.

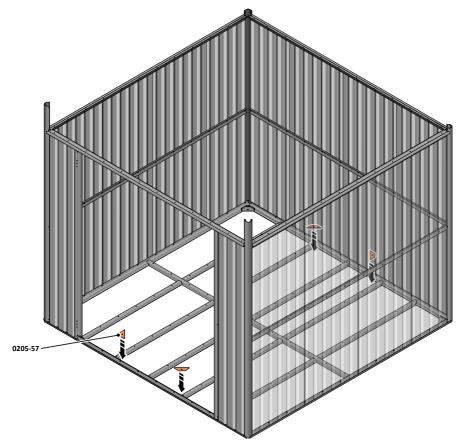

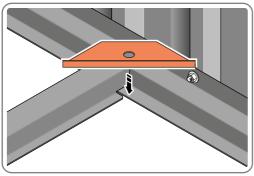


LOCATE x4 GROUND ANCHOR BRACKETS 0205-57 AS SHOWN ABOVE, THESE ALLOW FOR FIXING TO A CONCRETE BASE AT A LATER STAGE IF DESIRED.

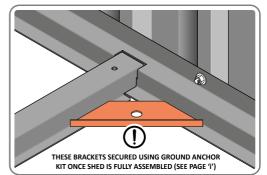


PLEASE NOTE: THESE BRACKETS ARE NOT SECURED ONTO THE FRAME, THEY CLAMP INTO PLACE WHEN FIXED TO A CONCRETE BASE, SEE PAGE 'i'.




LOCATE FLOOR PANELS 0213-11.

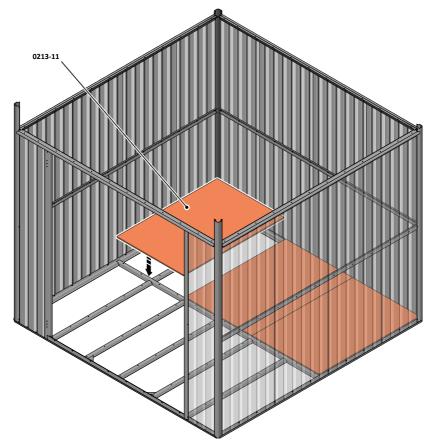

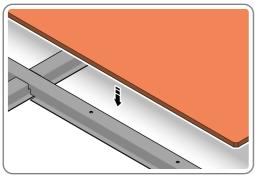


SLOT FIRST 3 FLOOR PANELS 0213-11 INTO THE BACK HALF OF FLOOR FRAME. IMPORTANT: THESE FLOOR PANELS DO NOT HAVE A CUT-OUT.

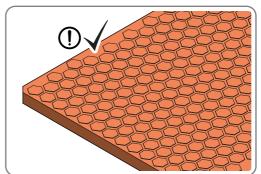


IMPORTANT: ENSURE THE HEXAGON PATTERN IS FACE UP.




LOCATE FLOOR PANELS 0213-11 AND 0213-12.

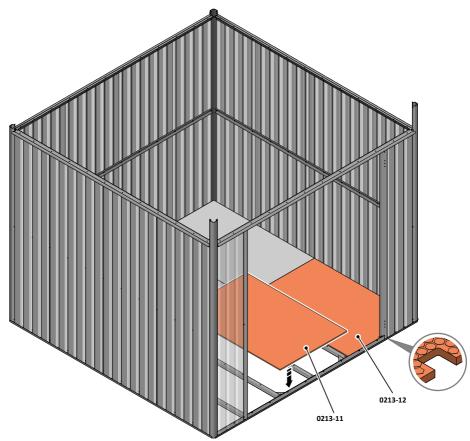

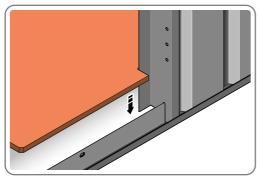


SLOT RIGHT-HAND FLOOR PANEL 0205-12 AND FLOOR PANEL 0205-11 INTO THE FRONT HALF OF FLOOR FRAME.

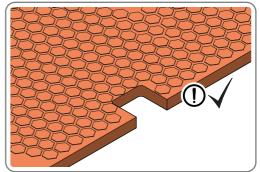


IMPORTANT: ENSURE THE HEXAGON PATTERN IS FACE UP.




LOCATE FLOOR PANEL 0213-11.

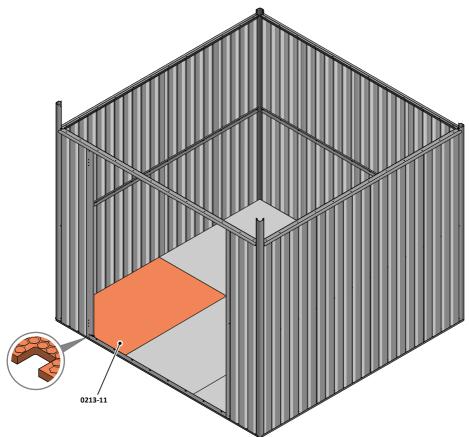

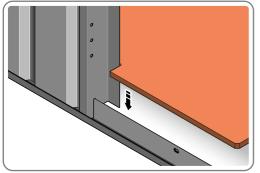


SLOT LEFT-HAND FLOOR PANEL 0213-11 INTO THE FRONT HALF OF FLOOR FRAME.

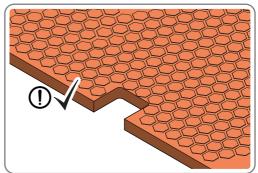


IMPORTANT: ENSURE THE HEXAGON PATTERN IS FACE UP.




LOCATE AND SECURE DOOR STRIP 0205-11.

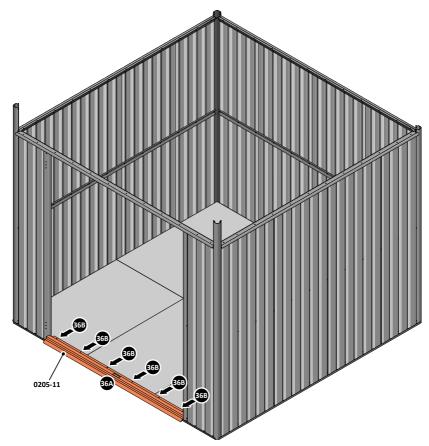

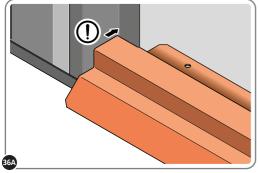



LOCATE DOOR STRIP 0205-11 AS SHOWN.

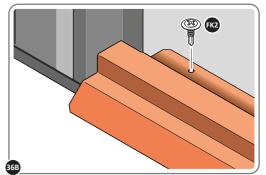


SECURE DOOR STRIP ONTO FLOOR PANELS AT x6 LOCATIONS INDICATED. IMPORTANT: ENSURE DOOR STRIP IS PUSHED AGAINST DOOR POST RETURN. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.

LOCATE AND SECURE ROOF SIDE INFILL 0205-30.

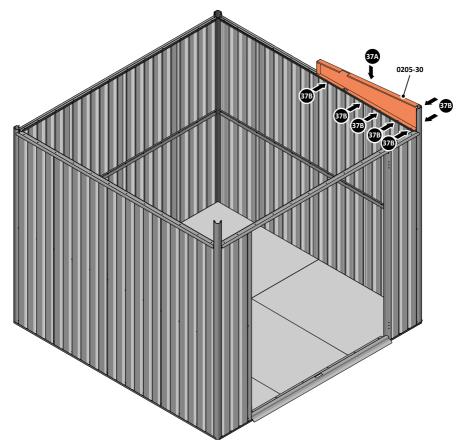

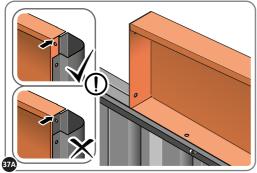


LOCATE ROOF SIDE INFILL 0205-30 AS SHOWN ABOVE.

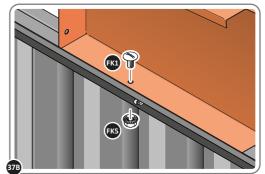


SECURE ROOF SIDE INFILL AT x7 LOCATIONS INDICATED.




LOCATE AND SECURE ROOF SIDE INFILL 0205-31.

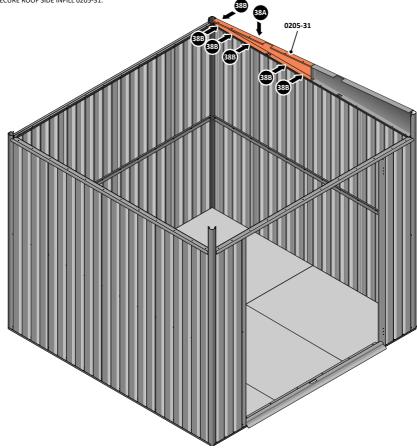

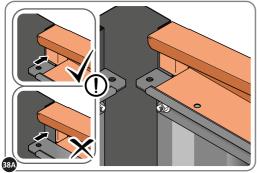


LOCATE ROOF SIDE INFILL 0205-31 AS SHOWN ABOVE.

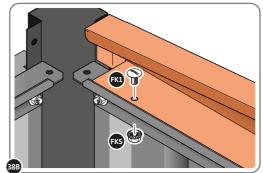


SECURE ROOF SIDE INFILL AT x6 LOCATIONS INDICATED AS SHOWN ABOVE.



SECURE ROOF SIDE INFILLS 0205-30 AND 0205-31.

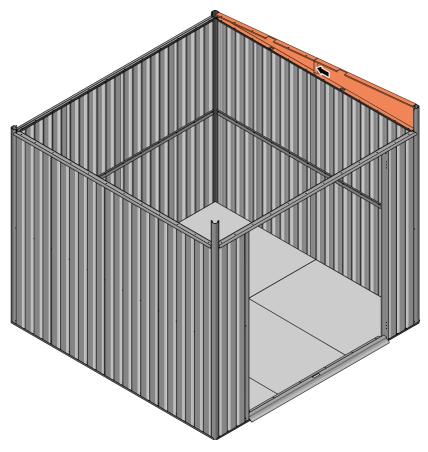


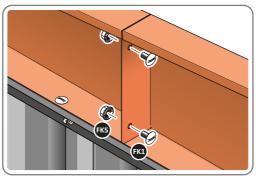


SECURE ROOF SIDE INFILLS 0205-30 AND 0205-31 AT x2 LOCATIONS SHOWN ABOVE.




LOCATE AND SECURE ROOF SIDE INFILL 0205-32.

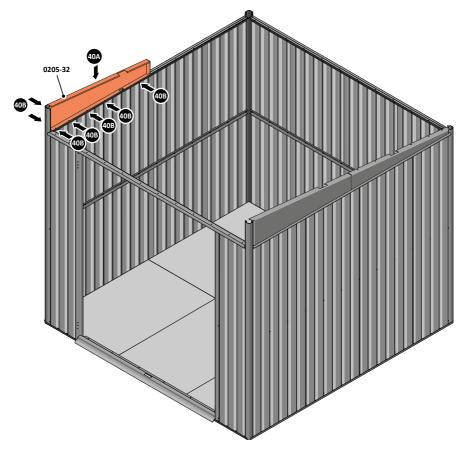

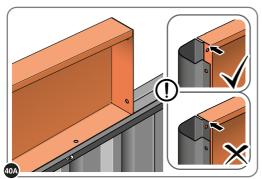


LOCATE ROOF SIDE INFILL 0205-32 AS SHOWN ABOVE.

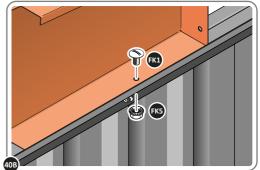


SECURE ROOF SIDE INFILL AT x7 LOCATIONS INDICATED.




LOCATE AND SECURE ROOF SIDE INFILL 0205-33.

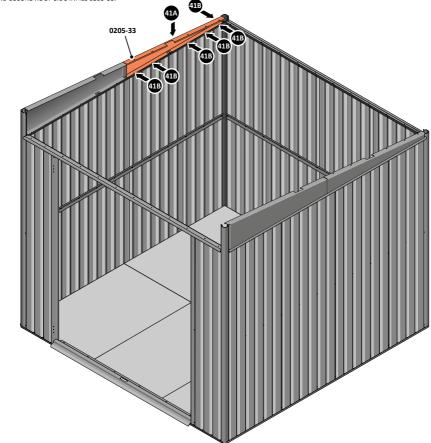

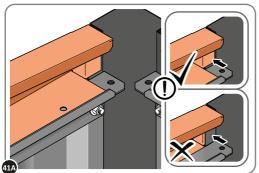


LOCATE ROOF SIDE INFILL 0205-33 AS SHOWN ABOVE.

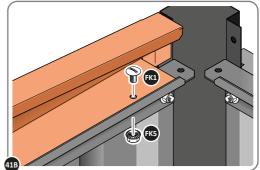


SECURE ROOF SIDE INFILL AT x6 LOCATIONS INDICATED AS SHOWN ABOVE.



SECURE ROOF SIDE INFILLS 0205-32 AND 0205-33.

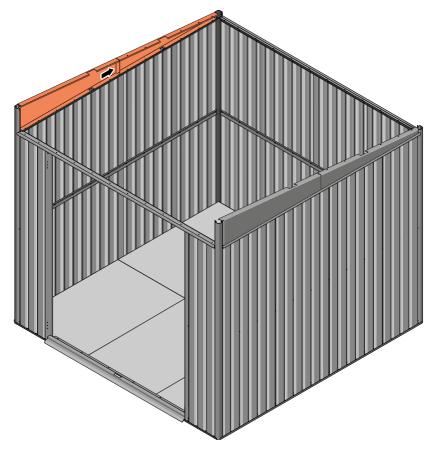


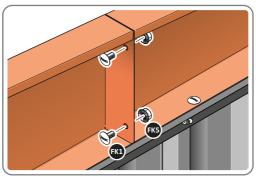


SECURE ROOF SIDE INFILLS 0205-30 AND 0205-31 AT x2 LOCATIONS SHOWN ABOVE.




LOCATE AND SECURE ROOF REAR INFILLS 0213-13

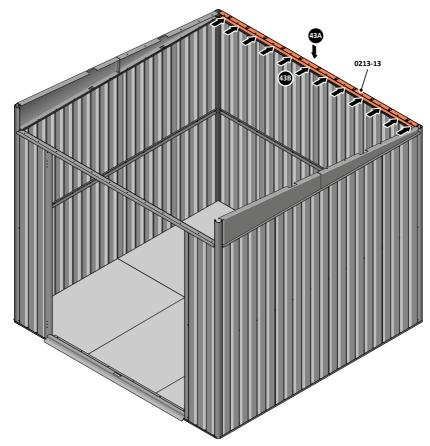

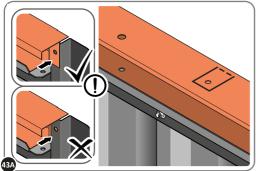


LOCATE ROOF REAR INFILLS 0213-13 AS SHOWN ABOVE.

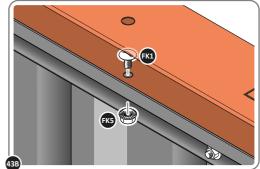


SECURE ROOF REAR INFILL AT x12 LOCATIONS INDICATED AS SHOWN ABOVE.





ROOF FRONT INFILL 0213-14 AND 0213-16 ASSEMBLY.

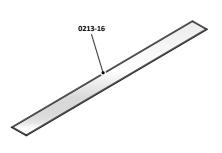

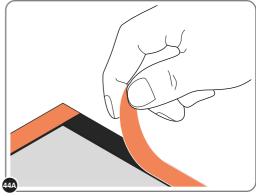


REMOVE BACKING FROM WINDOW PANEL ADHESIVE FOAM TAPE.

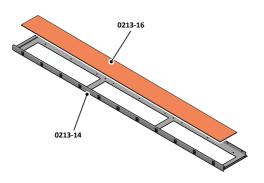

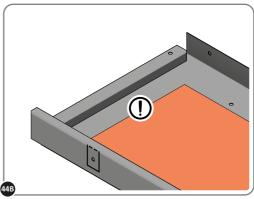

ALIGN WINDOW PANEL CENTRALLY AND STICK ONTO FRONT INFILL. IMPORTANT: ENSURE THE WINDOW PANEL IS CENTRAL.

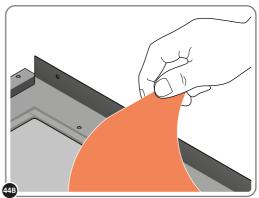



REMOVE PROTECTIVE FILM FROM WINDOW PANEL.




# ASSEMBLY STAGE 44 CONTINUED


ROOF FRONT INFILL 0213-14 ASSEMBLY.

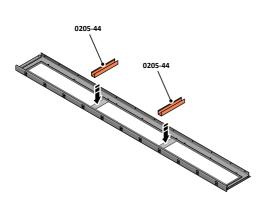

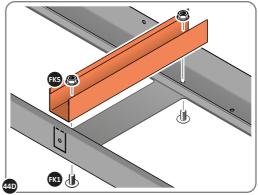



LOCATE AND SECURE WINDOW SUPPORT 0205-44.

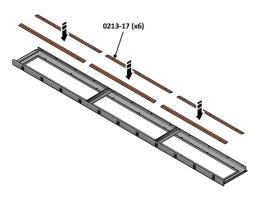

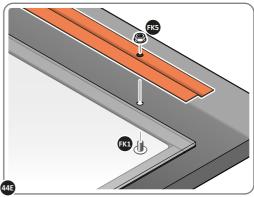



LOCATE AND SECURE x4 WINDOW CLAMP 0213-17 USING FIXING METHOD ABOVE.

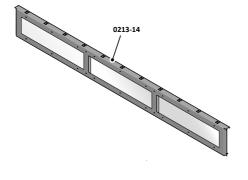

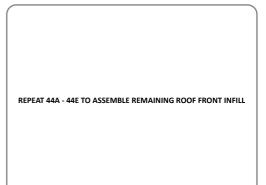




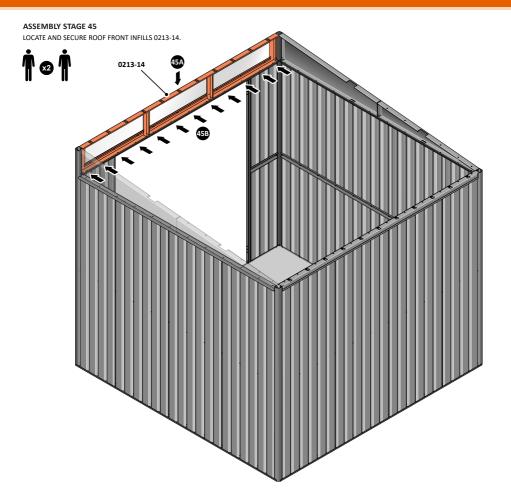

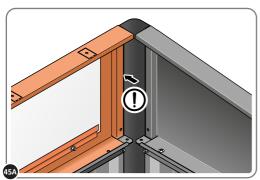


LOCATE ROOF FRONT INFILLS 0213-14 AS SHOWN ABOVE.

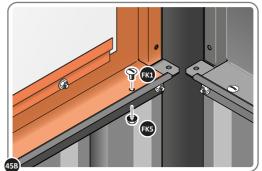



SECURE ROOF FRONT INFILL AT x12 LOCATIONS INDICATED AS SHOWN ABOVE.



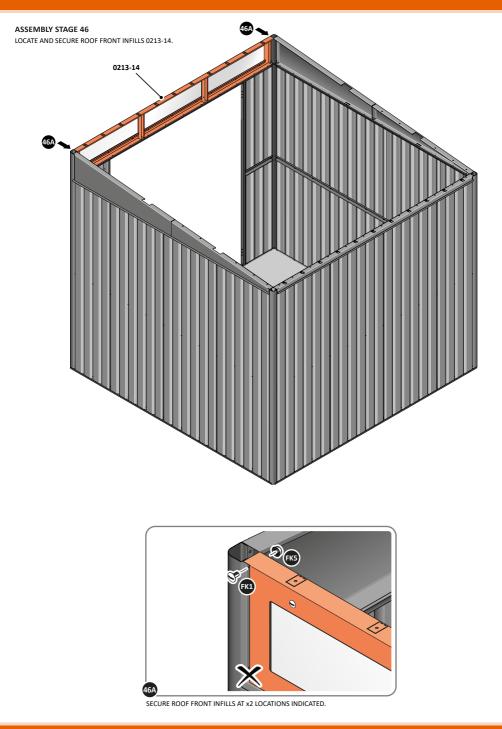




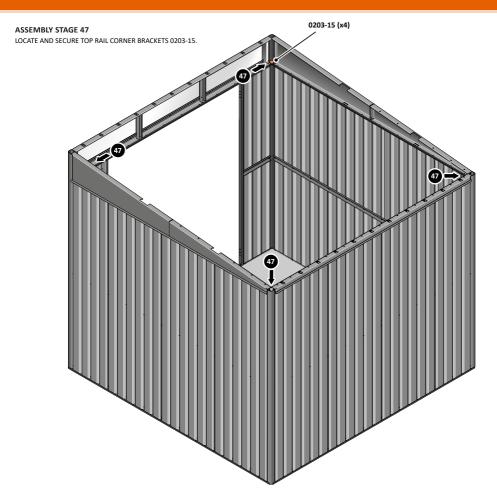

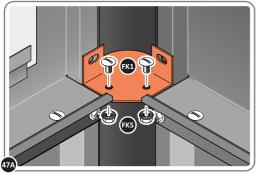


LOCATE AND SECURE TOP RAIL CORNER BRACKETS 0203-15 IN EACH CORNER OF THE SHED USING THE TYPICAL FIXING METHOD SHOWN ABOVE.

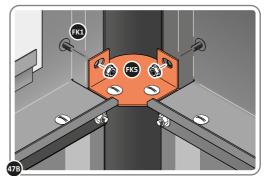


SECURE EACH CORNER BRACKET AND ROOF INFILL AS SHOWN ABOVE.




LOCATE AND SECURE ROOF SUPPORTS 0205-20 AND 0205-21.

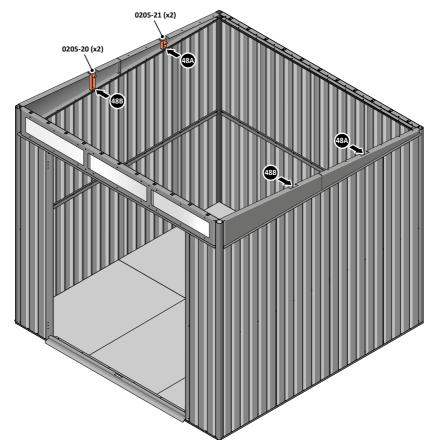

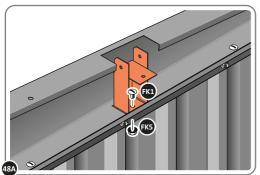


LOCATE AND SECURE SHORT ROOF SUPPORT 0205-21 AS SHOWN ABOVE.

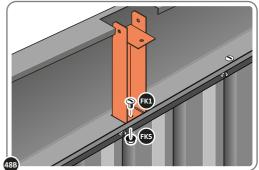


LOCATE AND SECURE LONG ROOF SUPPORT 0205-20 AS SHOWN ABOVE.




LOCATE AND SECURE ROOF CHANNEL ASSEMBLY 0213-06.

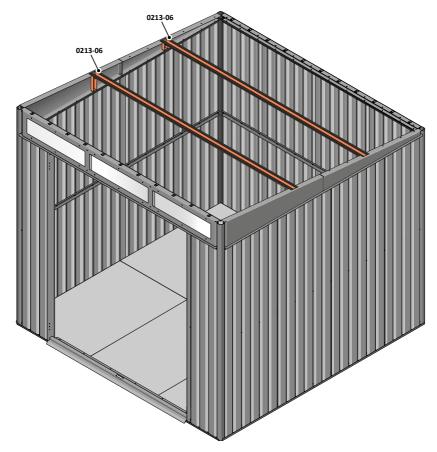

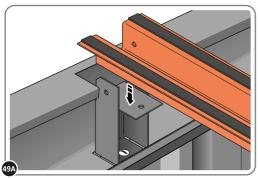


SLOT EACH ROOF CHANNEL ASSEMBLY 0213-06 INTO ROOF SUPPORT.

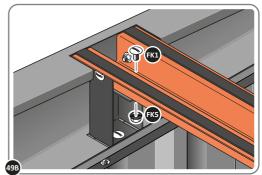


SECURE ROOF CHANNEL ASSEMBLY AT EACH FIXING POINT (x3 EACH SIDE) USING FASTENERS DETAILED ABOVE.




PUSH ROOF REAR AND FRONT INFILL AIR BEND TABS UPWARDS.

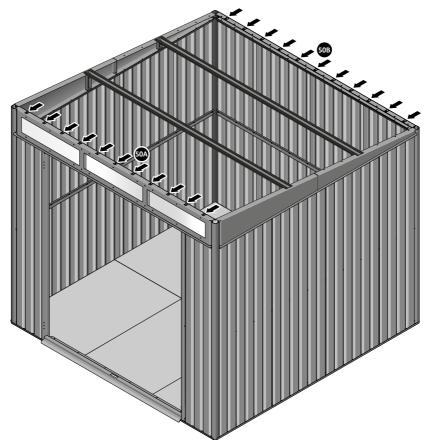

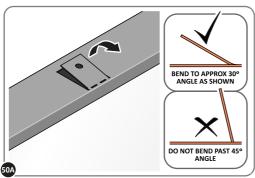


BEND ROOF FRONT INFILL AIR BEND TABS UPWARDS. IMPORTANT: DO NOT BEND PAST 45°.

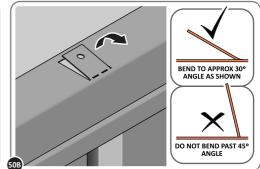


BEND ROOF REAR INFILL AIR BENDS TABS UPWARDS IMPORTANT: DO NOT BEND PAST 45°.




LOCATE AND SECURE ROOF PANEL 0205-23.

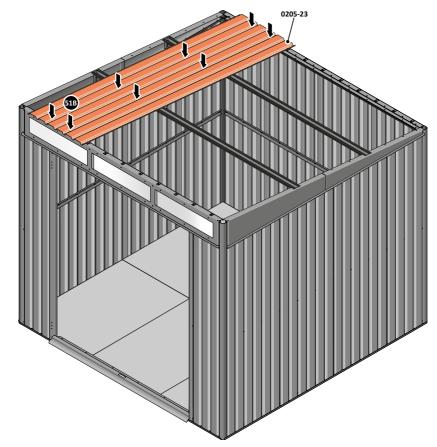

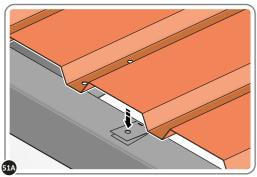


LOCATE A ROOF PANEL SIDE 0205-23 ALIGN WITH AIR BEND TABS AS INDICATED.

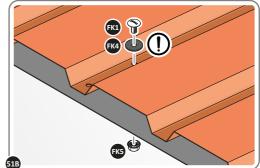


SECURE ROOF PANELS AT x8 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.




LOCATE x1 ROOF PANEL SIDE 0205-25 ONTO LEFT-HAND SIDE OF SHED.

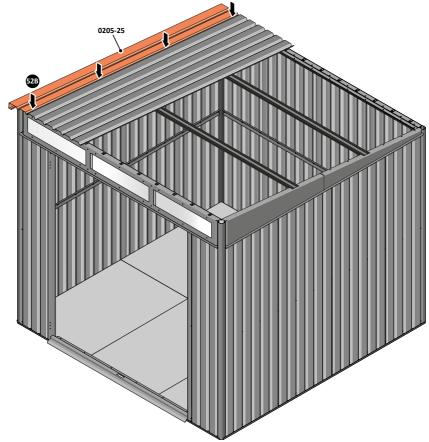

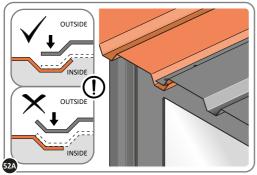


ALIGN AND OVERLAP ROOF PANEL 0205-25 WITH ROOF PANEL SIDE AS SHOWN. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

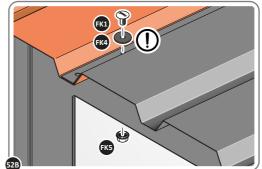


SECURE ROOF PANELS AT x 4 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.




LOCATE AND SECURE ROOF PANELS 0205-23.

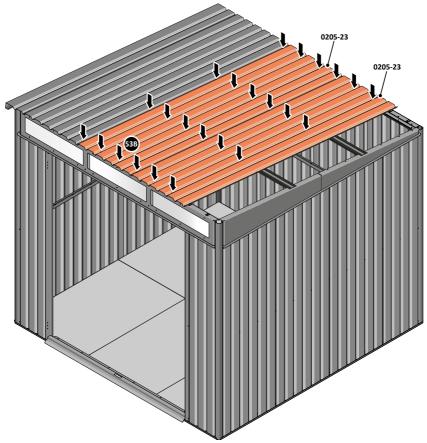

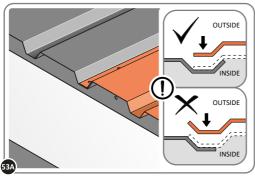


ALIGN AND OVERLAP ROOF PANEL 0205-23 WITH PREVIOUS ROOF PANEL. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

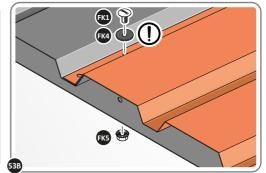

SECURE ROOF PANEL AT x12 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.




LOCATE ROOF PANEL SIDE 0205-25 ONTO RIGHT-HAND SIDE OF SHED.

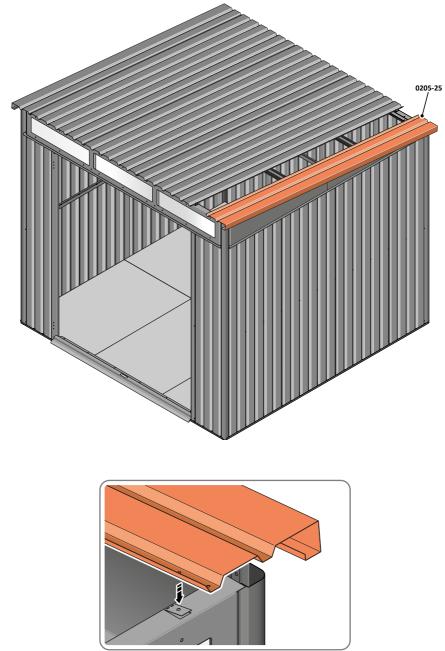


LOCATE A ROOF PANEL SIDE 0205-25 ONTO RIGHT-HAND SIDE OF SHED AND ALIGN WITH AIR BEND TABS AS INDICATED.




LOCATE AND SECURE SMALL ROOF PANEL 0205-24.

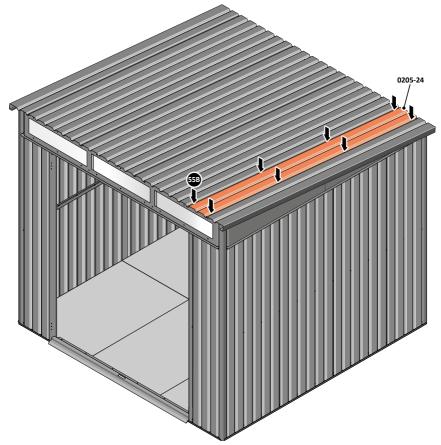

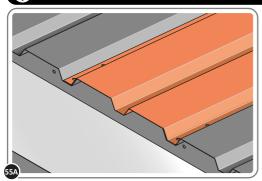

ALIGN AND OVERLAP SMALL ROOF PANEL 0205-24 WITH PREVIOUS ROOF PANEL AND ROOF PANEL SIDE.

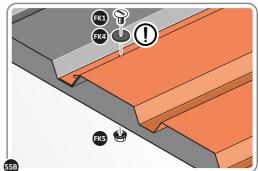


SECURE ROOF PANEL AT x8 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.




I


UPON COMPLETION OF THIS PROCEDURE ENSURE STRUCTURE IS ALIGNED CORRECTLY AND TIGHTEN ALL FASTENERS

LOCATE AND SECURE ROOF CAP 0213-05.

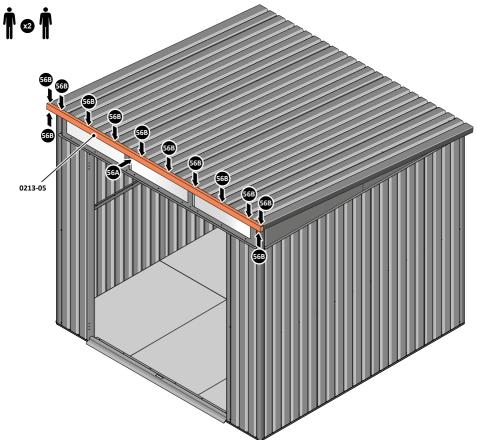

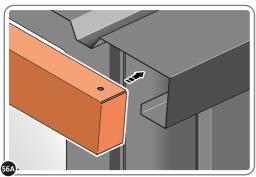


LOCATE ROOF CAP 0213-05 ONTO FRONT OF ROOF.

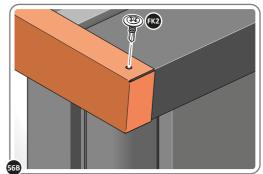


SECURE ROOF CAP AT x12 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.





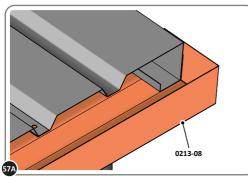


SLIDE ROOF GUTTER 0213-08 INTO POSITION AT THE REAR OF THE SHED ROOF.

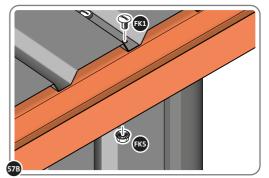


SECURE ROOF GUTTER AT x11 LOCATIONS INDICATED USING TYPICAL FIXING METHOD.




LOCATE AND SECURE REAR ROOF CAP 0213-09.

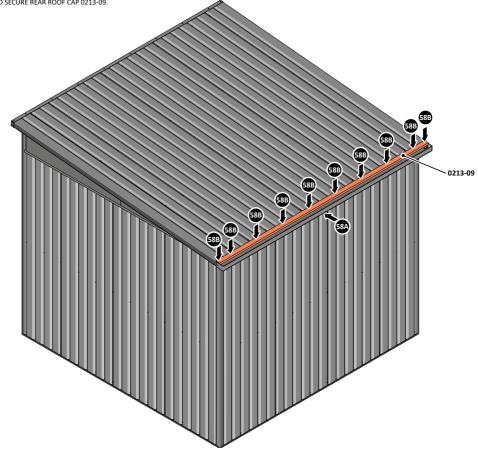

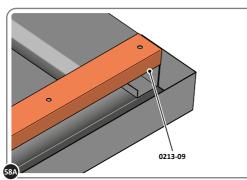


LOCATE REAR ROOF CAP 0213-09 ONTO REAR OF ROOF.

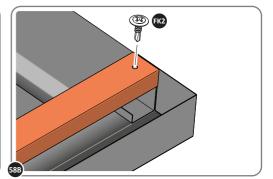


SECURE REAR ROOF CAP AT x10 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.



DETERMINE WHICH SIDE DRAIN PIPE 0205-51 WILL BE LOCATED.

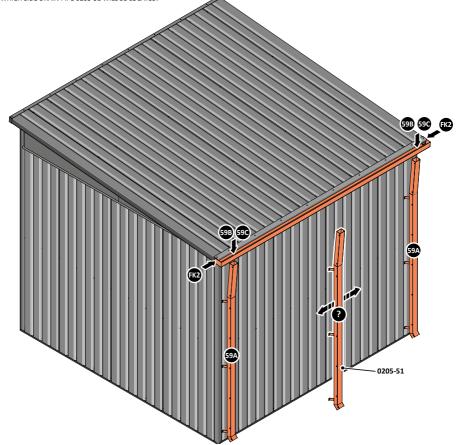


IMPORTANT: THE DRAIN PIPE IS NOT SECURED ONTO THE SHED AT THIS STAGE, SIMPLY DETERMINE BEST LOCATION

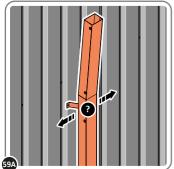

DETERMINE WHICH SIDE THE DRAIN PIPE 0205-51 WILL BE LOCATED.




LOCATE AN OPEN GROMMET INTO THE ROOF GUTTER ABOVE WHERE THE DRAIN PIPE WILL BE LOCATED.

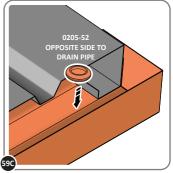

LOCATE A CLOSED GROMMET INTO THE ROOF GUTTER ON THE OPPOSITE SIDE TO THE DRAIN PIPE LOCATION.




Î

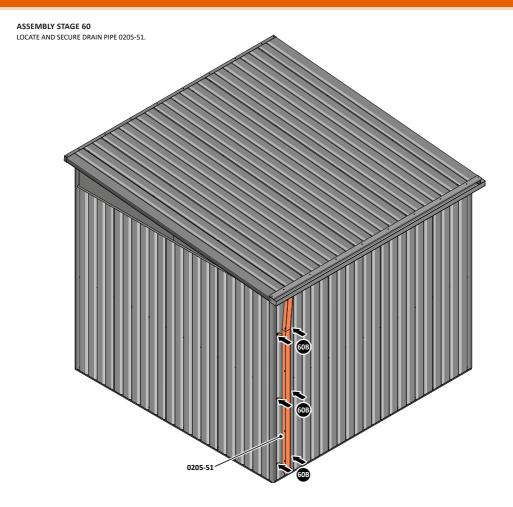




ALIGN DRAIN PIPE 0205-51 WITH OPEN GROMMET WITHIN ROOF GUTTER. IMPORTANT: DRAIN PIPE BRACKET IS LOCATED WITHIN SIDE PANEL RECESS.

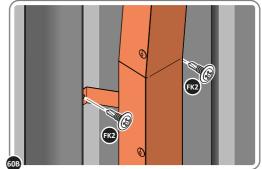


SECURE DRAIN PIPE AT x6 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.




LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-36 FURNITURE.

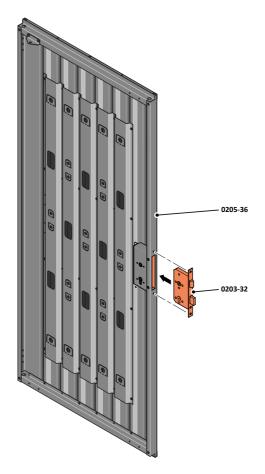

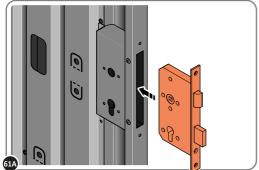

LOCATE EURO MORTICE LOCK 0203-32 RIGHT-HAND DOOR APERTURE AS SHOWN.

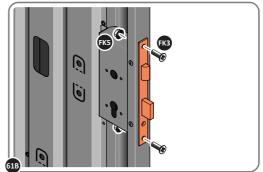


SECURE EURO MORTICE LOCK 0203-32 AT x2 LOCATIONS INDICATED ABOVE. SEE FOLLOWING DATA SHEET FOR COMPLETION OF MORTICE LOCK INSTALLATION




#### ASSEMBLY STAGE 61 CONTINUED


LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-36 FURNITURE.

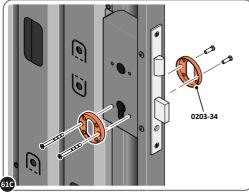


LOCATE AND SECURE EURO ESCUTCHEON 0203-34 AS SHOWN.

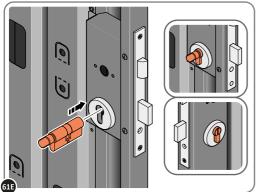


LOCATE EURO CYLINDER 0203-36 INTO DOOR APERTURE. IMPORTANT: ENSURE COVER IS FITTED AS SHOWN.

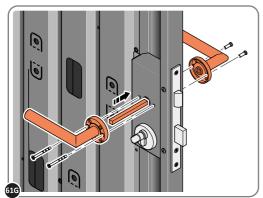


LOCATE AND SECURE DOOR HANDLE ASSEMBLY 0203-33 AS SHOWN.

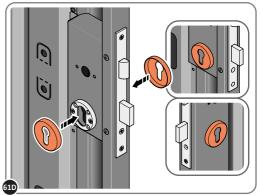

LOCATE EURO ESCUTCHEON COVER 0203-34 ONTO EURO ESCUTCHEON AS SHOWN. PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

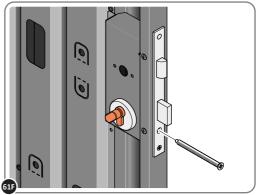


SECURE EURO CYLINDER 0203-36 AS SHOWN ABOVE. PLEASE NOTE: FIXING IS PART OF THE EURO MORTICE LOCK ASSEMBLY.

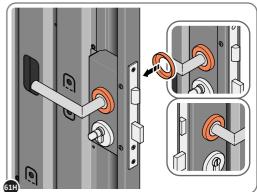


LOCATE COVER ONTO DOOR HANDLE AS SHOWN. PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.




LOCATE AND SECURE LEFT-HAND DOOR ASSEMBLY 0205-37 FURNITURE.

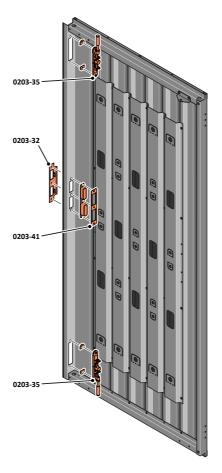

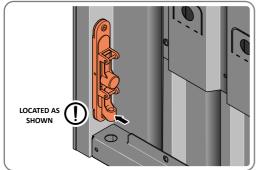

ENSURE THE PLUNGER INDICATED IS FACING THE BOTTOM OF THE DOOR, LOCATE AS SHOWN ABOVE AND SECURE USING ADJACENT FIXING METHOD.

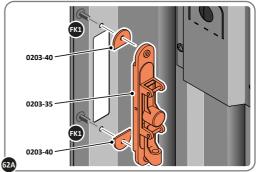



SECURE EACH FLUSH DOOR BOLT ENSURING PLATE PACKER 0203-40 IS LOCATED AS SHOWN ABOVE.



#### ASSEMBLY STAGE 62 CONTINUED

LOCATE AND SECURE LEFT-HAND DOOR ASSEMBLY 0205-37 FURNITURE.

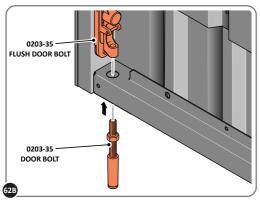


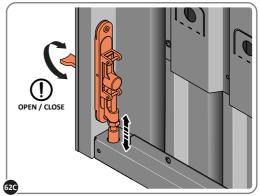


ENSURE FLUSH DOOR BOLT OPENS AND CLOSES.


ATTACH DOOR BOLT ONTO FLUSH DOOR BOLT.

REPEAT 62A / B / C FOR UPPER FLUSH DOOR BOLT LOCATE AND SECURE UPPER FLUSH DOOR BOLT 0203-35 USING PROCEDURES 62A / B / C, PLUNGER WILL FACE UPWARDS TOWARDS THE TOP OF THE DOOR

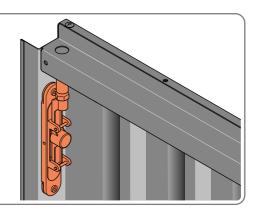

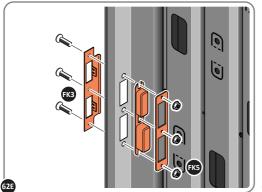

LOCATE AND SECURE EURO MORTICE LOCK 0203-32 AND CATCH PLATE COVER 0203-41 AS SHOWN ABOVE.

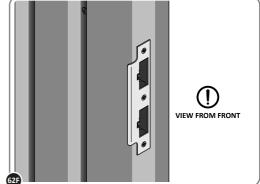



SECURED EURO MORTICE LOCK 0203-32 AS SEEN FROM FRONT.




62D

LOCATE AND SECURE DOOR HINGES ONTO DOOR ASSEMBLIES.

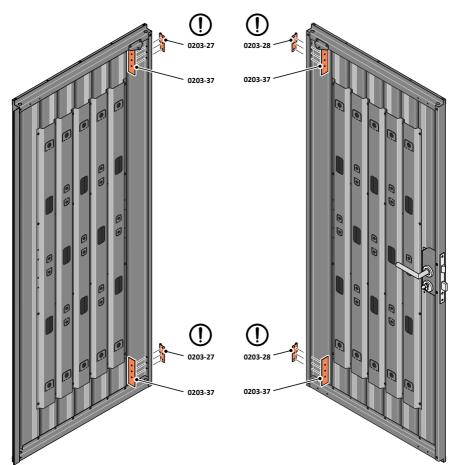

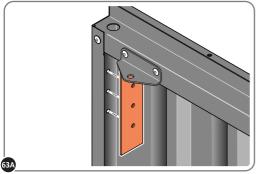


LOCATE DOOR HINGE PLATE 0203-37 WITHIN DOOR AS SHOWN.

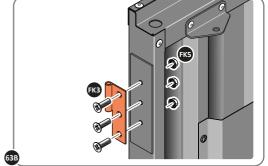


SECURE DOOR HINGE PLATE AND HINGE 0203-27 AND 0203-28 AS SHOWN. IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.




LOCATE AND SECURE DOOR HINGES ONTO LEFT-HAND DOOR POST.

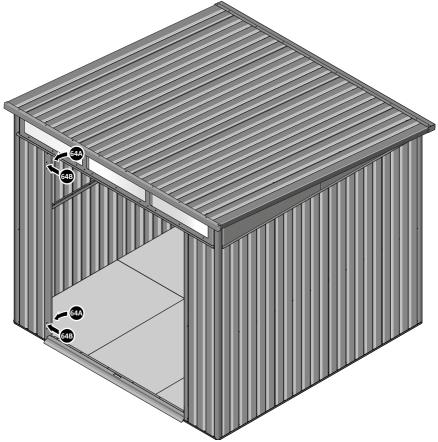

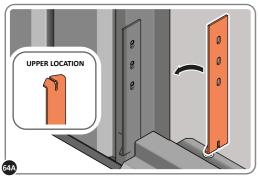


LOCATE DOOR POST PLATE 0203-39 WITHIN DOOR FRAME AS SHOWN. IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.

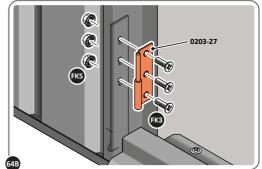


SECURE DOOR POST PLATE AND LEFT-HAND HINGE 0203-27 AS SHOWN. PLEASE NOTE: REPEAT EACH PROCEDURE FOR UPPER LOCATION.




LOCATE AND SECURE DOOR HINGES ONTO RIGHT-HAND DOOR POST.

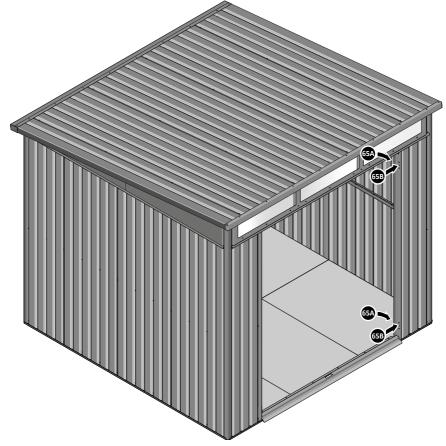

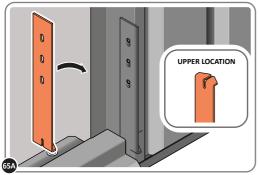


LOCATE DOOR POST PLATE 0203-39 WITHIN DOOR FRAME AS SHOWN. IMPORTANT: SLOT WITH FACE UPWARDS AT UPPER LOCATION.

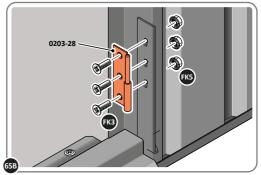


SECURE DOOR POST PLATE AND RIGHT-HAND HINGE 0203-28 AS SHOWN. PLEASE NOTE: REPEAT EACH PROCEDURE FOR UPPER LOCATION.




LOCATE AND SECURE GAS STRUT BRACKETS 0205-66.

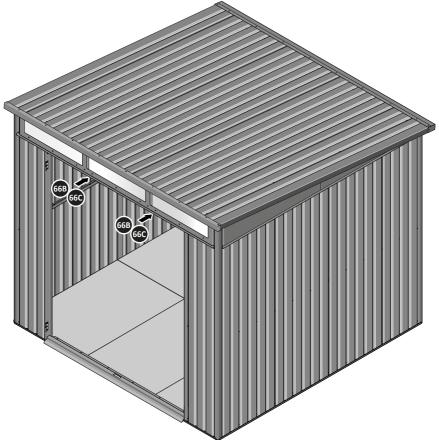


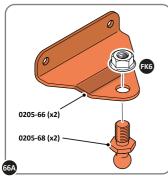

SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET 0205-66.

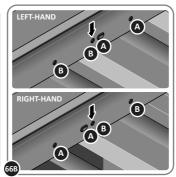


DETERMINE DOOR OPENING ANGLE: A: 90° OPENING OR B: 120° OPENING

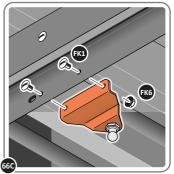

ALIGN EACH GAS STRUT BRACKET WITH RELEVANT FIXING HOLES, SECURE USING TYPICAL FIXING METHOD ABOVE.

LOCATE DOOR ASSEMBLIES ONTO HINGES.

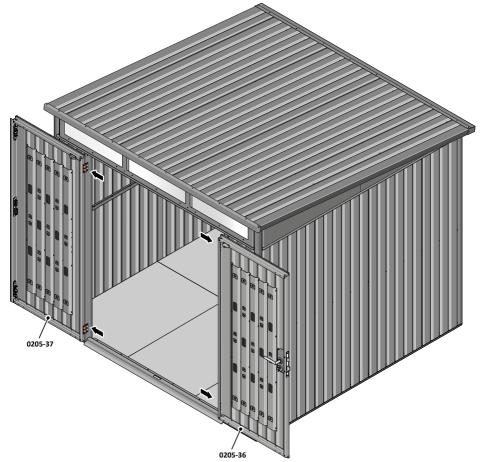




SLIDE EACH DOOR ASSEMBLY ONTO EACH OF THEIR RESPECTIVE HINGES.




ASSEMBLED DOOR HINGE.




LOCATE AND SECURE GAS STRUT 0205-63 .

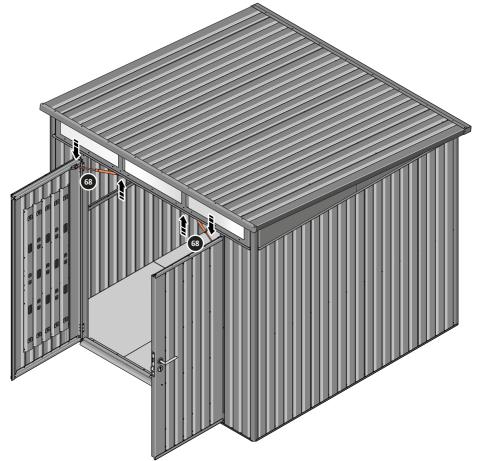

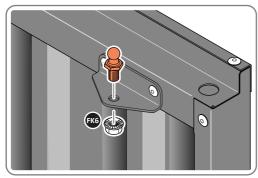


SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET THAT IS PRE-RIVETED ONTO EACH DOOR ASSEMBLY.

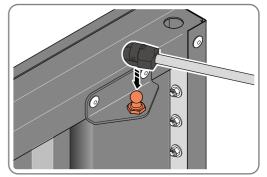

FIX EACH GAS STRUT ONTO RELEVANT GAS STRUT BALL JOINTS. PLEASE NOTE: PUSHES DOWN ON DOOR AND UPWARDS ON DOOR FRAME.




LOCATE AND SECURE SHELF ASSEMBLY 0205-38.

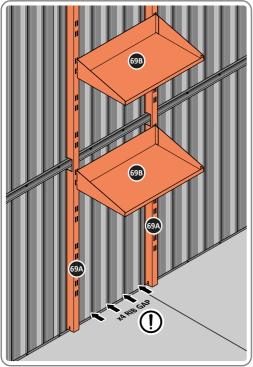


THE SHELF ASSEMBLY CAN BE LOCATED AS DESIRED, PLEASE DETERMINE THE MOST SUITABLE LOCATION AND ASSEMBLE AS SHOWN IN FIG.69A & 69B.

#### ASSEMBLY STAGE 70


LOCATE TOOL HANGERS 0205-39 WITHIN SHED AS DESIRED LOCATION.

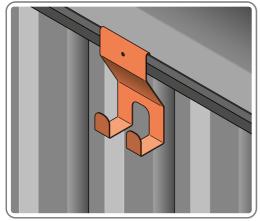

HOOK EACH TOOL HANGER 0205-39 ONTO ROOF FRAME AT DESIRED LOCATION.

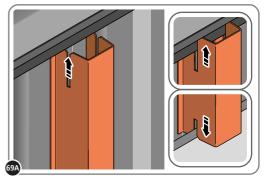

SLIDE SHELF POST UP INTO ROOF FRAME, ONCE THERE IS ENOUGH CLEARANCE AT THE BOTTOM LOCATE SHELF POST OVER FLOOR FRAME AND LOWER.

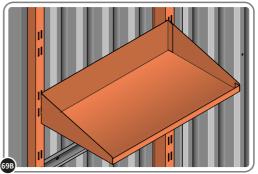

LOCATE EACH SHELF 0205-38-02 ONTO SHELF POST AS DESIRED. PLEASE NOTE: THE SHELF SIMPLY HOOKS ONTO THE POST.





# Caring for your HEX Living product

Your HEX Living product is designed to stand the test of time, which is why we're happy to offer a lifetime warranty on our products. With zero maintenance required, simply assemble your HEX Living product, and enjoy putting it to great use in your garden.

Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:

- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will ensure dirt or mud simply wipes away.
- If you've purchased a HEX Living metal storage solution, periodically clear the roof of fallen leaves.
- If your product has guttering, remove leaves and garden debris as you would on your home.

# Ensure you have registered your HEX Living product

Using the unique serial number found on the cover of this document, please visit **www.hexliving.co.uk** to register your product and access the HEX Living lifetime warranty and video instructions.





