


# **Large Metal Storage Shed**

**Drainpipe Kit Assembly Guide**

# Assembly Guide

**DRAINPIPE KIT**  
0205-GREY-DP  
0224-GREEN-DP

Part Ref: 0205-51  
Qty: x1

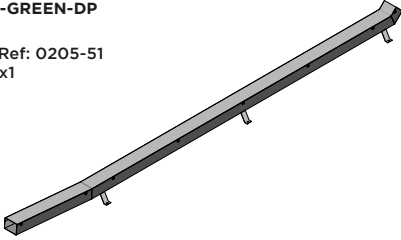

**FIXING KIT: 0205-72**

Part Ref: FK2  
No.8 x 13mm Eco Fix  
Qty: x7



## TOOLS NEEDED



DRILL WITH  
PHILLIPS HEAD  
BIT.



MARKER.

## SINGLE PERSON ASSEMBLY

MOST PROCEDURES WILL NOT REQUIRE TWO PEOPLE BUT IT MAY BE EASIER TO HAVE ASSISTANCE.



## PERSONAL PROTECTION EQUIPMENT



WE ADVISE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT IS WORN DURING ASSEMBLY INCLUDING EYE PROTECTION AND GLOVES.



**IMPORTANT: DETERMINE BEST LOCATION FOR DRAINPIPE. IF GROMMETS 0205-52 & 0205-53 HAVE ALREADY BEEN FITTED, PLEASE IGNORE ASSEMBLY STAGE 1 AND MOVE ONTO STAGE 2 INSTRUCTIONS.**


## ASSEMBLY STAGE 1

DETERMINE WHICH SIDE DRAINPIPE 0205-51 WILL BE LOCATED.  
LOCATE GROMMETS 0205-52 & 0205-53.

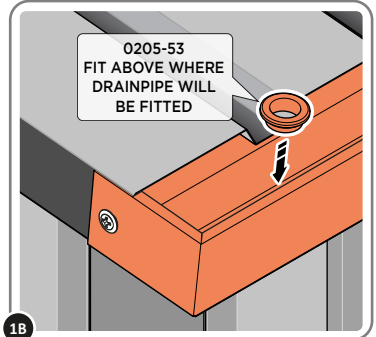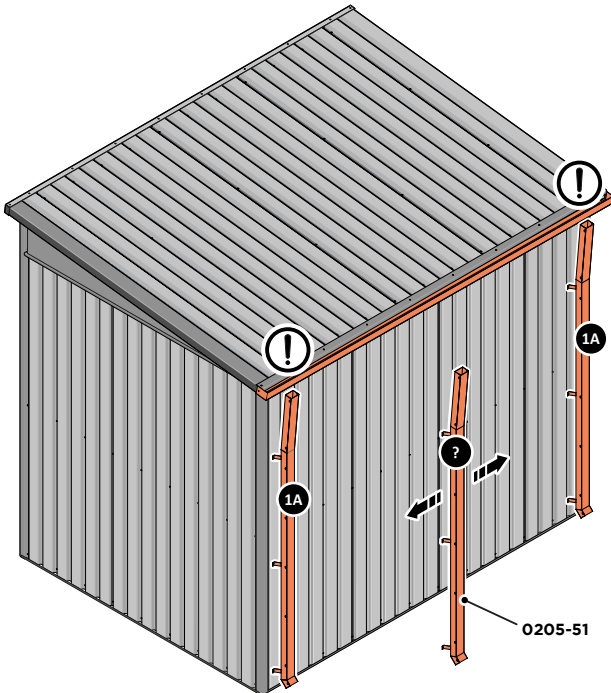

1B

LOCATE AN OPEN GROMMET INTO THE ROOF GUTTER ABOVE WHERE THE DRAINPIPE WILL BE LOCATED.

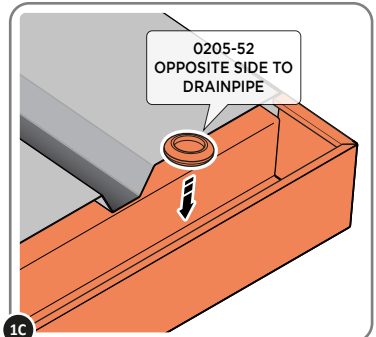



1C

LOCATE A CLOSED GROMMET INTO THE ROOF GUTTER ON THE OPPOSITE SIDE TO THE DRAINPIPE LOCATION.


# Assembly Guide

## ASSEMBLY STAGE 2

LOCATE AND SECURE DRAINPIPE 0205-51 USING FIXING KIT 0205-72

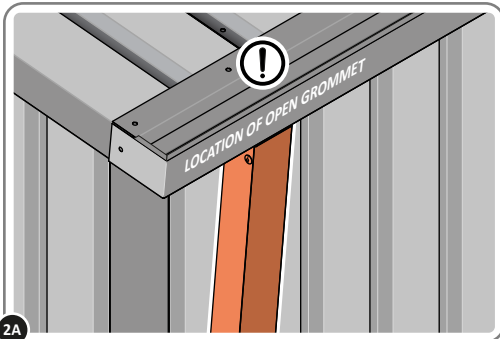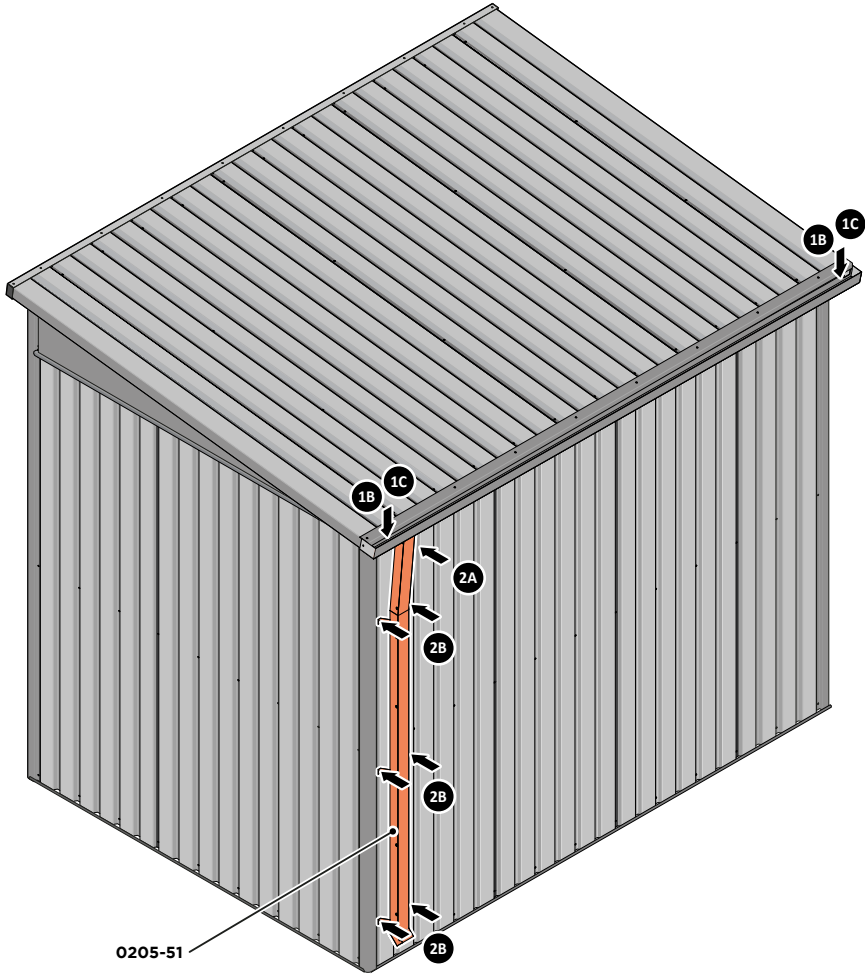

ALIGN DRAINPIPE 0205-51 WITH OPEN GROMMET WITHIN ROOF GUTTER. **IMPORTANT:** DRAINPIPE BRACKET IS LOCATED WITHIN SIDE PANEL RECESS.

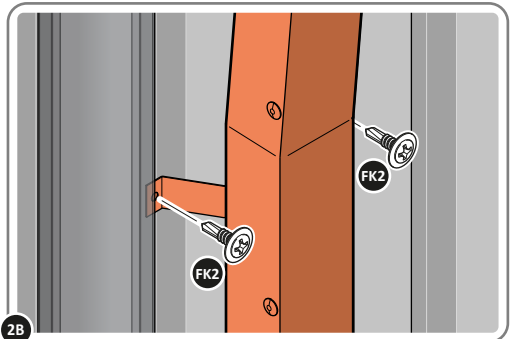

SECURE DRAINPIPE AT x6 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. **PLEASE NOTE:** THE FIXING USED IS A SELF DRILLING COMPONENT.

## **Ensure you have registered your product**

If you require any assistance  
our telephone lines are open:

Mon - Fri, 8am - 5pm

**+44 (0) 1889 272 056**