

10 x 6 Large Metal Storage Shed

Flooring Kit Assembly Guide

Contents

| | |
|---|---|
| Part List | 3 |
| Assembly Stage One and Two - Floor Brace Installation | 4 |
| Assembly Stage Three - Pent Shed Floor Installation | 5 |
| Assembly Stage Three - Apex Shed Floor Installation | 6 |
| Securing Flooring to Base Cut-out Template for Fitting Screws | 7 |

SINGLE PERSON ASSEMBLY

MOST PROCEDURES WILL NOT REQUIRE TWO PEOPLE BUT IT MAY BE EASIER TO HAVE ASSISTANCE.



PERSONAL PROTECTION EQUIPMENT

WE ADVISE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT IS WORN DURING ASSEMBLY INCLUDING EYE PROTECTION AND GLOVES.



Eye Protection




Gloves

ASSEMBLY GUIDE - 10 X 6


PARTS LIST

WOOD FLOOR KIT 0212-BLACK-FW


Part Ref: 0213-28
Qty: x1




Part Ref: 0205-82
Qty: x1

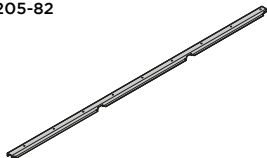


Part Ref: 0212-25
Qty: x4

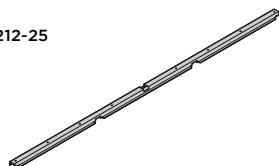


Part Ref: 0215-23
Qty: x2

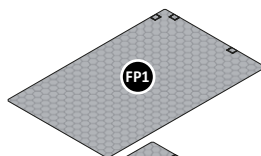

Part Ref: 0212-23
Qty: x6

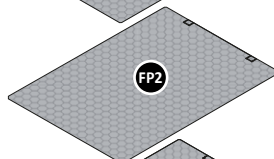

Part Ref: 0212-24
Qty: x2

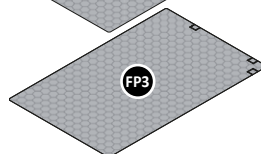

FLOOR FIXING KIT 0205-92

Part Ref: 0205-70
Self Drilling Screw
Qty: x60




ALUMINIUM FLOOR KIT 0212-BLACK-FA


Part Ref: 0213-28
Qty: x1




Part Ref: 0205-82
Qty: x1

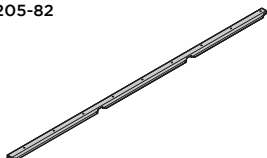


Part Ref: 0212-25
Qty: x4

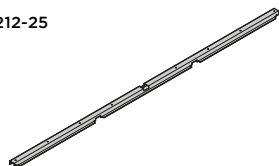

Part Ref: 0215-25
Qty: x2

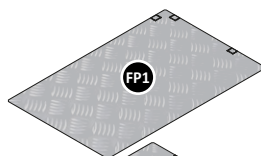

Part Ref: 0212-26
Qty: x6

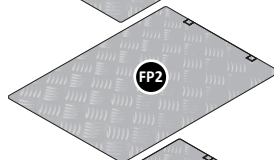

Part Ref: 0212-27
Qty: x2



FLOOR FIXING KIT 0205-95


Part Ref: 313-0009Z
No.8 Eco Fix
Qty: x60



ASSEMBLY GUIDE - 10 X 6 FLOOR BRACE INSTALLATION



ASSEMBLY STAGE 1

LOCATE AND SECURE FLOOR BRACES 0212-25
AT EACH LOCATION INDICATED.

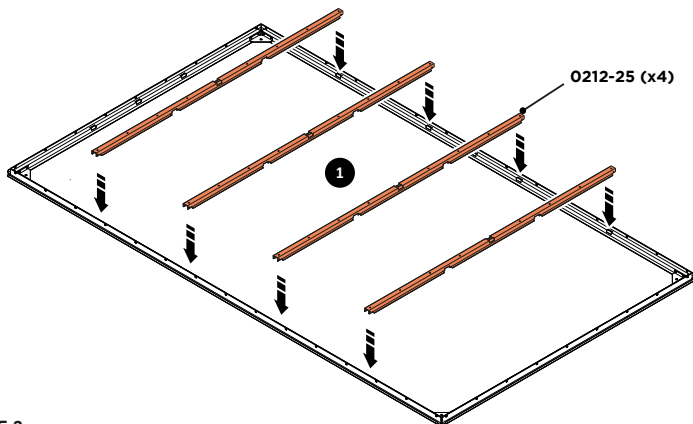


ASSEMBLY STAGE 2

LOCATE AND SECURE FLOOR BRACES 0205-82 AND 0213-28
AT EACH LOCATION INDICATED.

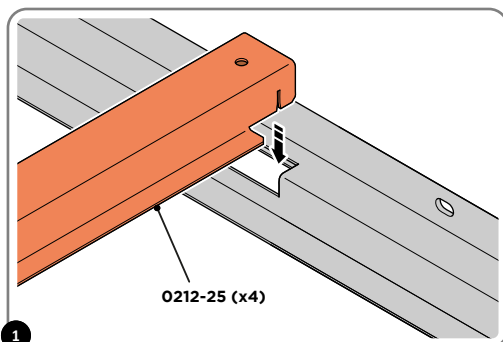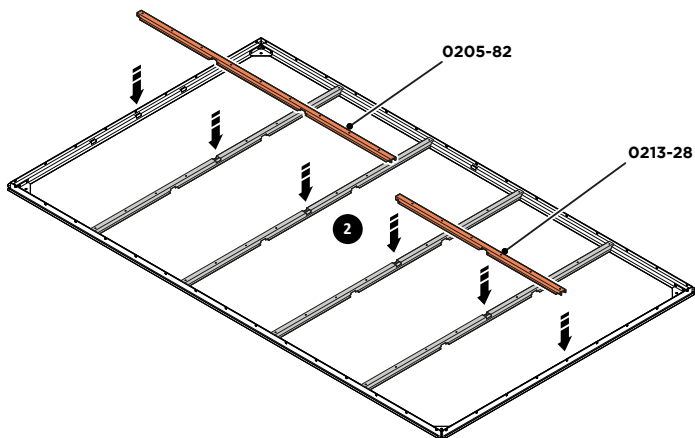

SLOT EACH FLOOR BRACE 0212-25 INTO POSITION AS SHOWN ABOVE.

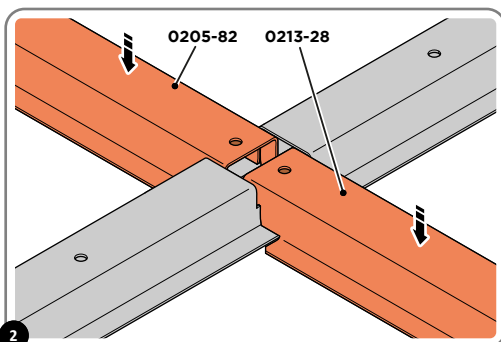

SLOT EACH FLOOR BRACE 0205-82 AND 0213-28 INTO POSITION.
PLEASE NOTE: ENSURE TOP OF FLOOR BRACE IS LEVEL WITH TOP OF FLOOR RAIL, AS SHOWN ABOVE.

ASSEMBLY GUIDE - 10 X 6 PENT SHED FLOOR INSTALLATION

ASSEMBLY STAGE 3




LOCATE ALL FLOOR PANELS AND SLOT INTO FLOOR BASE FRAME, TWO PANELS WILL REQUIRE CUT-OUT REMOVAL.
IMPORTANT: ENSURE THE PATTERN FLOORING IS FACE UPWARDS.


TOOL NEEDED




HACKSAW

PANELS REQUIRED


| | | |
|---|---|--|
|  |  |  |
| X2 | X6 | X2 |

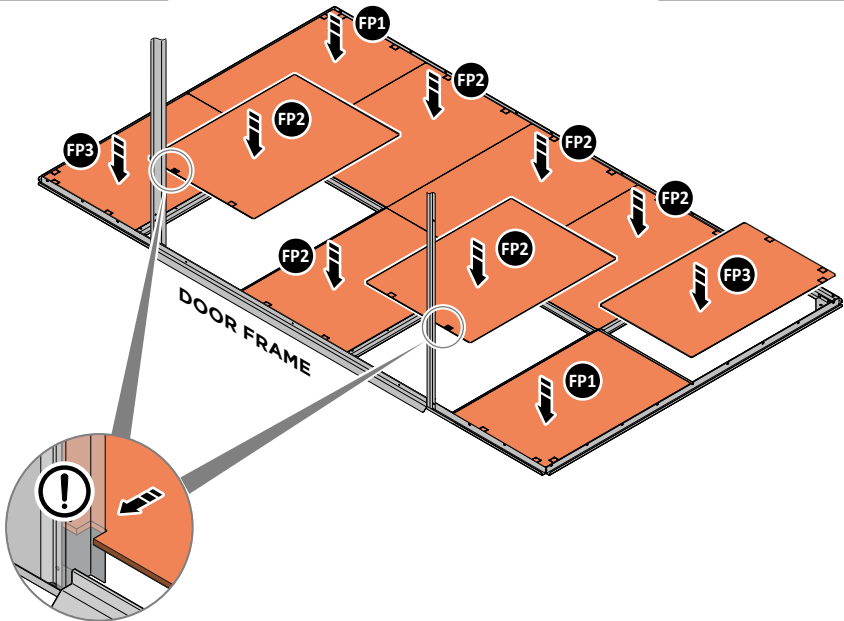

PANELS WILL REQUIRE
REMOVAL OF CUT-OUT,
CAREFULLY USING
A HACKSAW

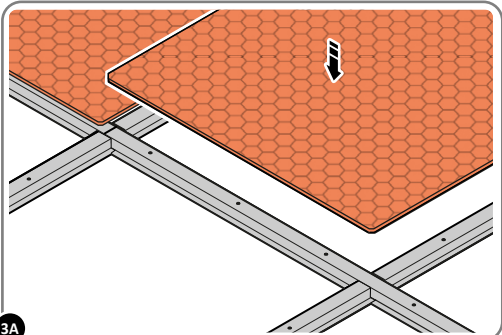

3A
SLOT EACH FLOOR PANEL INTO THE FLOOR FRAME, LEAVING AN
EQUAL SPACE BETWEEN EACH PANEL. AS SHOWN ABOVE.
IMPORTANT: ENSURE FLOORING PATTERN IS FACING UPWARDS.

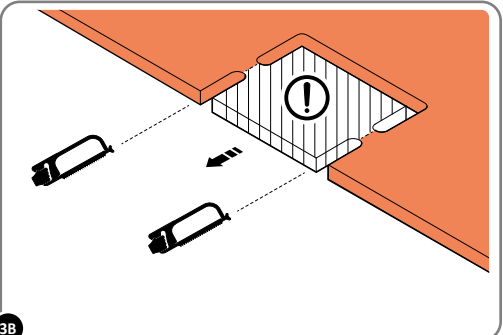

3B
LOCATE FLOOR PANELS FP2 (x2).
NOTE: REMOVE CUT-OUT ON OUTER SIDE, AND SLOT INTO DOOR
FRAME. DESIGNED FOR EASY REMOVAL USING A HACKSAW.

ASSEMBLY GUIDE - 10 X 6 APEX SHED FLOOR INSTALLATION

ASSEMBLY STAGE 3 CONTINUED


LOCATE ALL FLOOR PANELS AND SLOT INTO FLOOR BASE FRAME. TWO PANELS WILL REQUIRE CUT-OUT REMOVAL.
IMPORTANT: ENSURE THE PATTERN FLOORING IS FACE UPWARDS.


TOOL NEEDED




HACKSAW

PANELS REQUIRED



FP1
X2


FP2
X6



FP3
X2



PANELS WILL REQUIRE
REMOVAL OF CUT-OUT,
CAREFULLY USING
A HACKSAW

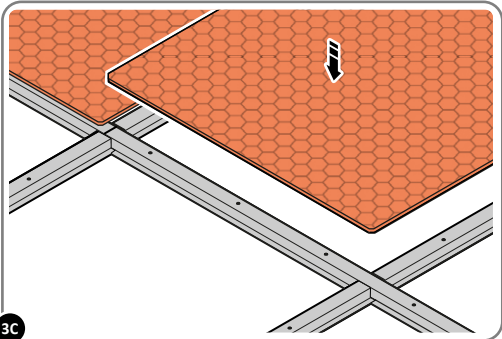

3C SLOT EACH FLOOR PANEL INTO THE FLOOR FRAME, LEAVING AN EQUAL SPACE BETWEEN EACH PANEL. AS SHOWN ABOVE.
IMPORTANT: ENSURE FLOORING PATTERN IS FACING UPWARDS.

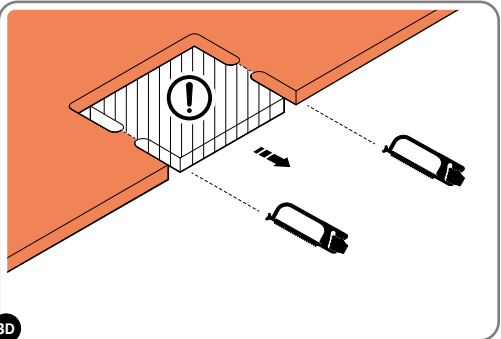



3D LOCATE FLOOR PANELS FP2 (x1) AND FP3 (x1).
NOTE: REMOVE CUT-OUT ON OUTER SIDE, AND SLOT INTO DOOR FRAME. DESIGNED FOR EASY REMOVAL USING A HACKSAW.

ASSEMBLY GUIDE - 10 X 6 SECURING FLOORING TO BASE

ASSEMBLY STAGE 4

LOCATE AND SECURE FLOOR PANELS TO SHED BASE

TOOLS NEEDED





ELECTRIC
DRILL WITH
PHILLIPS HEAD
BIT

MARKER

PERSONAL PROTECTION EQUIPMENT


WE ADVISE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT IS WORN DURING ASSEMBLY INCLUDING EYE PROTECTION AND GLOVES.



Eye Protection


Gloves

TYPICAL TEN PIECE FLOORING WITH SUGGESTED SCREW LOCATIONS (40), MEASUREMENTS IN (MM)

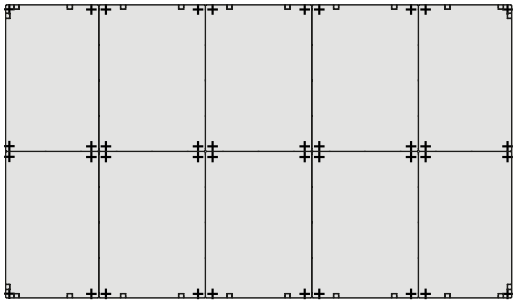

ASSEMBLY STAGE 4A


MARK OUT FIXING SCREWS LOCATIONS

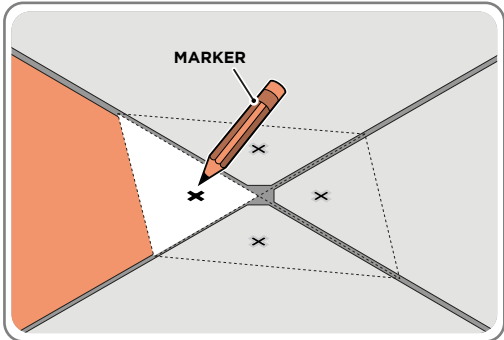

USE TEMPLATE BELOW TO MARK OUT SUGGESTED LOCATIONS FOR SECURING FLOOR TO BASE. (7 MM).

ASSEMBLY STAGE 4B


LOCATE FIXING SCREW AND DRILL TO FLOOR

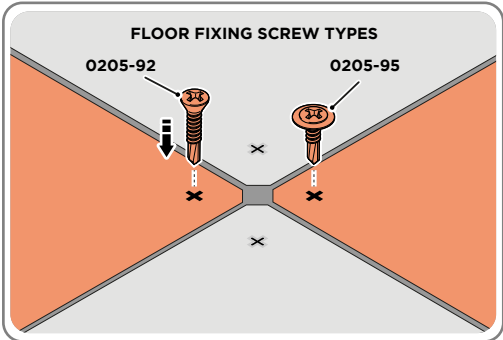

USE DRILL TO SECURE FIXING SCREW TO EACH FLOOR PANEL MARKED.

CUT-OUT TEMPLATE GUIDE FOR FIXING SCREWS

SHOWING SUGGESTED LOCATION HOLES FOR FIXING SCREWS, FOR DRILLING INTO FLOORING AND BASE.

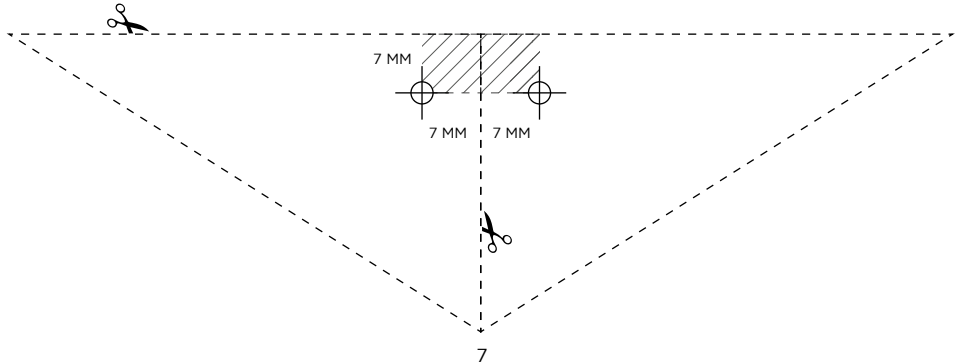

Ensure you have registered your product

If you require any assistance
our telephone lines are open:

Mon – Fri, 8am – 5pm

+44 (0) 1889 272 056