Hixon



Large Metal Storage Shed Assembly Guide

10 x 8 ft (3 x 2.4 m)



IMPORTANT: PLEASE REGISTER YOUR HEX LIVING PRODUCT AFTER ASSEMBLY

Using the unique serial number, simply register your product at www.hexliving.co.uk or use the QR code above to access the HEX Living lifetime warranty and online support.

> Affix Serial Number HERE





PLEASE READ THIS DOCUMENT FULLY PRIOR TO STARTING ASSEMBLY PROCEDURE

The objective of this instruction is to illustrate the recommended assembly sequence for this product, any deviation from this will be the sole responsibility of whoever carries out the assembly.

IMPORTANT: IT IS ADVISABLE THAT THE PRODUCT IS ASSEMBLED AT, OR AS CLOSE AS POSSIBLE TO WHERE IT WILL BE FINALLY LOCATED

Ensure there is adequate clearance where the product is to be located:

Exterior dimensions including overhang (W x D x H) 3000 x 2440 x 2134mm

Footprint dimensions (W x D) 2900 x 2300mm

Doors open outwards 1454 x 1819mm Clearance required for door to open (W x H)

TWO PERSON ASSEMBLY

Most procedures will not require two people but it may be easier to have assistance



PERSONAL PROTECTION EQUIPMENT

We advise appropriate personal protective equipment is worn during assembly including eye protection and gloves.





CARING FOR YOUR HEX LIVING PRODUCT

Your HEX Living product is designed to stand the test of time, which is why we're happy to offer a lifetime warranty on our products. With zero maintenance required, simply assemble your HEX Living product and enjoy putting it to great use in your

- Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:
- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will ensure dirt or mud simply
- If your product has guttering, remove leaves and garden debris as you would on your home.

WARNINGS AND ADVISORIES

Do not try to install the shed alone. If the shed falls, it could cause serious injuries and damages! Select a dry and calm day for your assembly, do not try to install this product in windy conditions!

Please read the manual carefully before assembling, (we recommend keeping the manual for future use).

We advise a flat hard floor surface, preparing suitable area for assembly.

- Place all parts out carefully, ideally on a soft surface to protect parts from getting damaged.
- Please check part quantities before assembling, contact customer service if any parts are missing or damaged.

PRODUCT REGISTRATION

IMPORTANT: Thank you for purchasing our Hixon Shed, ensure you have registered your HEX Living product using the unique serial number found on the cover of this document, please visit www.hexliving.co.uk to register your product and access the HEX Living lifetime warranty.

GROUND ANCHOR KIT

A Ground Anchor Kit is supplied, this is to secure the product to a solid concrete base, the shed has x4 clamp plates in each corner.




We strongly adviseThat the Shed is anchored using this kit.

The diagram illustrates the typical fixing method, once the shed is assembled, access the clamp brackets by removing the appropriate floor panel and secure as required.

GROUND ANCHOR KIT 0205-56

Part Ref: FK8 M8 x 50mm Coach Screw Qty: x8


Part Ref: FK7 Expansion Plug Qty: x8

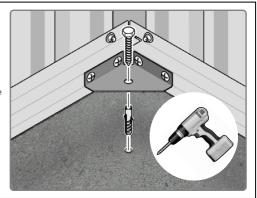



Assembly Guide


ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE


SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

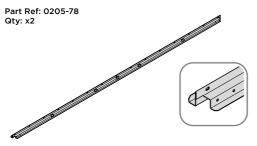


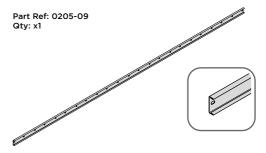


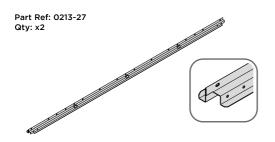


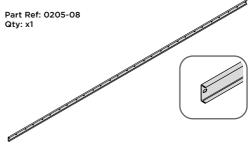


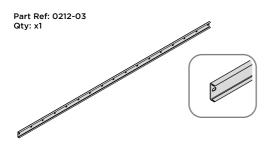

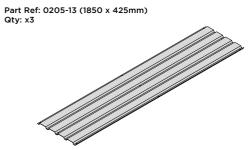

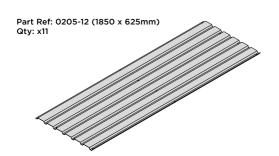

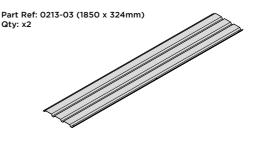

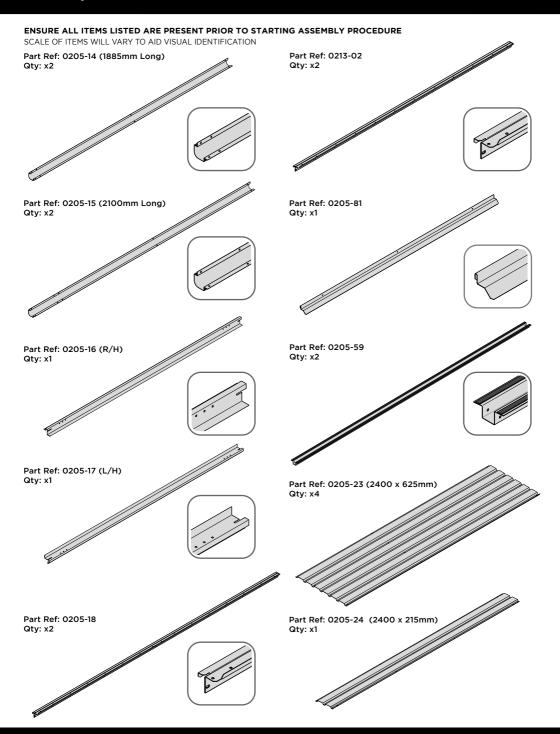


Qty: x1

ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION Part Ref: 0205-25 Part Ref: 0205-32 Qty: x2 Qty: x1 Part Ref: 0205-33 Qty: x1 Part Ref: 0205-26 Qty: x1 Part Ref: 0205-50 Qty: x1 Part Ref: 0205-27 Qty: x1 Part Ref: 0205-34 Qty: x1 Part Ref: 0205-30 Qty: x1 Part Ref: 0205-31

ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE

SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

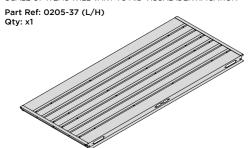

Part Ref: 0205-85



Part Ref: 0213-31 Qty: x2



Part Ref: 0205-44 Qty: x2



SHELF & RAIL KIT 0205-BLACK-SRH



Part Ref: 0205-38-02

Qty: x2



Part Ref: 0205-97 (R/H) Qty: x1


Part Ref: 0205-20 Qty: x2



Part Ref: 0205-21 Qty: x2



Part Ref: 0205-69

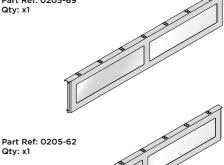



TOOL HANGER KIT 0205-BLACK-TH

Part Ref: 0205-39 Qty: x2



ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING OF ASSEMBLY PROCEDURE

SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

Part Ref: 0203-03

Qty: x4



Part Ref: 0203-41 Qty: x1



Part Ref: 0203-15

Qtv: x4

Part Ref: 0205-57

Qty: x4

Qty: x2

Part Ref: 0205-63

Part Ref: 0205-66

Qty: x2



Qty: x2

Part Ref: 0205-68 Qty: x4



Part Ref: 0203-32 (Assembly)

Qty: x1

Part Ref: 0205-52 Qty: x1

Part Ref: 0205-53

FIXING KIT 0205-58 Part Ref: FK1

M4 x 10mm Roofing Bolt

This will be Pozi OR Slotted

Qtv: x1



Part Ref: 0203-33 (Assembly)

Qty: x1



Qty: x413 Part Ref: FK2



No.8 x 13mm Eco Fix Qty: x30

Part Ref: FK3

M4 x 12mm C'Sunk Pozi Pan

Qty: x35

Part Ref: FK4

M4 Rubber Washer Qty: x80



Part Ref: FK5

M4 Serrated Flange Nut Qty: x439



Part Ref: FK6

M8 Serrated Flange Nut

Qty: x5



Qty: x4



Part Ref: FK7 **Expansion Plug**

Qty: x8



Part Ref: 0203-57


Qty: x4

Qty: x4


Part Ref: FK8


M8 x 50mm Coach Screw Qty: x8



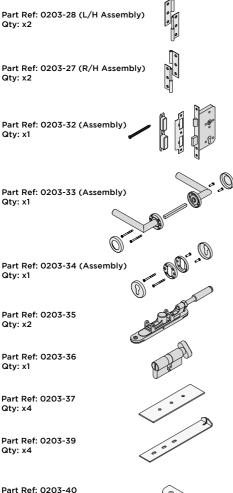


LOCATE AND SECURE A CORNER BRACE 0203-03 AT EACH LOCATION INDICATED.

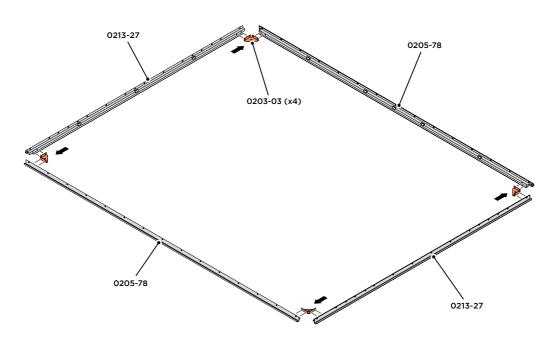

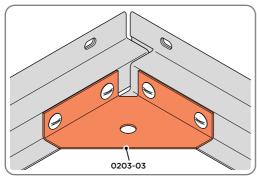

SECURE EACH CORNER BRACE 0203-03 AS SHOWN ABOVE.

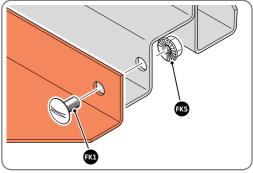



PLEASE NOTE: SECTION VIEW OF TYPICAL FIXING METHOD.

Assembly Guide


ASSEMBLY STAGE 2

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

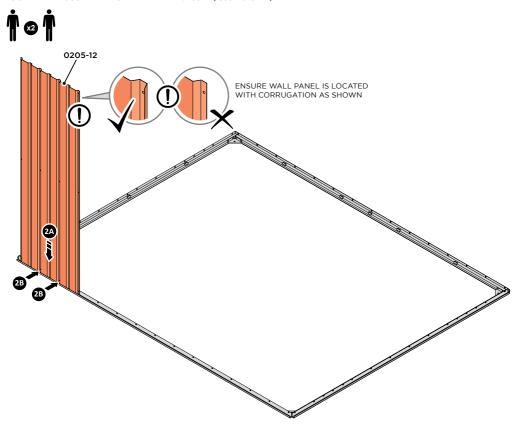


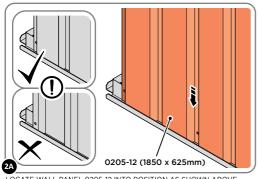


LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

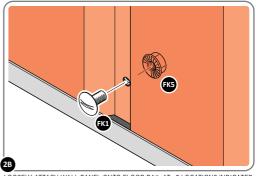


LOOSELY ATTACH WALL PANEL ONTO FLOOR RAIL AT x2 LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINTS AT THIS STAGE.

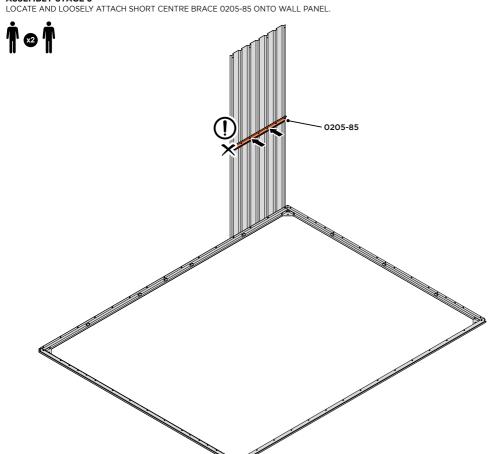

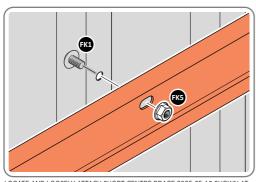

LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0205-85 AS SHOWN AT ${\bf x2}$ LOCATIONS INDICATED ABOVE.

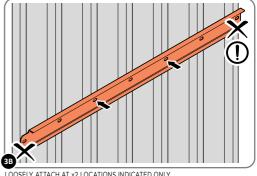



LOOSELY ATTACH AT x2 LOCATIONS INDICATED ONLY.

IMPORTANT: DO NOT SECURE AT OUTER FIXING POINTS AT THIS STAGE.


LOCATE AND LOOSELY ATTACH CORNER POST 0205-15 (2100mm).



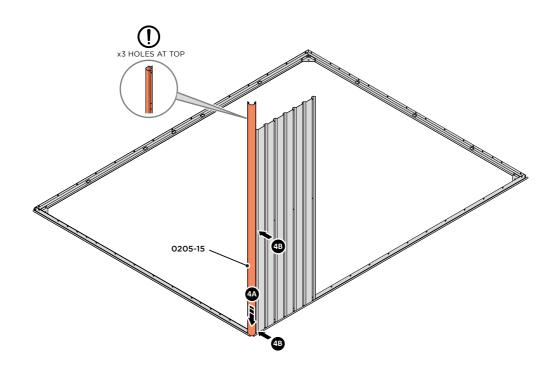

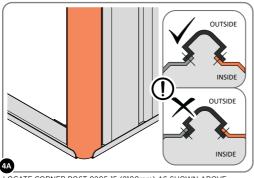


LOCATE CORNER POST 0205-15 (2100mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

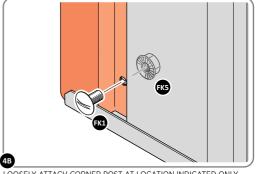


LOOSELY ATTACH CORNER POST AT LOCATION INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANELS 0213-03 (1850 x 324mm).

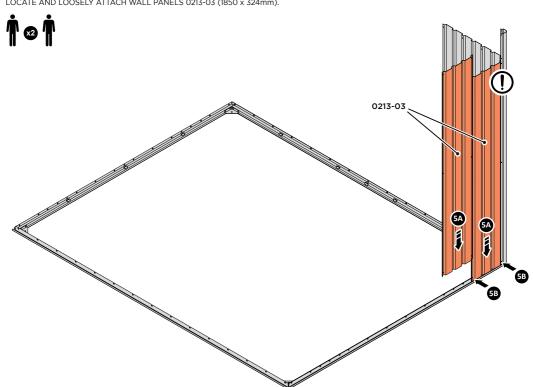


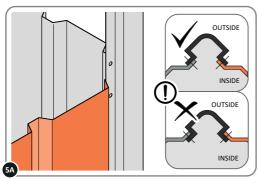


LOCATE FIRST WALL PANEL 0213-03 (1850 x 324mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

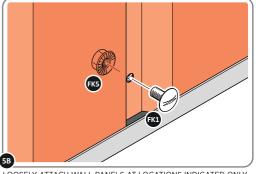


LOOSELY ATTACH WALL PANELS AT LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

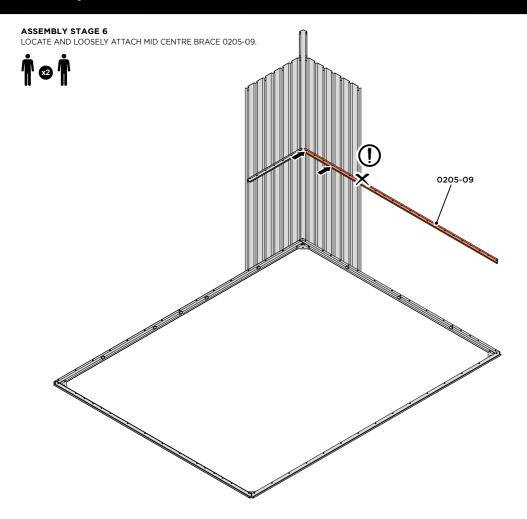

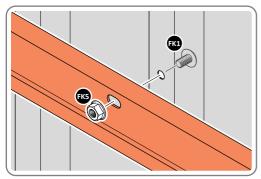


LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09 AS SHOWN AT $\ensuremath{\text{x2}}$ LOCATIONS INDICATED ABOVE.

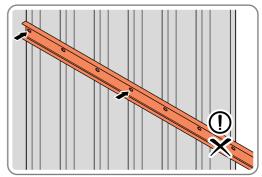


LOOSELY ATTACH AT x2 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANELS 0205-12 (1850 x 625mm).

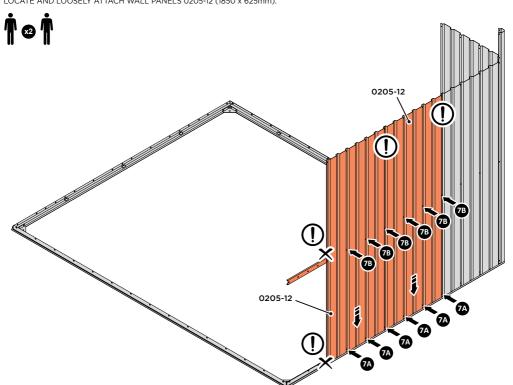

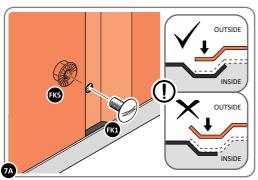


LOCATE AND LOOSELY ATTACH WALL PANELS AT LOCATIONS INDICATED. IMPORTANT: ENSURE PANELAS ARE IN THE CORRECT ORIENTATION.

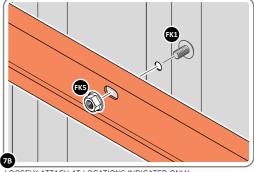


LOOSELY ATTACH AT LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

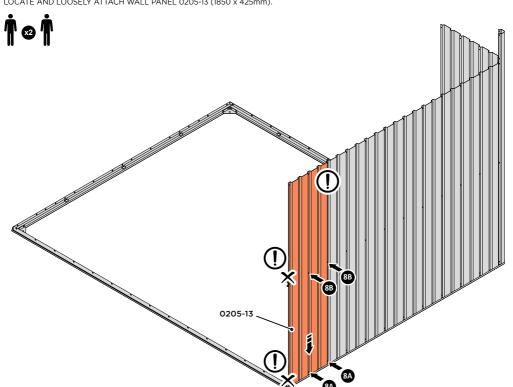

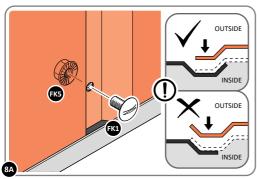



LOCATE AND LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

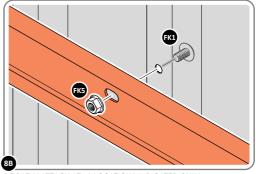


LOOSELY ATTACH AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH CORNER POST 0205-14 (1885mm).

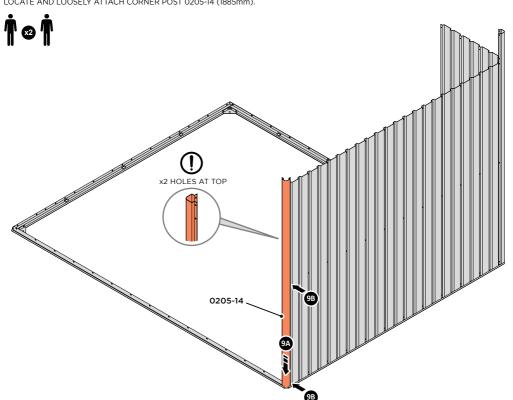


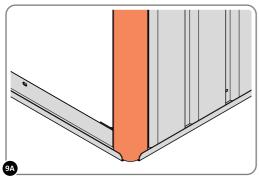




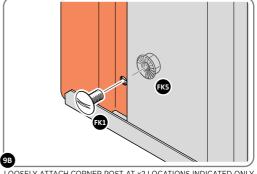


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

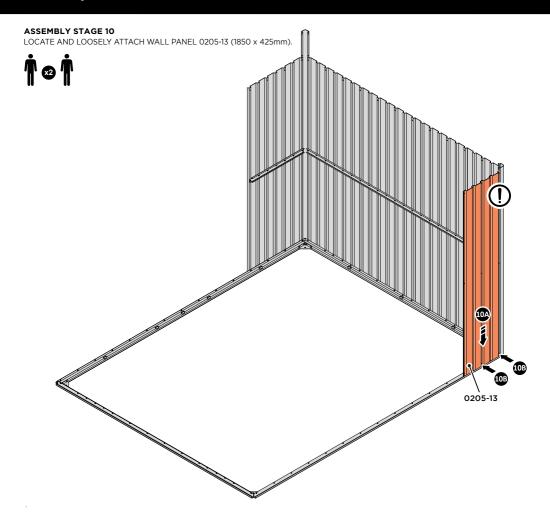


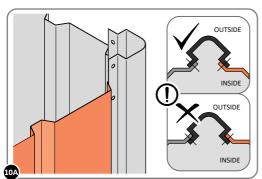


LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. **IMPORTANT**: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

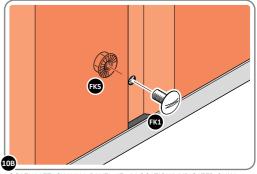


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

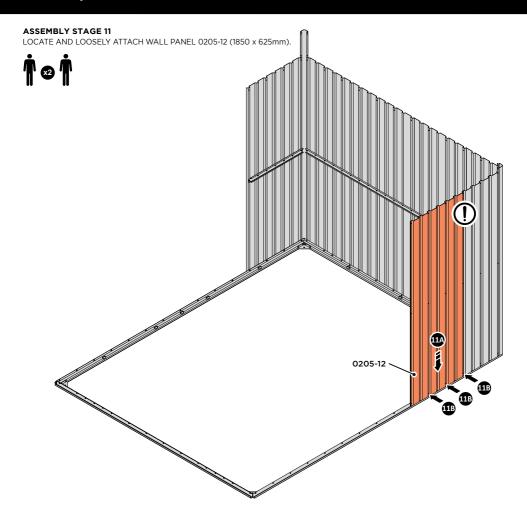

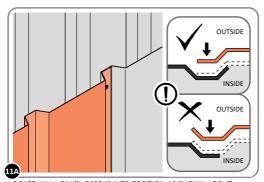


LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

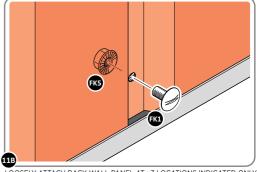


LOOSELY ATTACH BACK WALL PANEL AT x3 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-08.

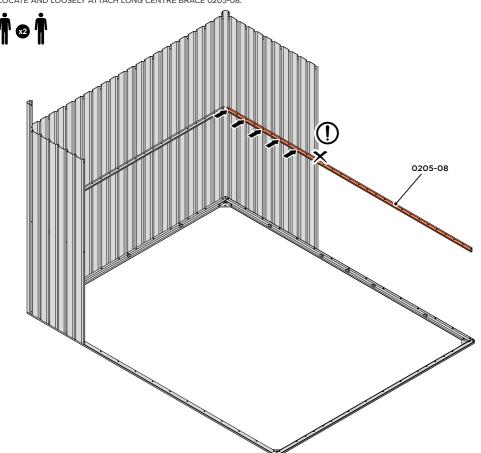

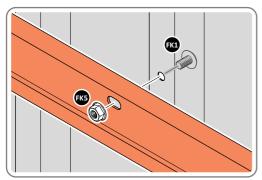



LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-08 AS SHOWN AT ${\it x5}$ LOCATIONS INDICATED ABOVE.

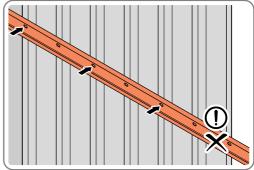


LOOSELY ATTACH AT x5 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

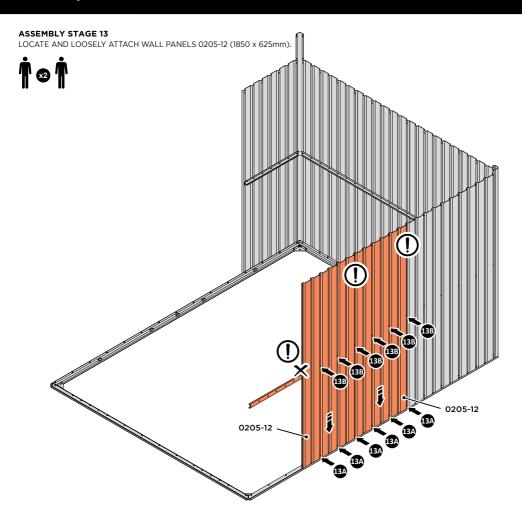


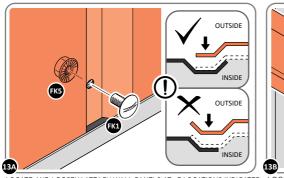


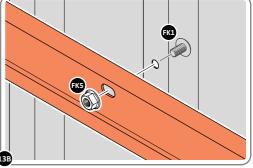


LOCATE AND LOOSELY ATTACH WALL PANELS AT x3 LOCATIONS INDICATED. LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: ENSURE PANELS ARE IN THE CORRECT ORIENTATION.

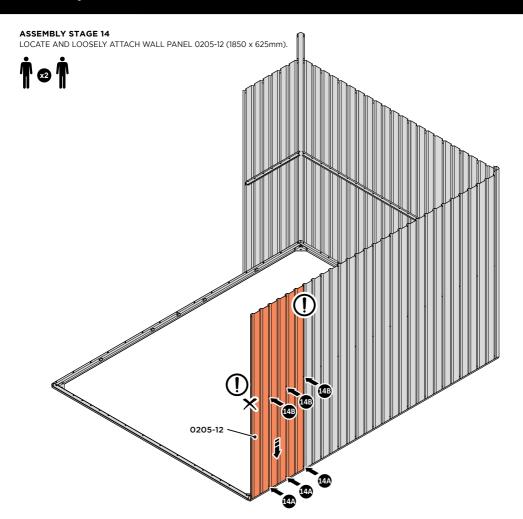


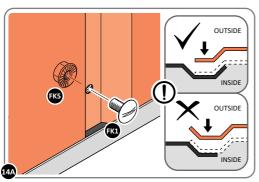





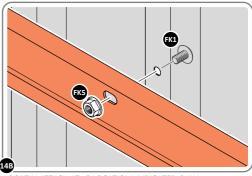


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.

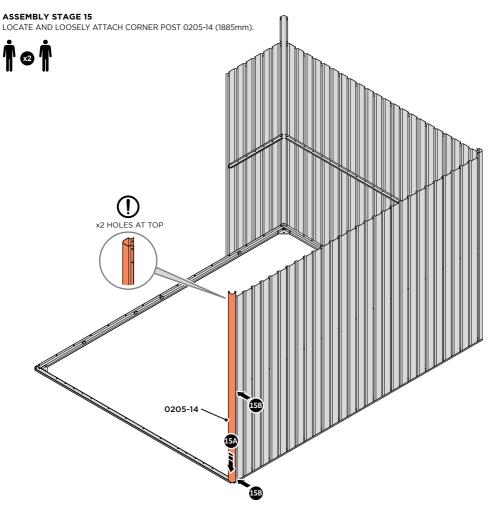

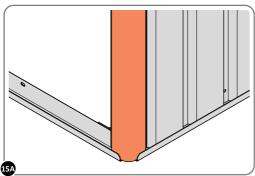





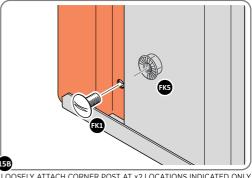


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

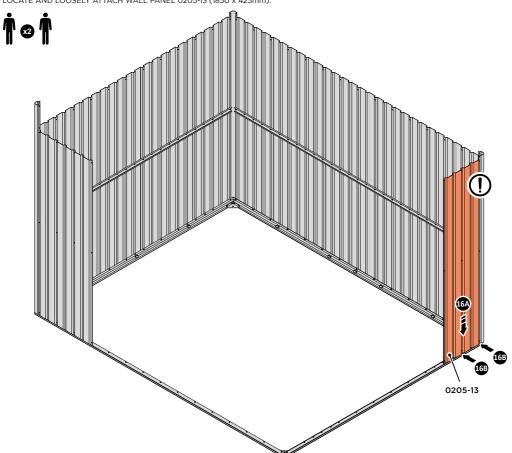

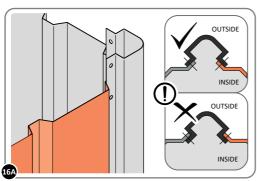



LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

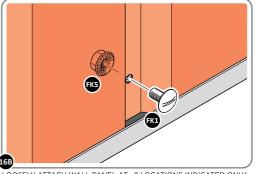


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANELS 0205-12 (1850 x 625mm).

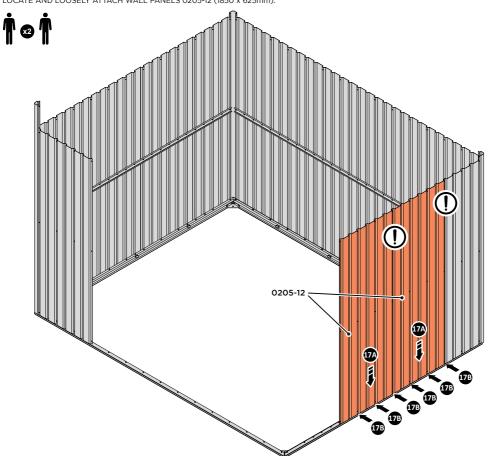


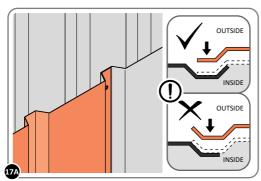


LOCATE WALL PANELS 0205-12 INTO POSITION AS SHOWN ABOVE. **IMPORTANT**: ENSURE PANELS ARE IN THE CORRECT ORIENTATION.

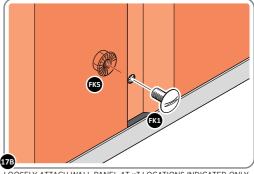


LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

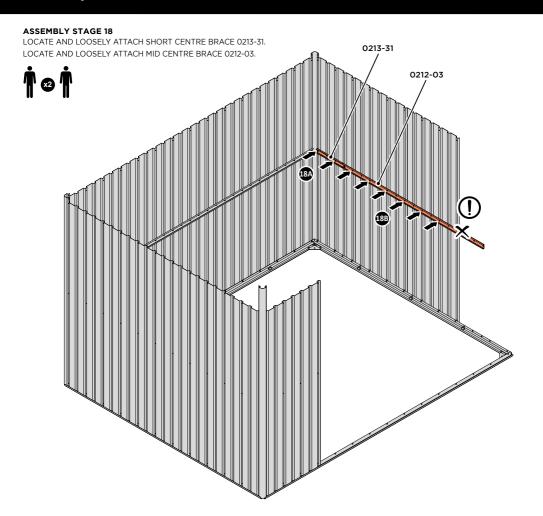

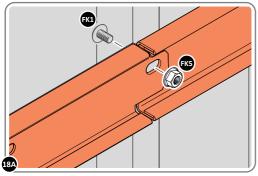



LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 AND CENTRE BRACE 0212-03 AS SHOWN AT LOCATIONS INDICATED ABOVE.

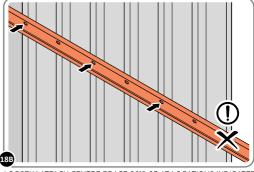


LOOSELY ATTACH CENTRE BRACE 0212-03 AT LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

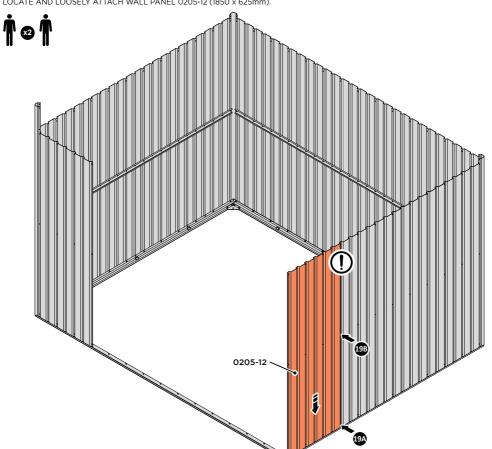


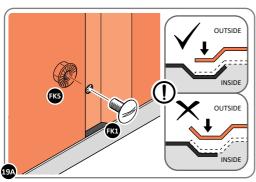


LOCATE AND LOOSELY ATTACH WALL PANEL AT LOCATIONS INDICATED. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

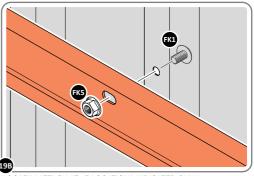


LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.

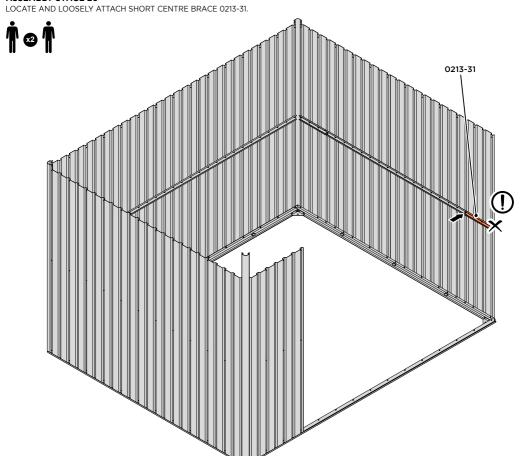

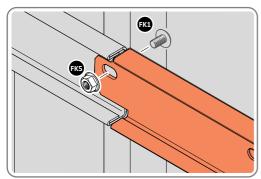



LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 AS SHOWN AT LOCATION INDICATED ABOVE.

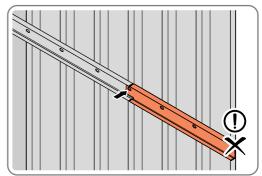



LOOSELY ATTACH AT LOCATION INDICATED ONLY. **IMPORTANT**: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH CORNER POST 0205-15 (2100mm).

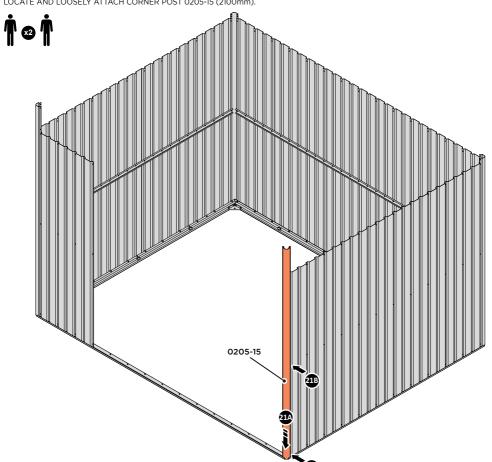

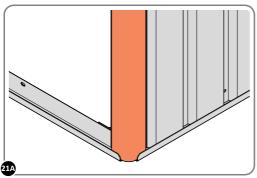





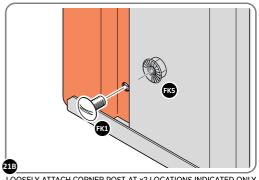


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

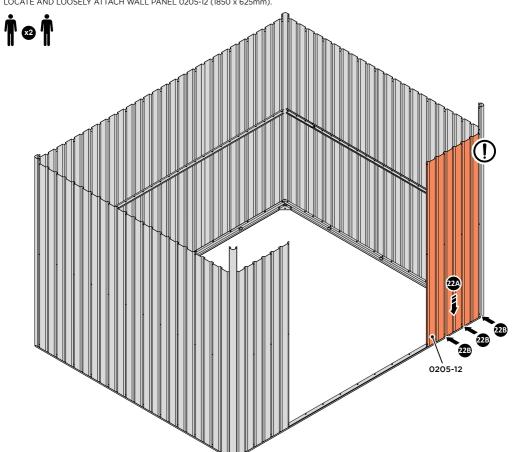

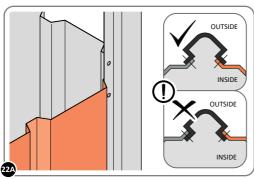


LOCATE WALL PANEL 0205-12 (1850 x 625mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

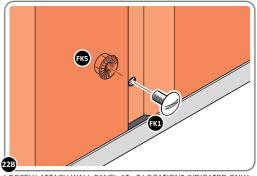


LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.


Assembly Guide

ASSEMBLY STAGE 23

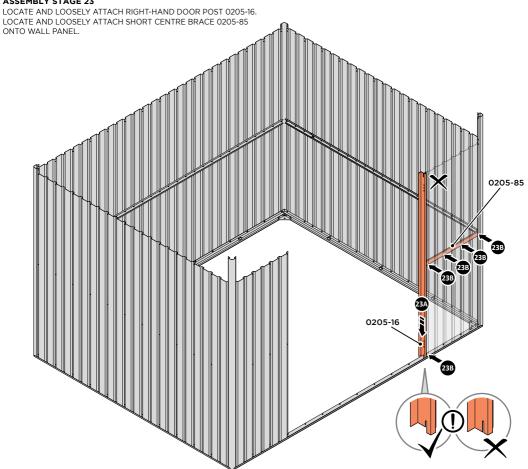

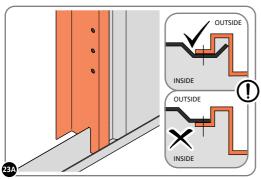


LOCATE RIGHT-HAND DOOR POST 0205-16 AS SHOWN ABOVE. **IMPORTANT**: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

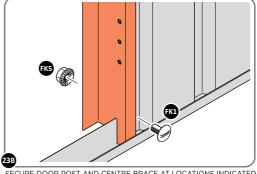


SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED.


IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH LEFT-HAND DOOR POST 0205-17.

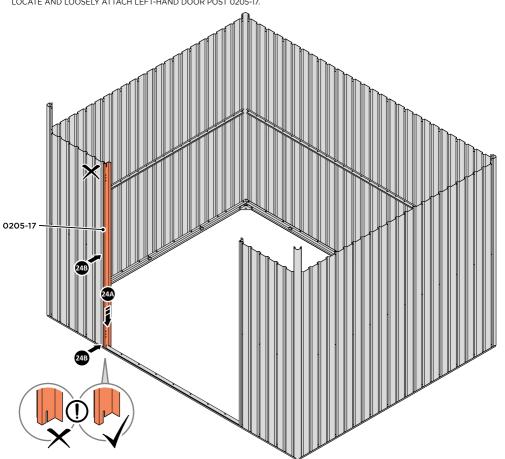

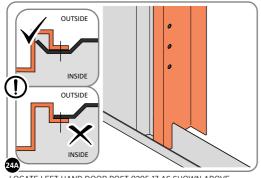



LOCATE LEFT-HAND DOOR POST 0205-17 AS SHOWN ABOVE. IMPORTANT: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

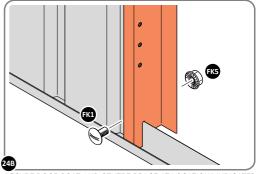


SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH SHORT ROOF RAIL 0213-02.

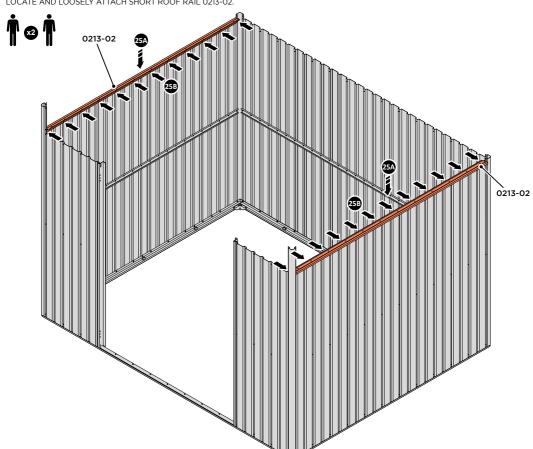

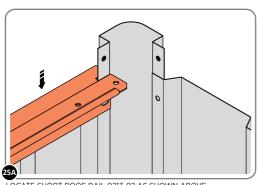





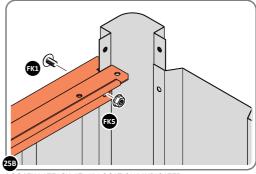



LOOSELY ATTACH AT x12 LOCATIONS INDICATED.

LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0205-18.

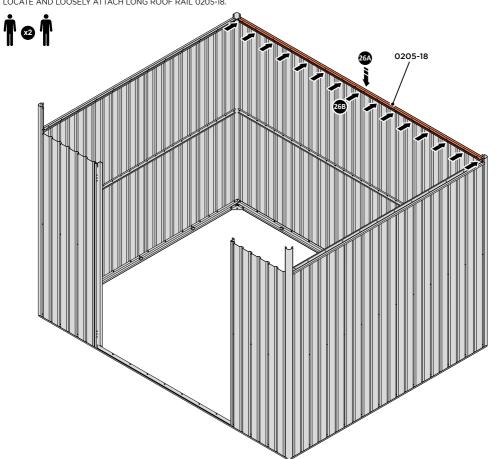

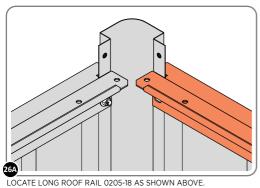



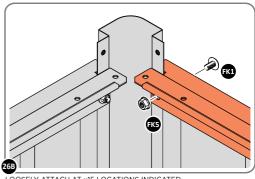



LOOSELY ATTACH AT x15 LOCATIONS INDICATED.


Assembly Guide


ASSEMBLY STAGE 27

LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0205-18.

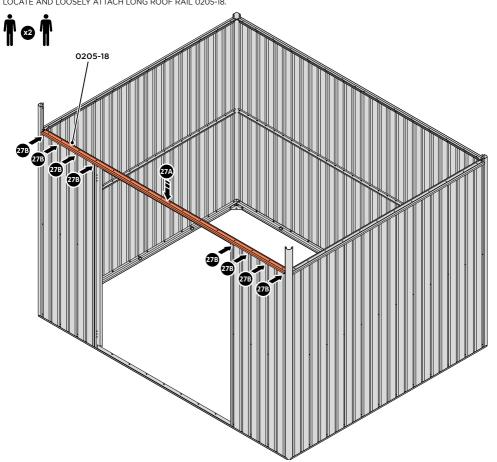

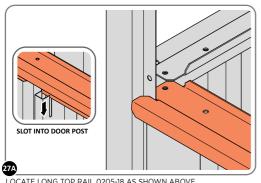



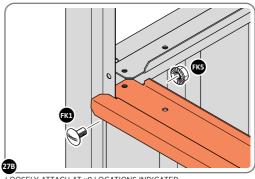


LOOSELY ATTACH AT x8 LOCATIONS INDICATED.


Assembly Guide

ASSEMBLY STAGE 28


LOCATE GROUND ANCHOR BRACKETS 0205-57.

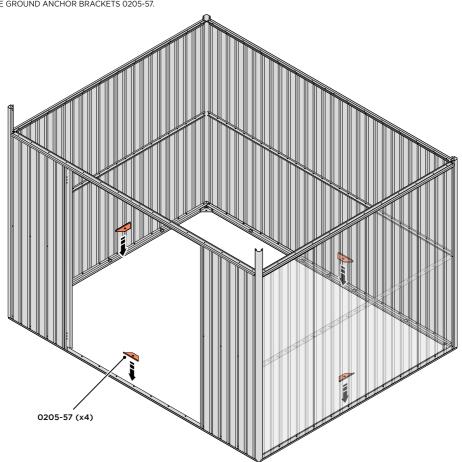



THESE BRACKETS ARE SECURED USING GROUND ANCHOR KIT ONCE THE SHED WALL PANELS ARE FULLY ASSEMBLED (SEE PAGE 'I')

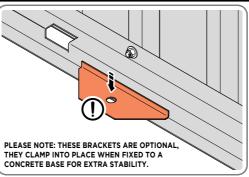


LOCATE x4 GROUND ANCHOR BRACKETS 0205-57 AS SHOWN ABOVE, THESE ALLOW FOR FIXING TO A CONCRETE BASE AT A LATER STAGE IF DESIRED.

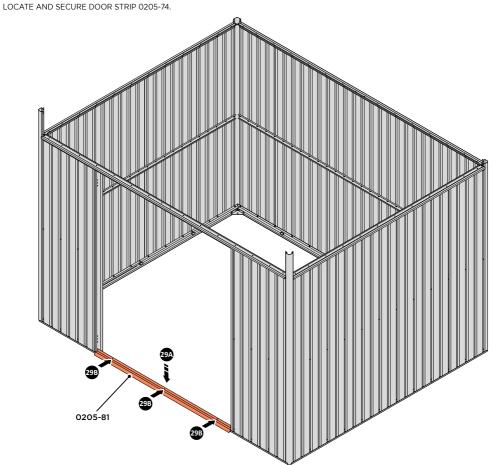

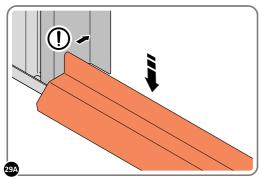



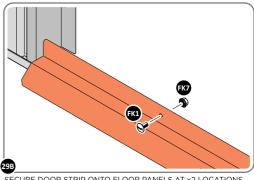


LOCATE DOOR STRIP 0205-81 AS SHOWN.


SECURE DOOR STRIP ONTO FLOOR PANELS AT x2 LOCATIONS IMPORTANT: ENSURE DOOR STRIP IS PUSHED AGAINST DOOR POST RETURN.


SECURE DOOR STRIP ONTO FLOOR PANELS AT x2 LOCATIONS INDICATED, USE EXISTING HOLE AS A LOCATION GUIDE.


ASSEMBLY STAGE 30

LOCATE AND SECURE ROOF SIDE INFILL 0205-30.

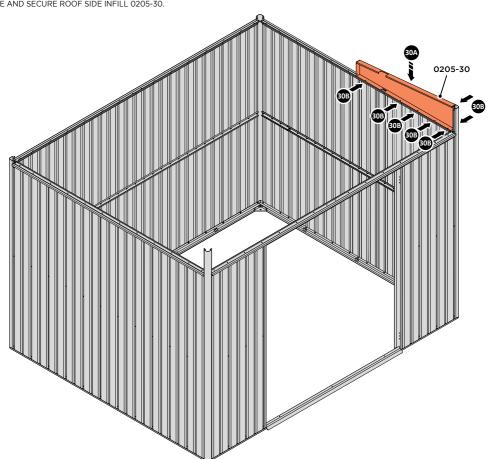


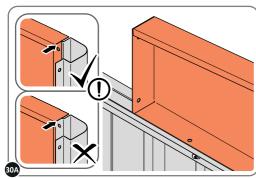





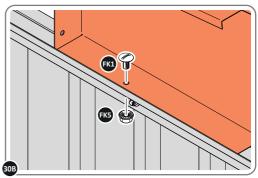


SECURE ROOF SIDE INFILL AT x7 LOCATIONS INDICATED.

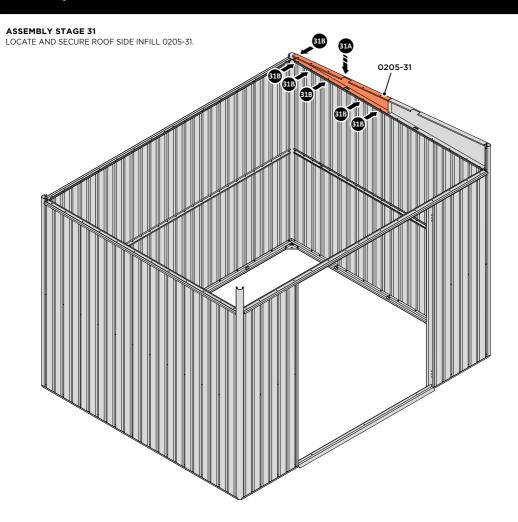

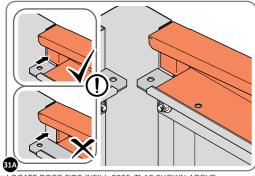




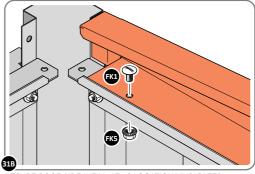


SECURE ROOF SIDE INFILL AT x6 LOCATIONS INDICATED, AS SHOWN ABOVE.

ASSEMBLY STAGE 32

SECURE ROOF SIDE INFILLS 0205-30 AND 0205-31.

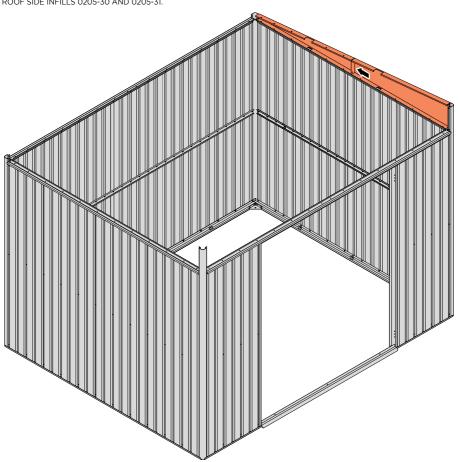


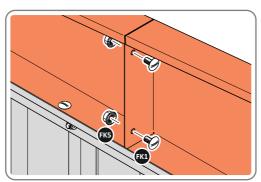



SECURE ROOF SIDE INFILLS 0205-30 AND 0205-31 AT $\ensuremath{\mathsf{x2}}$ LOCATIONS SHOWN ABOVE.


ASSEMBLY STAGE 33

LOCATE AND SECURE ROOF SIDE INFILL 0205-32.

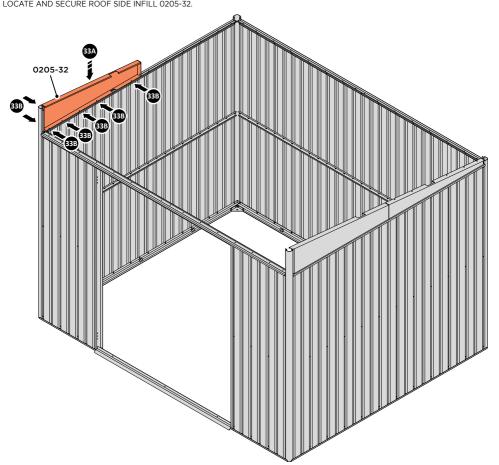


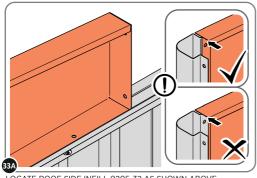




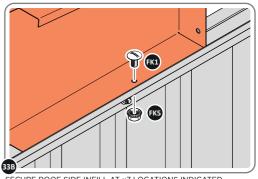


SECURE ROOF SIDE INFILL AT x7 LOCATIONS INDICATED.

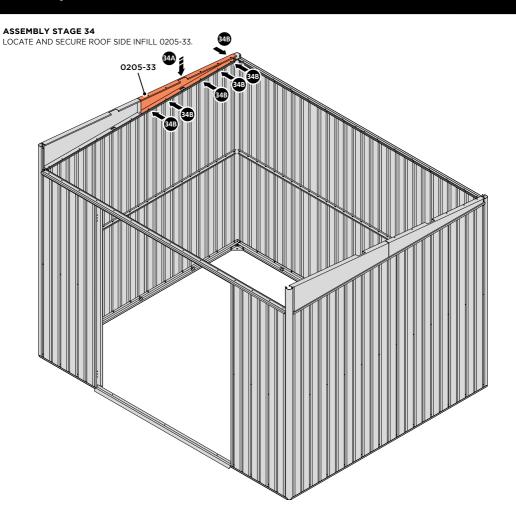

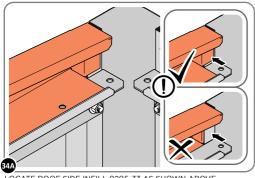



LOCATE ROOF SIDE INFILL 0205-33 AS SHOWN ABOVE.

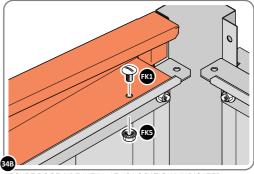

SECURE ROOF SIDE INFILL AT x6 LOCATIONS INDICATED, AS SHOWN ABOVE.


ASSEMBLY STAGE 35

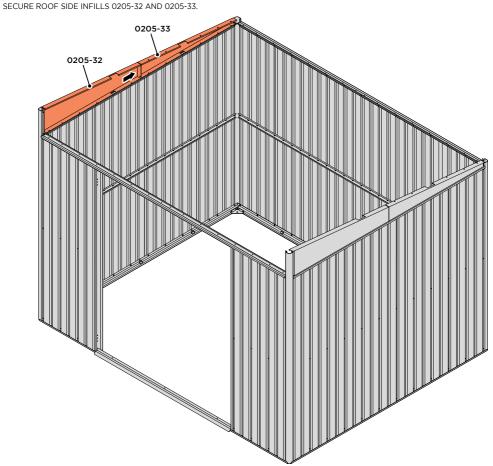


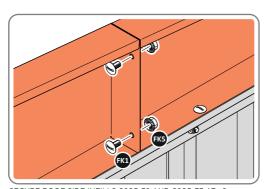


SECURE ROOF SIDE INFILLS 0205-32 AND 0205-33 AT x2 LOCATIONS SHOWN ABOVE.

LOCATE AND SECURE ROOF REAR INFILLS 0205-26 AND 0205-27.

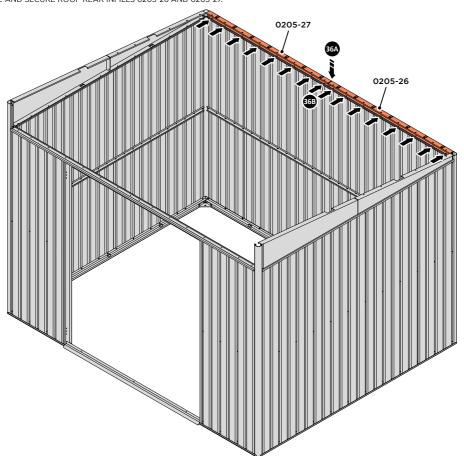

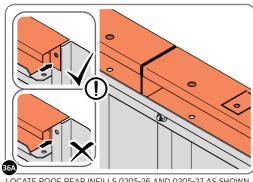



LOCATE ROOF REAR INFILLS 0205-26 AND 0205-27 AS SHOWN ABOVE.

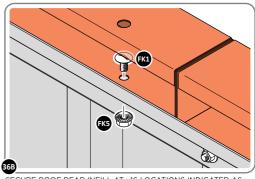


SECURE ROOF REAR INFILL AT x16 LOCATIONS INDICATED AS SHOWN ABOVE.


ASSEMBLY STAGE 37

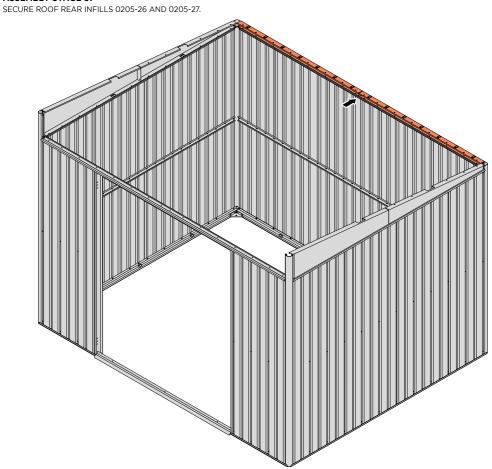

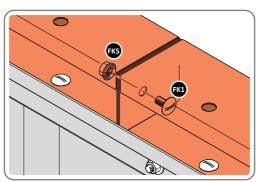


SECURE ROOF REAR INFILL PANELS ONTO EACH OTHER AS SHOWN ABOVE.

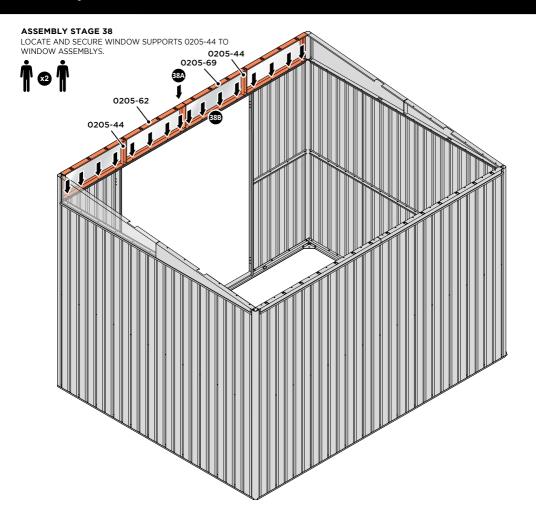


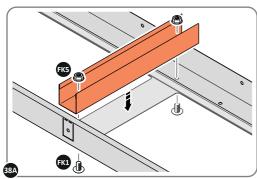


LOCATE AND SECURE WINDOW SUPPORTS 0205-44 TO WINDOW ASSEMBLY 0205-62 AND 0205-69 AS SHOWN ABOVE..

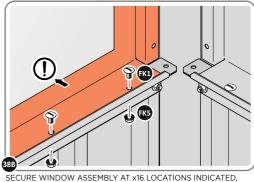


SECURE WINDOW ASSEMBLY AT x16 LOCATIONS INDICATED, AS SHOWN ABOVE.

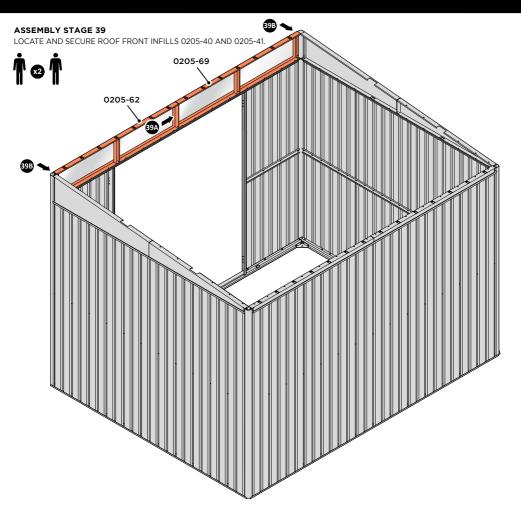


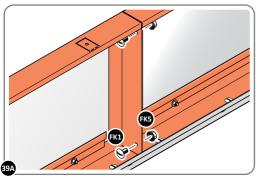




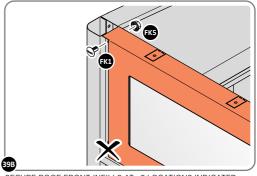


SECURE ROOF FRONT INFILLS AT x2 LOCATIONS INDICATED.

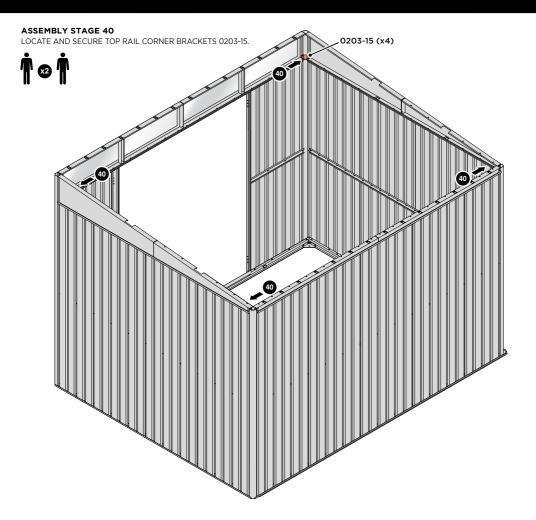

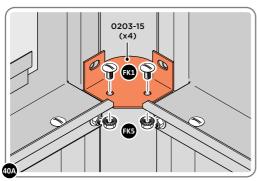



LOCATE AND SECURE TOP RAIL CORNER BRACKETS 0203-15 IN EACH CORNER OF THE SHED USING THE TYPICAL FIXING METHOD.

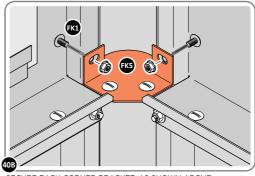


SECURE EACH CORNER BRACKET, AS SHOWN ABOVE.

LOCATE AND SECURE ROOF SUPPORTS 0205-20 AND 0205-21.

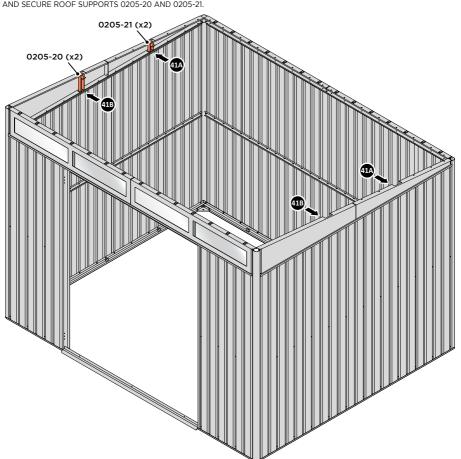

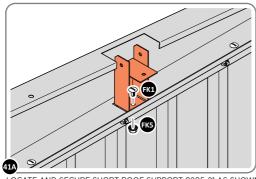



LOCATE AND SECURE SHORT ROOF SUPPORT 0205-21 AS SHOWN ABOVE.

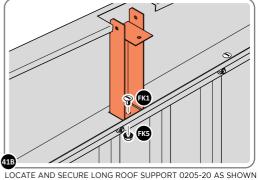


ABOVE.

LOCATE AND SECURE ROOF CHANNEL ASSEMBLY 0205-59.

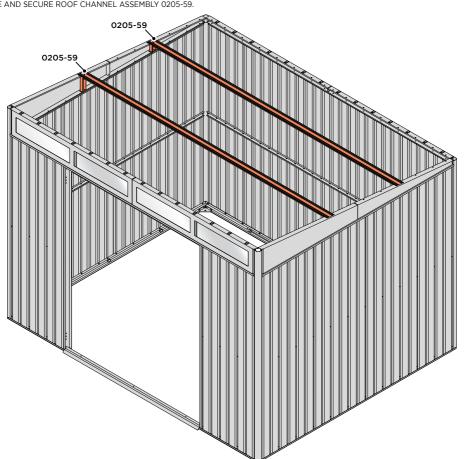

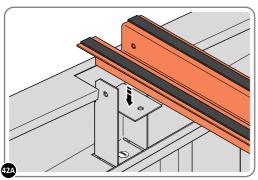



SLOT EACH ROOF CHANNEL ASSEMBLY 0205-59 INTO ROOF SUPPORT.

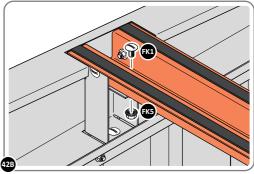


SECURE ROOF CHANNEL ASSEMBLY AT EACH FIXING POINT (x3 EACH SIDE) USING FASTENERS DETAILED ABOVE.

ASSEMBLY STAGE 43

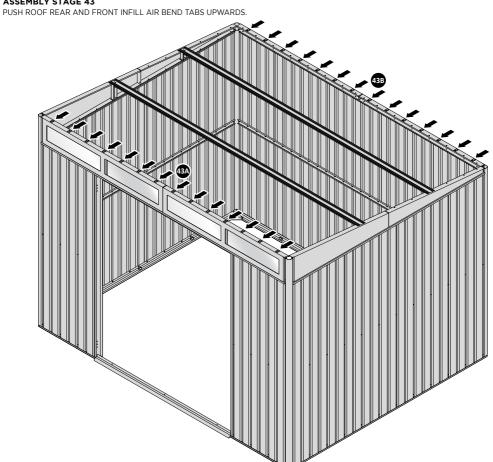

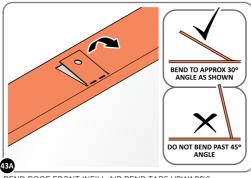



BEND ROOF FRONT INFILL AIR BEND TABS UPWARDS. IMPORTANT: DO NOT BEND PAST 45°.

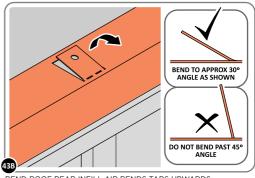


BEND ROOF REAR INFILL AIR BENDS TABS UPWARDS IMPORTANT: DO NOT BEND PAST 45°.

ASSEMBLY STAGE 44

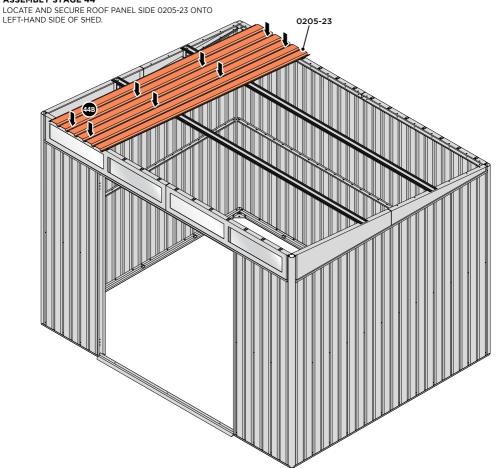


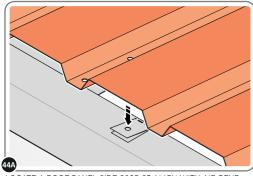


LOCATE A ROOF PANEL SIDE 0205-23 ALIGN WITH AIR BEND TABS AS INDICATED.

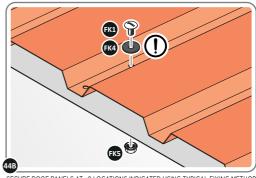


SECURE ROOF PANELS AT X8 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

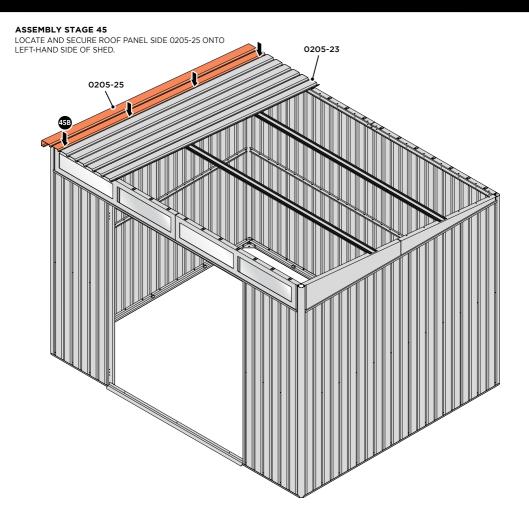


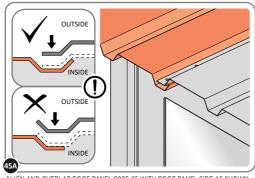


ALIGN AND OVERLAP ROOF PANEL 0205-25 WITH ROOF PANEL SIDE AS SHOWN. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

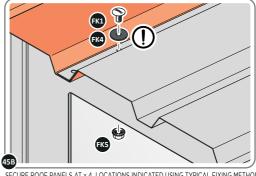


SECURE ROOF PANELS AT x 4 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

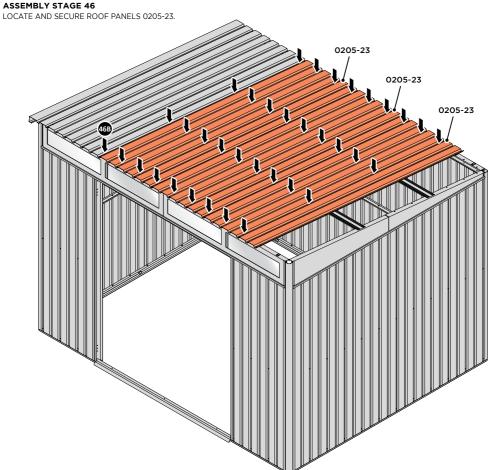


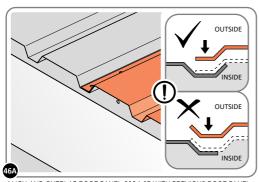

ALIGN AND OVERLAP ROOF PANEL 0204-23 WITH PREVIOUS ROOF PANEL. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

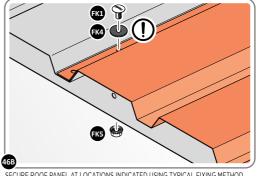


SECURE ROOF PANEL AT LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

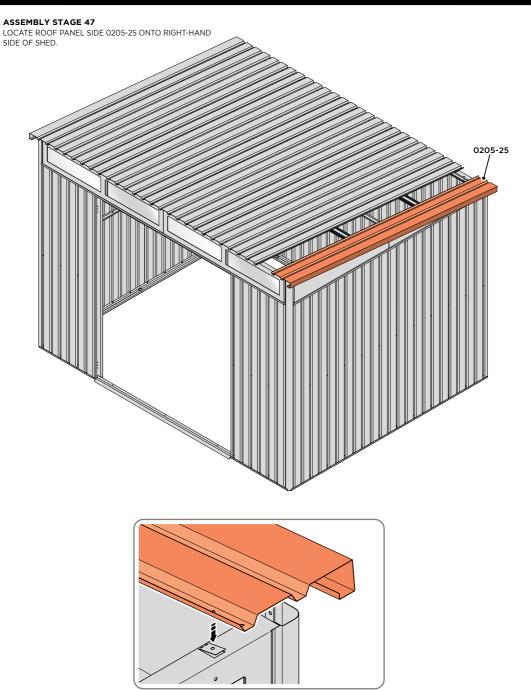

LOCATE A ROOF PANEL SIDE 0205-25 ONTO RIGHT-HAND SIDE OF SHED AND ALIGN WITH AIR BEND TABS AS INDICATED.


ASSEMBLY STAGE 48

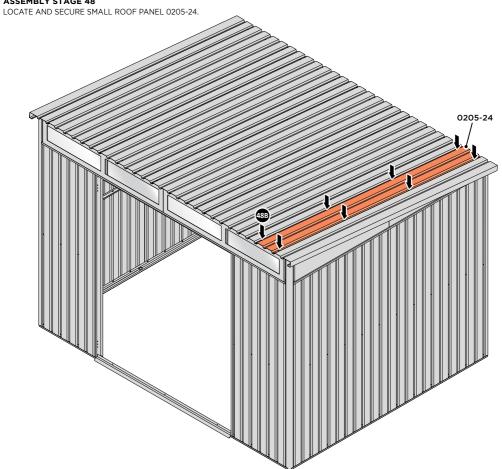




UPON COMPLETION OF THIS PROCEDURE ENSURE STRUCTURE IS ALIGNED CORRECTLY AND TIGHTEN ALL FASTENERS




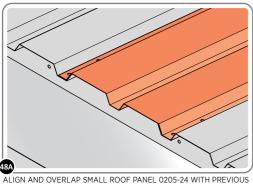



ROOF PANEL AND ROOF PANEL SIDE.

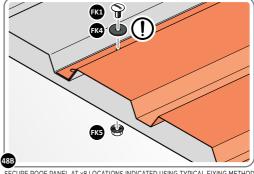


SECURE ROOF PANEL AT x8 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

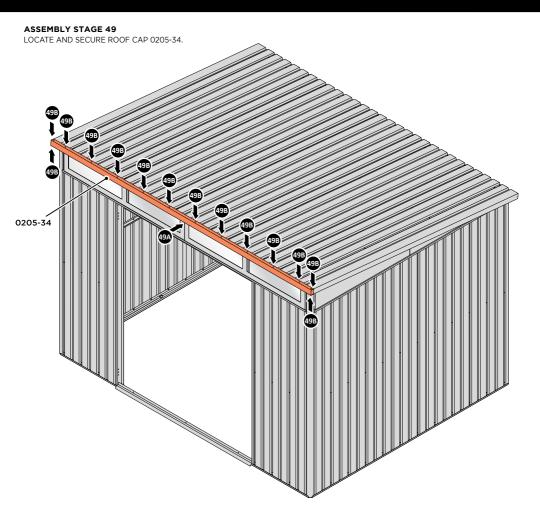


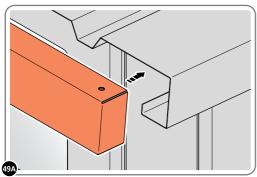




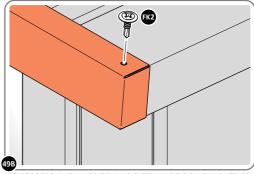


SECURE ROOF CAP AT x14 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.

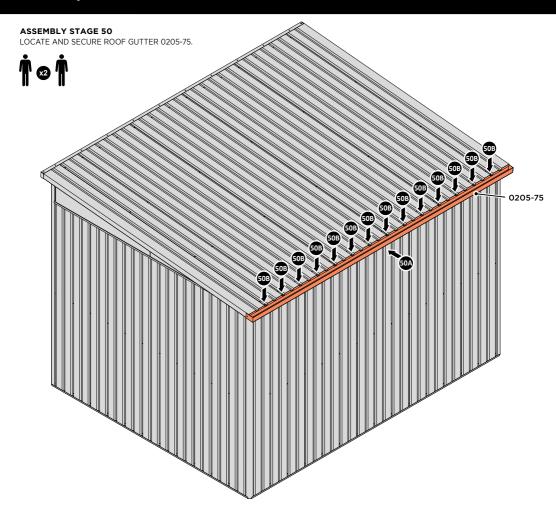


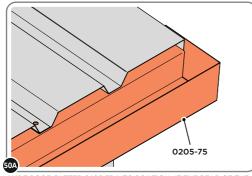



SLIDE ROOF GUTTER 0205-75 INTO POSITION AT THE REAR OF THE SHED ROOF.

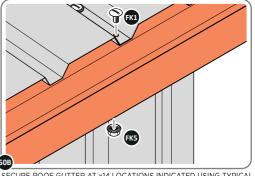


SECURE ROOF GUTTER AT x14 LOCATIONS INDICATED USING TYPICAL FIXING METHOD.

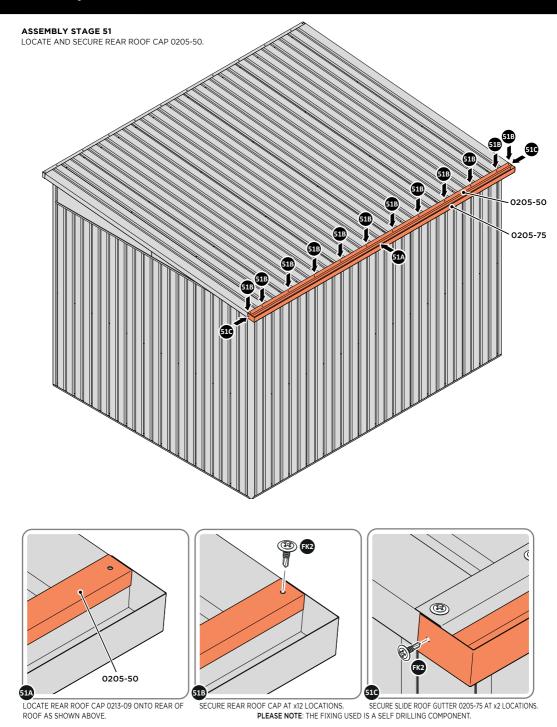

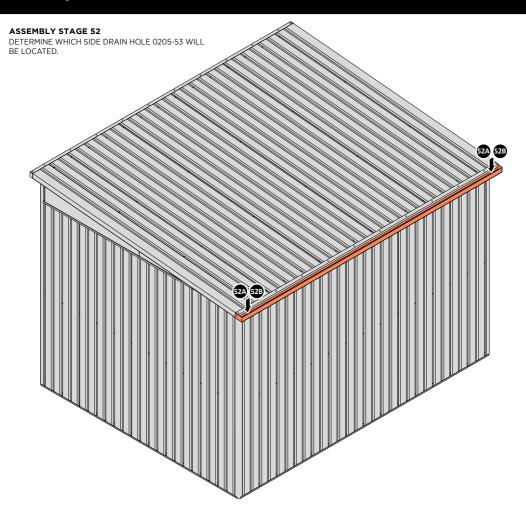

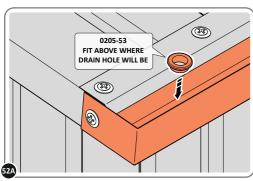



LOCATE AN OPEN GROMMET INTO THE ROOF GUTTER ABOVE WHERE THE DRAIN HOLE WILL BE LOCATED.

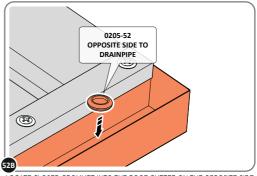


LOCATE CLOSED GROMMET INTO THE ROOF GUTTER ON THE OPPOSITE SIDE TO THE LOCATED DRAIN HOLE AS SHOWN ABOVE.

LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-97 FURNITURE.

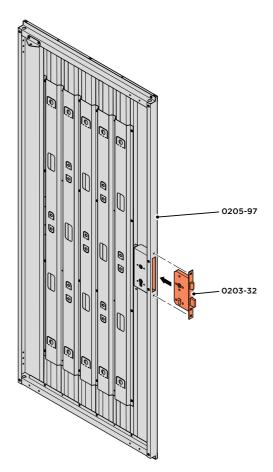

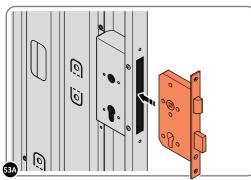


LOCATE EURO MORTICE LOCK 0203-32 RIGHT-HAND DOOR APERTURE AS SHOWN.

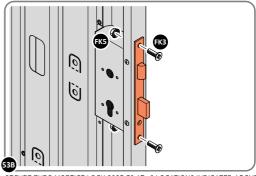


SECURE EURO MORTICE LOCK 0203-32 AT x2 LOCATIONS INDICATED ABOVE. SEE FOLLOWING DATA SHEET FOR COMPLETION OF MORTICE LOCK INSTALLATION.

ASSEMBLY STAGE 53 CONTINUED


LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-97 FURNITURE.

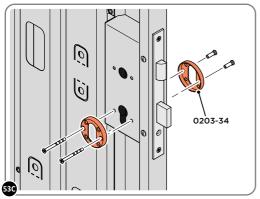


LOCATE AND SECURE EURO ESCUTCHEON 0203-34 AS SHOWN.

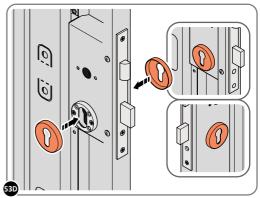

LOCATE EURO ESCUTCHEON COVER 0203-34 ONTO EURO ESCUTCHEON AS SHOWN. PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

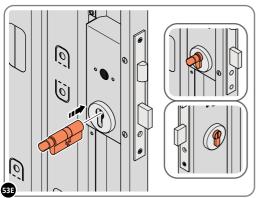


LOCATE EURO CYLINDER 0203-36 INTO DOOR APERTURE. IMPORTANT: ENSURE COVER IS FITTED AS SHOWN.

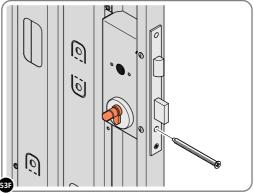


SECURE EURO CYLINDER 0203-36 AS SHOWN ABOVE.

PLEASE NOTE: FIXING IS PART OF THE EURO MORTICE LOCK ASSEMBLY.

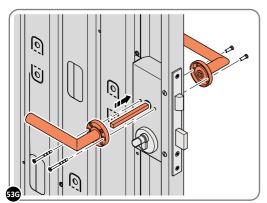



LOCATE AND SECURE DOOR HANDLE ASSEMBLY 0203-33 AS SHOWN.

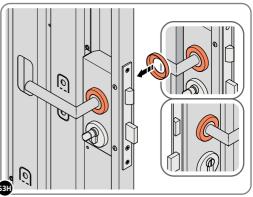


LOCATE COVER ONTO DOOR HANDLE AS SHOWN.
PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

LOCATE AND SECURE LEFT-HAND DOOR ASSEMBLY 0205-37 FURNITURE.

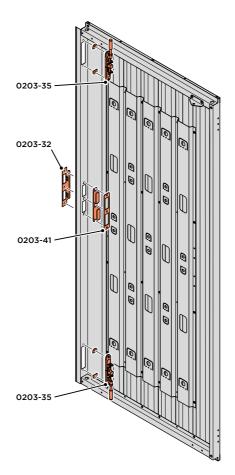

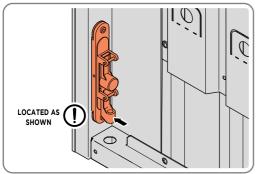


ENSURE THE PLUNGER INDICATED IS FACING THE BOTTOM OF THE DOOR, LOCATE AS SHOWN ABOVE AND SECURE USING ADJACENT FIXING METHOD.

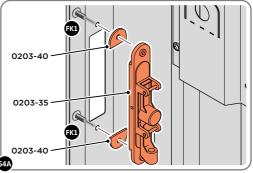


SECURE EACH FLUSH DOOR BOLT ENSURING PLATE PACKER 0203-40 IS LOCATED AS SHOWN ABOVE.

ASSEMBLY STAGE 54 CONTINUED


LOCATE AND SECURE LEFT-HAND DOOR ASSEMBLY 0205-37 FURNITURE.

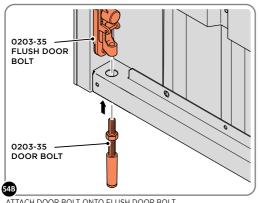


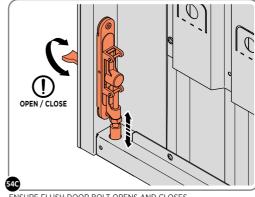


ATTACH DOOR BOLT ONTO FLUSH DOOR BOLT.

ENSURE FLUSH DOOR BOLT OPENS AND CLOSES.

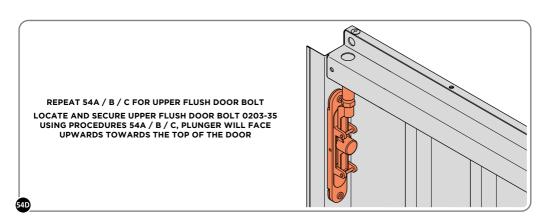

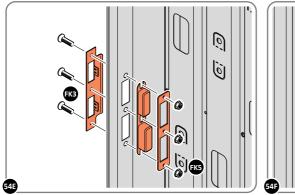


LOCATE AND SECURE EURO MORTICE LOCK 0203-32 AND CATCH PLATE COVER 0203-41 AS SHOWN ABOVE.

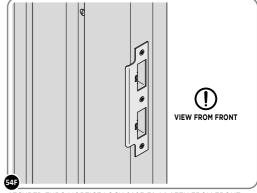



SECURED EURO MORTICE LOCK 0203-32 AS SEEN FROM FRONT.


LOCATE AND SECURE A DOOR GROMMET 0203-57 AT EACH LOCATION INDICATED.



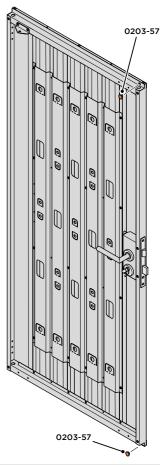

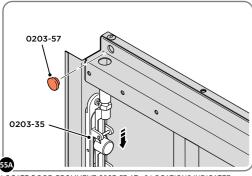




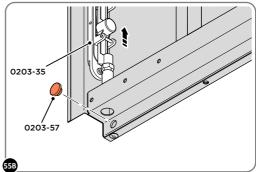


LOCATE DOOR GROMMENT 0203-57 AT x2 LOCATIONS AS SHOWN.


PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

LOCATE AND SECURE DOOR HINGES ONTO DOOR ASSEMBLIES.

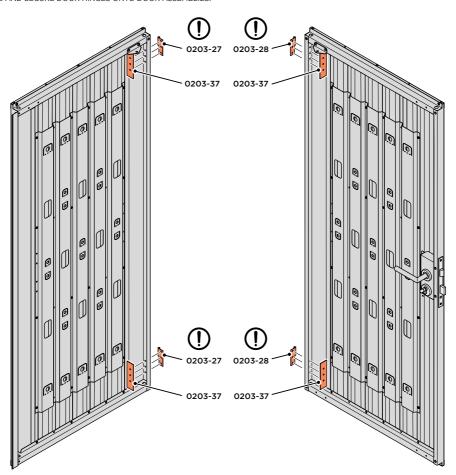

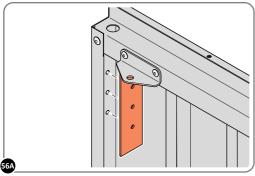





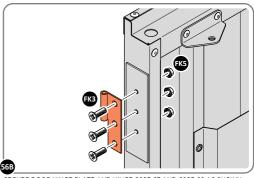


SECURE DOOR HINGE PLATE AND HINGE 0203-27 AND 0203-28 AS SHOWN.

IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.

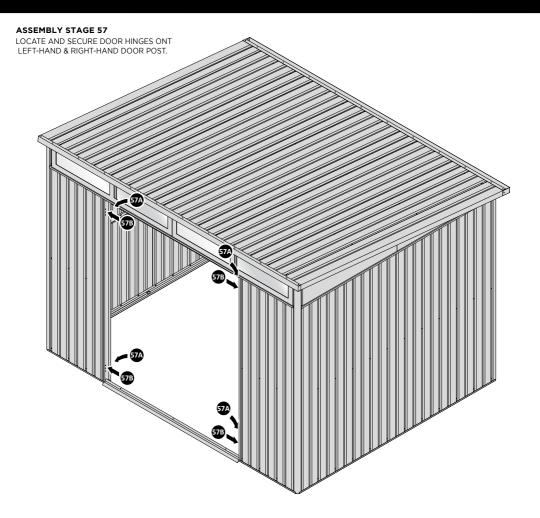

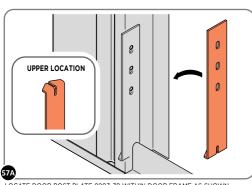



LOCATE DOOR POST PLATE 0203-39 WITHIN DOOR FRAME AS SHOWN. IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.

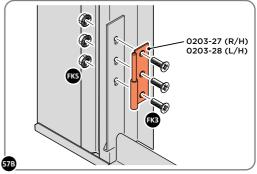


SECURE DOOR POST PLATES AND HINGES AS SHOWN.

PLEASE NOTE: REPEAT EACH PROCEDURE FOR UPPER LOCATION.

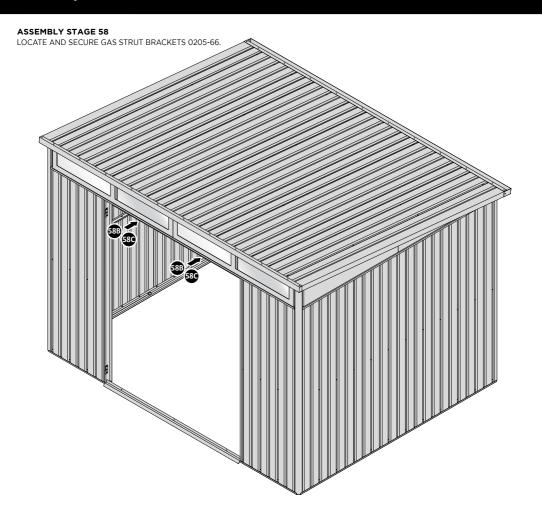


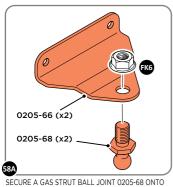


SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET 0205-66.

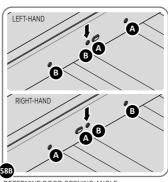

DETERMINE DOOR OPENING ANGLE:
A: 90° OPENING OR B: 120° OPENING

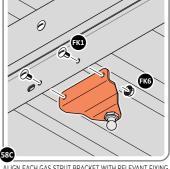

ALIGN EACH GAS STRUT BRACKET WITH RELEVANT FIXING HOLES, SECURE USING TYPICAL FIXING METHOD ABOVE.

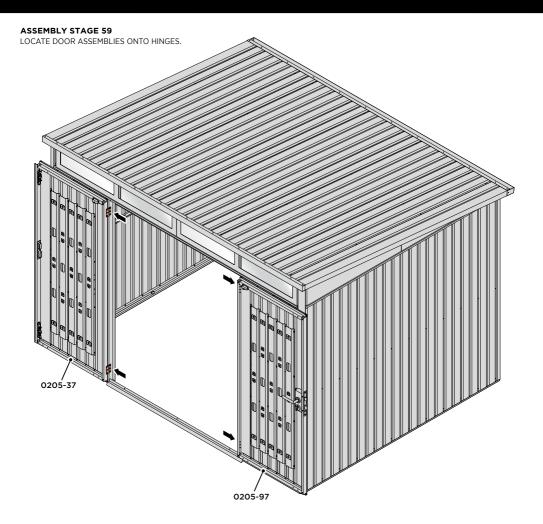










ASSEMBLED DOOR HINGE.

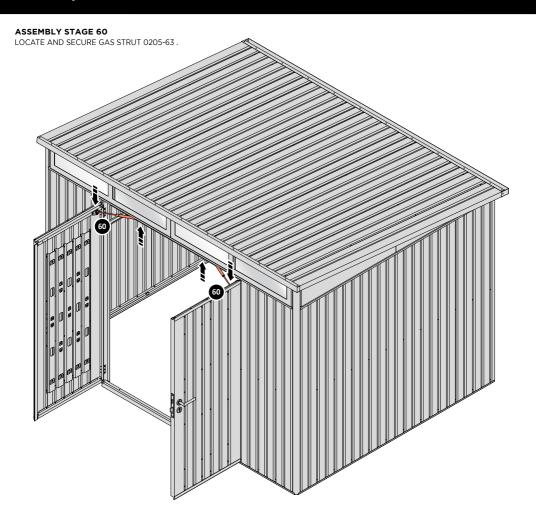

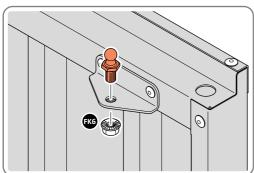


SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET THAT IS PRE-RIVETED ONTO EACH DOOR ASSEMBLY.

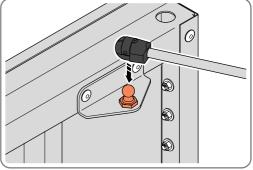


FIX EACH GAS STRUT 0205-63 ONTO RELEVANT GAS STRUT BALL JOINTS. **PLEASE NOTE**: PUSHES DOWN ON DOOR AND UPWARDS ON DOOR FRAME.


LOCATE AND SECURE SHELF ASSEMBLY 0205-BLACK-SRH KIT.

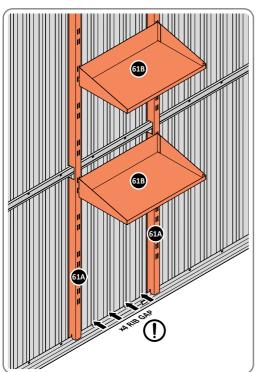

THE SHELF ASSEMBLY CAN BE LOCATED AS DESIRED, PLEASE DETERMINE THE MOST SUITABLE LOCATION AND ASSEMBLE AS SHOWN IN FIG.61A & 61B.

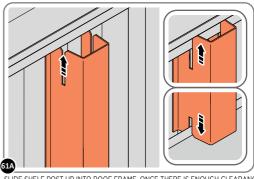


SLIDE SHELF POST UP INTO ROOF FRAME, ONCE THERE IS ENOUGH CLEARANCE AT THE BOTTOM LOCATE SHELF POST OVER FLOOR FRAME AND LOWER.

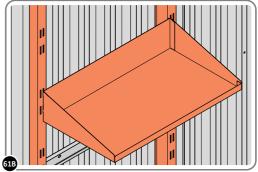

LOCATE EACH SHELF 0205-38-02 ONTO SHELF POST AS DESIRED. PLEASE NOTE: THE SHELF SIMPLY HOOKS ONTO THE POST.

ASSEMBLY STAGE 62

LOCATE TOOL HANGERS 0205-BLACK-TH WITHIN SHED AS DESIRED LOCATION.

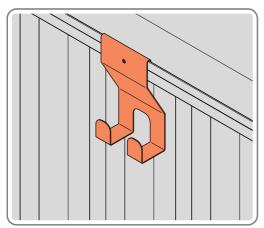

HOOK EACH TOOL HANGER ONTO ROOF FRAME AT DESIRED LOCATION.



IMPORTANT

ADJUST ALL COMPONENTS FOR BEST POSSIBLE FIT AND TIGHTEN ALL FASTENERS.

ONCE ALL FASTENERS HAVE BEEN CHECKED AND ARE SECURE THE ASSEMBLY IS COMPLETE

WE RECOMMEND YOU ANCHOR YOUR SHED TO A SOLID CONCRETE BASE, GUIDANCE CAN BE FOUND ON PAGE '1'

NOTES

Caring for your HEX Living product

Your **HEX Living product** is designed to stand the test of time, which is why we're happy to offer a **lifetime warranty** on our products. With zero maintenance required, simply assemble your HEX Living product, and enjoy putting it to great use in your garden.

Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:

- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will ensure dirt or mud simply wipes away.
- If you've purchased a HEX Living metal storage solution, periodically clear the roof of fallen leaves.
- If your product has guttering, remove leaves and garden debris as you would on your home.

Ensure you have registered your HEX Living product

Using the unique serial number found on the cover of this document, please visit **www.hexliving.co.uk** to register your product and access the HEX Living lifetime warranty and video instructions.

Customer Service: +44 (0) 1889 272 056









