




Technical Bulletin

TB006


DOOR HARDWARE SCREW
RECTIFICATION INSTRUCTIONS FOR
ALL METAL SHEDS
KIT REFERENCE:
EURO ESCUTCHEON 0203-34
DOOR HANDLE 0203-33

LOCATE SCREWS FOM KITS 0203-33 AND 0203-34.

Kit Ref: 0203-33

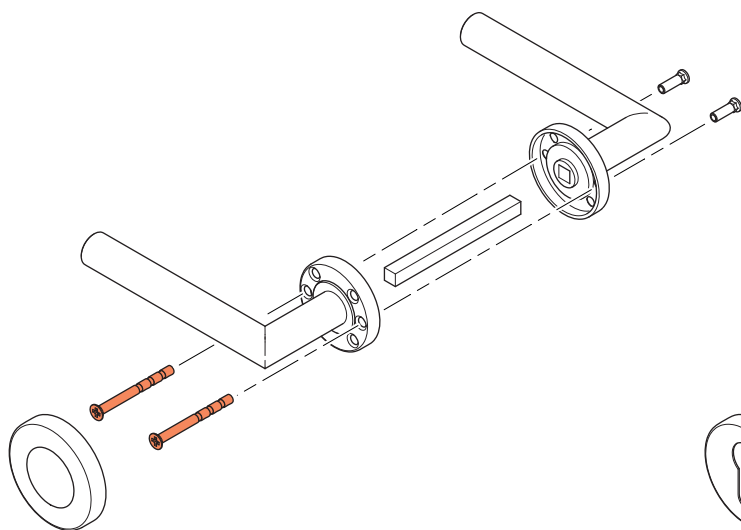


Kit Ref: 0203-34

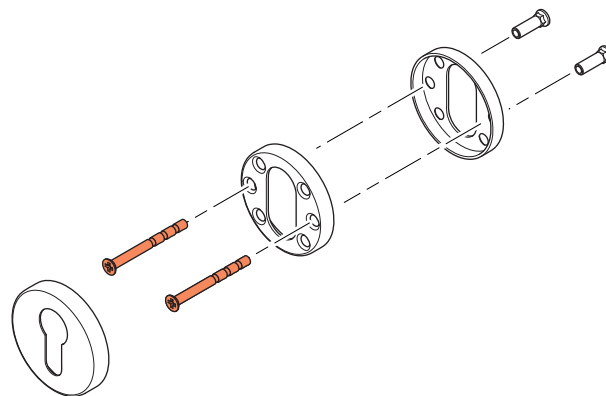

NOTE: IT HAS COME TO OUR ATTENTION, THAT SOME OF THE SCREWS SUPPLIED WITH THE DOOR HARDWARE MAY REQUIRE SHORTENING PRIOR TO INSTALLATION. PLEASE FOLLOW THE INSTRUCTIONS BELOW;

- MEASURE THE LENGTH OF THE SCREWS, THESE SHOULD BE 45MM LONG.
- IF YOUR SCREWS ARE LONGER, MARK THE SCREW WHERE IT NEEDS TO BE CUT.
- A PAIR OF PLIERS SHOULD BE SUFFICIENT TO CUT THE SCREW. HOWEVER A SMALL JUNIOR HACKSAW CAN ALSO BE USED.
- WHILST CUTTING THE SCREW ENSURE MINIMAL DAMAGE IS CAUSED TO THE THREADED AREA.
- PRIOR TO FITTING THE SCREW, CHECK THAT THE NUT SECTION STILL SCREWS ON AND OFF OK.
- IF ANY OF THE THREAD IS DAMAGED, DRESS WITH A FILE PRIOR TO INSTALLATION.

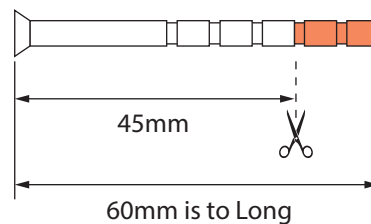

1A



IMPORTANT: WHEN CUTTING PPE MUST BE WORN!

1B



1C