

#### ASSEMBLY STAGE 5

LOCATE AND SECURE DOOR STRIP

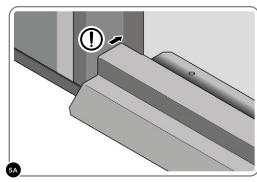

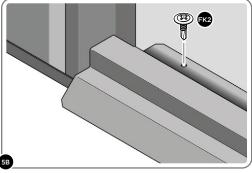



SECURE DOOR STRIP ONTO FLOOR PANELS AT X6 LOCATIONS INDICATED.



# Hixon

## **Technical Bulletin TB001**

Floor Securing Assembly Guide





www.hexliving.co.uk















NO.8 X 13MM ECO FIX

QTY: X7

#### PERSONAL PROTECTION EQUIPMENT


WE ADVISE APPROPRIATE PERSONAL PROTECTIVE **EQUIPMENT IS WORN DURING ASSEMBLY INCLUDING** EYE PROTECTION AND GLOVES.






ASSEMBLY STAGE 1

LOCATE REAR FLOOR PANELS

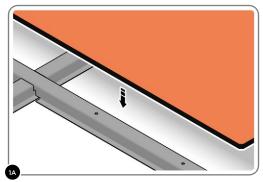


FIRST SLOT FLOOR PANELS INTO THE BACK HALF OF FLOOR FRAME. IMPORTANT: THESE FLOOR PANELS DO NOT HAVE A CUT-OUT.

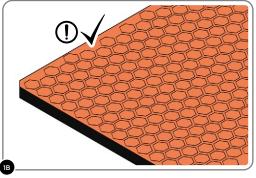


IMPORTANT: ENSURE THE FLOOR PATTERN IS FACE UP.

### ASSEMBLY STAGE 2


LOCATE FORWARD FLOOR PANELS

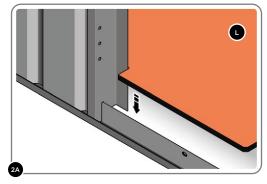

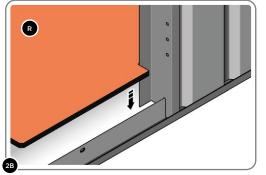


SLOT LEFT-HAND FLOOR PANEL INTO THE FRONT HALF OF FLOOR FRAME. SLOT RIGHT-HAND FLOOR PANEL INTO THE FRONT HALF OF FLOOR FRAME.

#### TYPICAL SIX PIECE FLOORING WITH SUGGESTED SCREW LOCATIONS (20), MEASUREMENTS IN (MM)

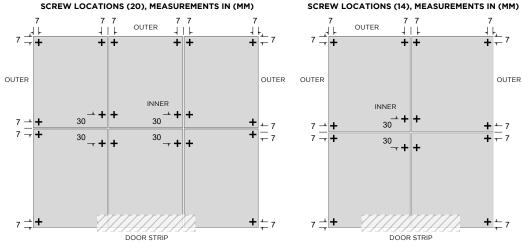


#### **ASSEMBLY STAGE 3**

MARK OUT FIXING SCREWS LOCATIONS

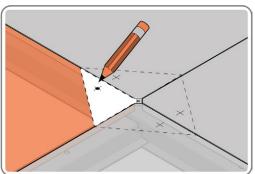

#### ASSEMBLY STAGE 4

LOCATE FIXING SCREW AND DRILL TO FLOOR

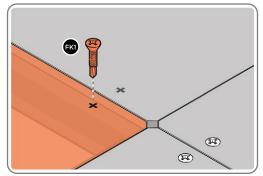

TYPICAL FOUR PIECE FLOORING WITH SUGGESTED

USE TEMPLATE BELOW TO MARK OUT SUGGESTED LOCATIONS FOR SECURING USE DRILL TO SECURE FIXING SCREW FKI TO EACH FLOOR PANEL MARKED. FLOOR TO BASE. (NOTE: ONLY MARK INNER CORNER PANELS - 7 X 30 MM)

#### **CUT OUT TEMPLATE GUIDE BELOW**

SHOWING SUGGESTED LOCATION HOLES FOR FIXING SCREWS (FK1), FOR DRILLING INTO FLOORING AND BASE.

