
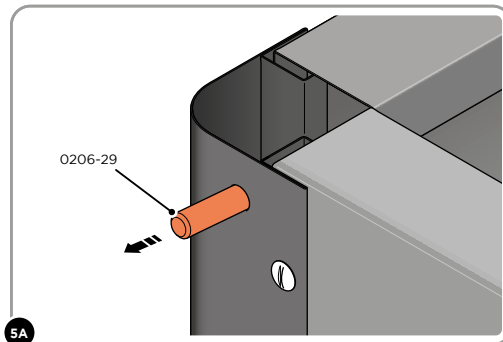



TB002 - Lock Backing Plate Addition

FINAL ASSEMBLY STAGE 5

SECURE 2 POINT CAM 0206-28 AND RODS 0206-29 ONTO T-HANDLE ASSEMBLY USING ASSEMBLY BOLT

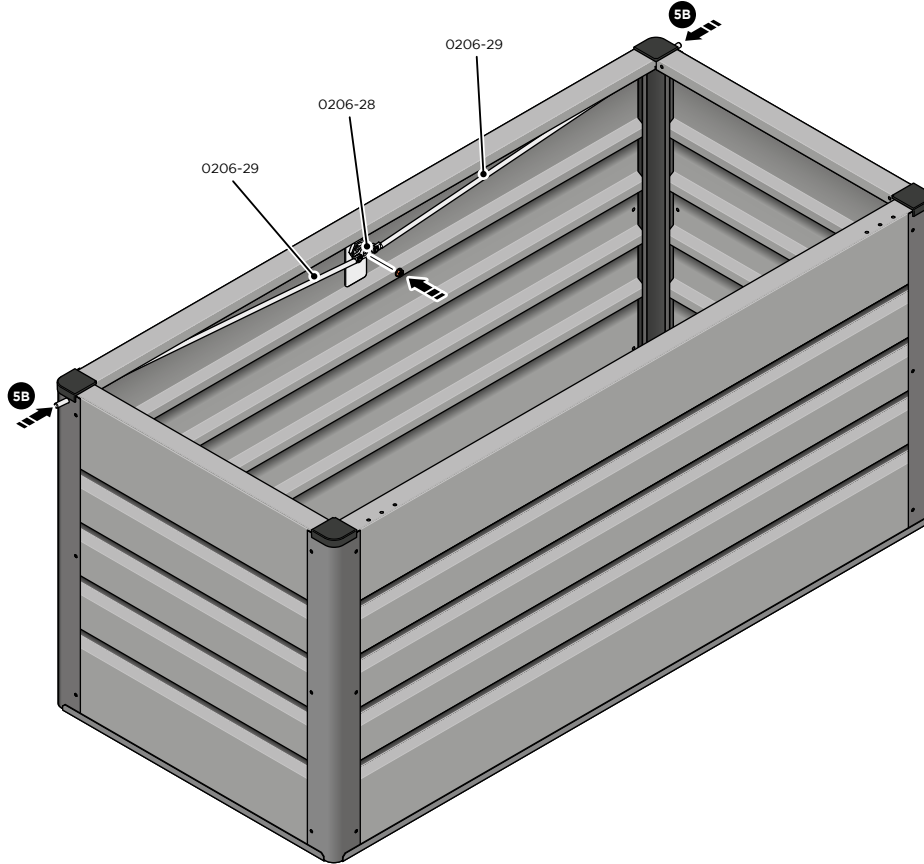

LOCATE RODS 0206-29 INTO CORNER POST APERTURES AS SHOWN.

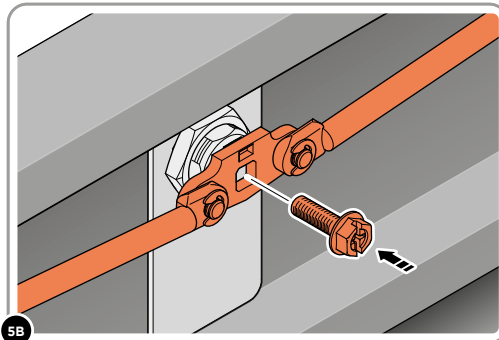

SECURE 2 POINT CAM 0206-28 ONTO T-HANDLE ASSEMBLY USING BOLT AS SHOWN ABOVE.




Chartley

Technical Bulletin TB002

Lock Backing Plate Addition

ASSEMBLY STAGE 1

LOCATE AND REMOVE BOLT FROM T-HANDLE ASSEMBLY 0206-19 AS SHOWN.

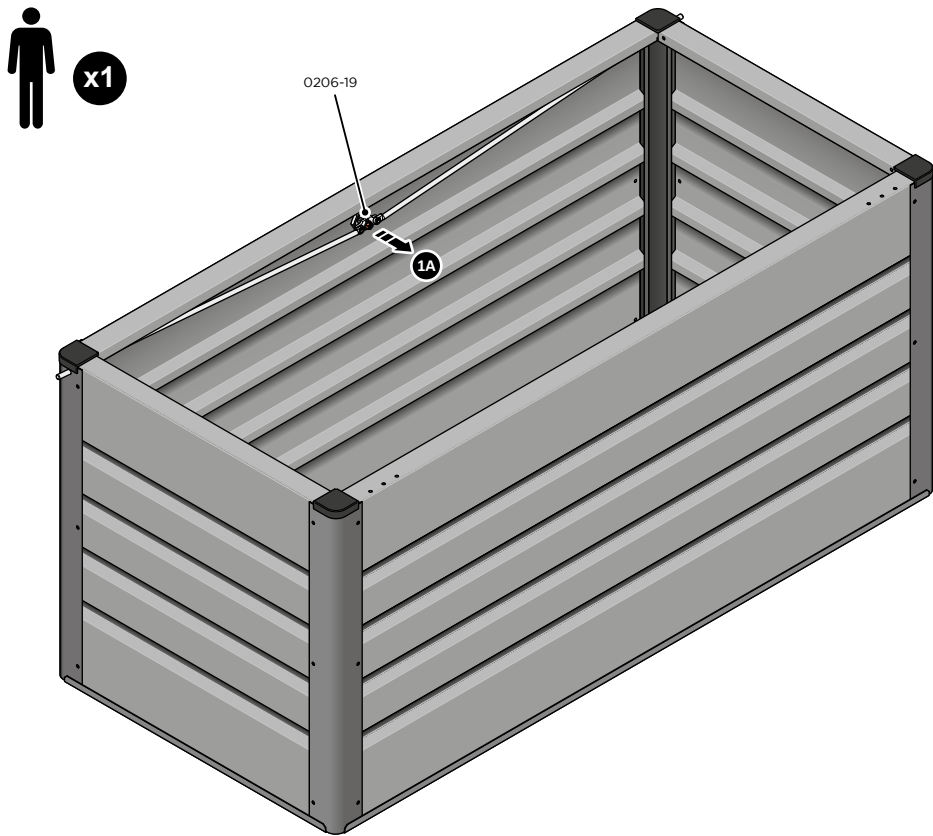

PERSONAL PROTECTION EQUIPMENT


WE ADVISE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT IS WORN DURING ASSEMBLY INCLUDING EYE PROTECTION AND GLOVES.

Eye Protection

Gloves

ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ON ASSEMBLY PROCEDURE


NEW FIXING KIT
PART REF: 0206-41
LOCK BACKING PLATE
Qty: x1

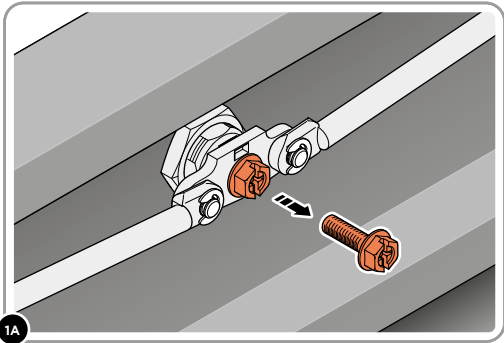


LOCATE AND REMOVE BOLT FROM T-HANDLE ASSEMBLY 0206-19 AS SHOWN.

ASSEMBLY STAGE 2

REMOVAL OF 2 POINT CAM 0206-28 AND RODS 0206-29 AS SHOWN.

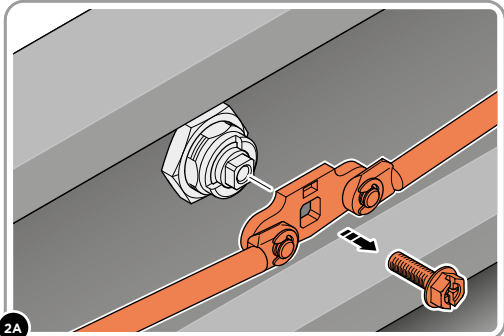


REMOVE 2 POINT CAM 0206-28 FROM T-HANDLE ASSEMBLY AS SHOWN.

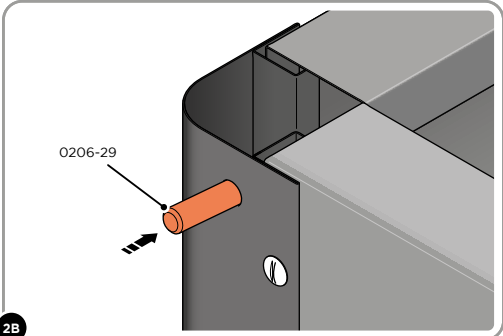


REMOVE RODS 0206-29 FROM CORNER POST APERTURES AS SHOWN.

ASSEMBLY STAGE 3

REMOVE NUT FROM T-HANDLE ASSEMBLY AS SHOWN.

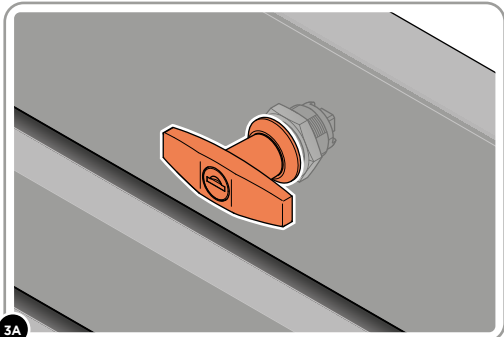


IMPORTANT: LOCATE AND HOLD T-HANDLE, BEFORE LOCATING NUT ON OPPOSITE SIDE OF PANEL (PART OF 0206-19 ASSEMBLY).

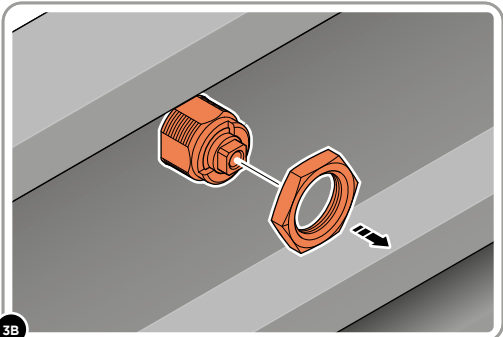


REMOVE NUT FROM T-HANDLE ASSEMBLY AS SHOWN ABOVE.

ASSEMBLY STAGE 4

LOCATE AND SECURE LOCK BACKING PLATE 0206-41 TO T-HANDLE AS SHOWN.

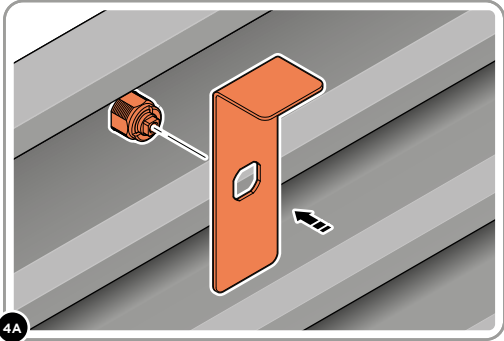

LOCATE AND SECURE LOCK BACKING PLATE 0206-41 TO T-HANDLE AS SHOWN.

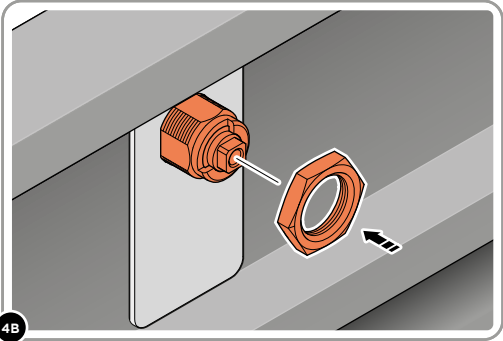

SECURE T-HANDLE AND LOCK BACKING PLATE 0206-41 USING NUT AS SHOWN.