# **Alton**



Large Metal Storage Apex Shed Assembly Guide

8 x 8 ft (2.4 x 2.4 m)



### IMPORTANT: PLEASE REGISTER YOUR HEX LIVING PRODUCT AFTER ASSEMBLY

Using the unique serial number, simply register your product at www.hexliving.co.uk or use the QR code above to access the HEX Living lifetime warranty and online support.

> Affix Serial Number HERE





#### PLEASE READ THIS DOCUMENT FULLY PRIOR TO STARTING ASSEMBLY PROCEDURE

The objective of this instruction is to illustrate the recommended assembly sequence for this product, any deviation from this will be the sole responsibility of whoever carries out the assembly.

#### IMPORTANT: IT IS ADVISABLE THAT THE PRODUCT IS ASSEMBLED AT, OR AS CLOSE AS POSSIBLE TO WHERE IT WILL BE FINALLY LOCATED

Ensure there is adequate clearance where the product is to be located:

Exterior dimensions including overhang (L x W x H) 2400 x 2490 x 2220mm

 Footprint dimensions (L x W)
 2300 x 2300mm

 Clearance required for door to open (W x H)
 Doors open outwards 1454 x 1820mm

#### TWO PERSON ASSEMBLY

Most procedures will not require two people but it may be easier to have assistance.



#### PERSONAL PROTECTION EQUIPMENT

We advise appropriate personal protective equipment is worn during assembly including eye protection and gloves.





rotection Gloves

#### CARING FOR YOUR HEX LIVING PRODUCT

- Your **HEX Living** product is designed to stand the test of time, which is why we're happy to offer a lifetime warranty on our products. With zero maintenance required, simply assemble your HEX Living product and enjoy putting it to great use in your garden.
- Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:
- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will ensure dirt or mud simply wines away
- If your product has guttering, remove leaves and garden debris as you would on your home.

#### WARNINGS AND ADVISORIES

Do not try to install the shed alone. If the shed falls, it could cause serious injuries and damages!

Select a dry and calm day for your assembly, do not try to install this product in windy conditions!

Please read the manual carefully before assembling, (we recommend keeping the manual for future use).

Me advise a flat hard floor surface, preparing suitable area for assembly.

- Place all parts out carefully, ideally on a soft surface to protect parts from getting damaged.
- Please check part quantities before assembling, contact customer service if any parts are missing or damaged.

#### PRODUCT REGISTRATION

 $\triangle$ 

**IMPORTANT:** Thank you for purchasing our **Hixon Shed**, ensure you have registered your HEX Living product using the unique serial number found on the cover of this document, please visit **www.hexliving.co.uk** to register your product and access the HEX Living lifetime warranty.

#### **GROUND ANCHOR KIT**

A Ground Anchor Kit is supplied, this is to secure the product to a solid concrete base, the shed has x4 clamp plates in each corner.




We strongly adviseThat the Shed is anchored using this kit.

The diagram illustrates the typical fixing method, once the shed is assembled, access the clamp brackets by removing the appropriate floor panel and secure as required.

#### **GROUND ANCHOR KIT 0205-56**

Part Ref: FK8 M8 x 50mm Coach Screw Qty: x8




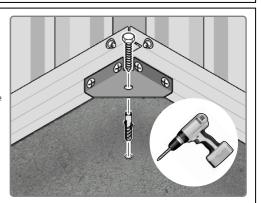



İ


#### ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE


SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

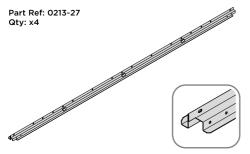


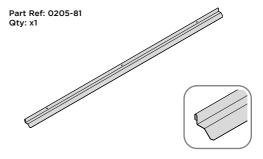

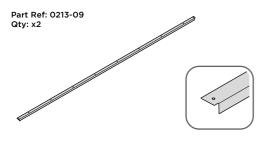

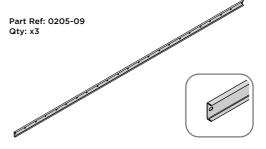

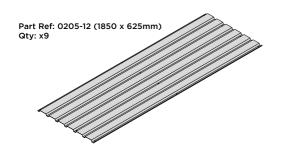


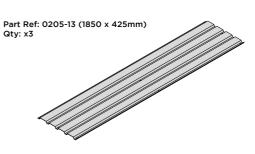








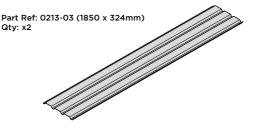

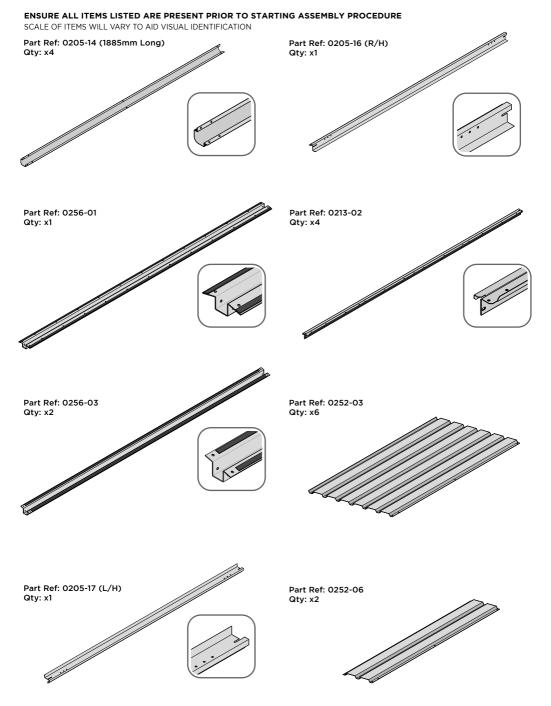


#### ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE


SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

Part Ref: 0252-04

Qty: x4





Part Ref: 0256-06

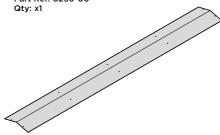

Part Ref: 0252-14


Qty: x2

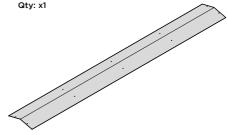

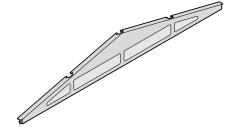

Part Ref: 0244-11

Qty: x2



Part Ref: 0244-16

Qty: x3




Part Ref: 0256-05

Qty: x2

Part Ref: 0252-07

Qty: x2




Part Ref: 0252-11

Qty: x4




#### ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING ASSEMBLY PROCEDURE

SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

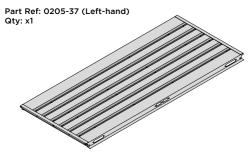



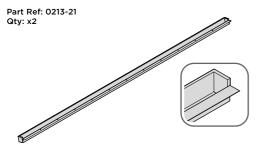

SHELF & RAIL KIT 0205-BLACK-SRH

Part Ref: 0205-38-01 Qty: x2

Part Ref: 0205-38-02 Qty: x2

TOOL HANGER KIT 0205-BLACK-TH

Part Ref: 0205-39 Qty: x2



#### ENSURE ALL ITEMS LISTED ARE PRESENT PRIOR TO STARTING OF ASSEMBLY PROCEDURE

SCALE OF ITEMS WILL VARY TO AID VISUAL IDENTIFICATION

Part Ref: 0203-03 Qty: x4



Part Ref: 0203-41 Qty: x1



Part Ref: 0203-15 Qtv: x4



Part Ref: 0205-57 Qtv: x4



Part Ref: 0203-28 (L/H Assembly) Qty: x2





Part Ref: 0203-27 (R/H Assembly) Qty: x2





Part Ref: 0203-32 (Assembly)

Qtv: x1





Part Ref: 0205-53 Qtv: x1

**FIXING KIT 0213-18** 

Part Ref: 0205-68

Part Ref: 0205-52




Part Ref: 0203-33 (Assembly) Qty: x1



Qty: x363







Part Ref: 0203-34 (Assembly) Qty: x1

Part Ref: FK2 No.8 x 13mm Eco Fix Qty: x25



Part Ref: 0203-35 Qty: x2

Part Ref: FK3



M4 x 12mm C'Sunk Pozi Pan Qty: x34



Part Ref: 0203-36 Qty: x1

Part Ref: FK4 M4 Rubber Washer Qty: x62



Part Ref: FK5 M4 Serrated Flange Nut



Part Ref: 0203-37 Qty: x4

Qty: x377 Part Ref: FK6



Part Ref: 0203-39

M8 Serrated Flange Nut



Qty: x4

Qty: x5

Part Ref: 0203-40 Qty: x4

**GROUND ANCHOR KIT: 0205-56** 

Part Ref: FK7 **Expansion Plug** Qty: x8



Part Ref: FK8 M8 x 50mm Coach Screw Qty: x8



Part Ref: 0203-57

Qty: x4

#### A STEP-BY-STEP GUIDE

AS MANY OF OUR SHEDS UTILISE COMMON PARTS, WE TOOK THE DECISION TO RESTRUCTURE THE PACKING INTO SMALLER AND LIGHTER BOXES. THE OVERALL AIM WAS TO SIMPLIFY THE PROCESS OF LOCATING THE CORRECT PARTS DURING THE SHED BUILDING PROCESS.

FOR IDENTIFICATION PURPOSES EACH BOX HAS A **UNIQUE ID CODE**, THE LIST BELOW SHOWS WHAT ORDER THESE SHOULD BE OPENED WHEN BUILDING YOUR SHED:

F\* - FLOOR RAILS (INC. FIXING KIT)

P\* - CORNER POSTS

W\* - WALL PANELS (TYPICALLY THREE BOXES)

I\* - INFILL PANELS

T\* - ROOF TRIM


R\* - ROOF PANELS

D\* - DOORS



#### **EXAMPLE ID LABEL**


EACH BOX IS CLEARLY LABELLED WITH A WHITE STICKER AS PER EXAMPLE BELOW. THIS CONTAINS THE FOLLOWING USEFUL INFORMATION.

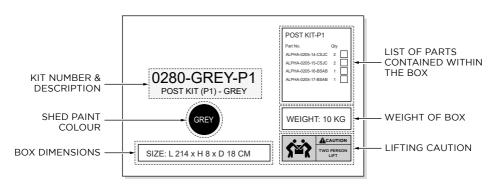


## ALSO THINK ABOUT HOW TO MAINTAIN YOUR WORKSPACE


- DURING THE SHED BUILDING PROCESS, WE WOULD RECOMMEND KEEPING UNUSED BOXES AWAY FROM THE ASSEMBLY AREA TO REDUCE CLUTTER.
- WHILST THE BOXES AND INTERNAL PACKAGING OFFER GREAT PROTECTION, PLEASE ENSURE THE ASSEMBLY AREA IS KEPT CLEAN AND FREE OF DEBRIS.
- 3. CAREFULLY REVIEW YOUR HEX LIVING ASSEMBLY GUIDE, PRIOR TO STARTING THE SHED ASSEMBLY.

LOCATE AND SECURE A CORNER BRACE 0213-27 AT EACH LOCATION INDICATED.

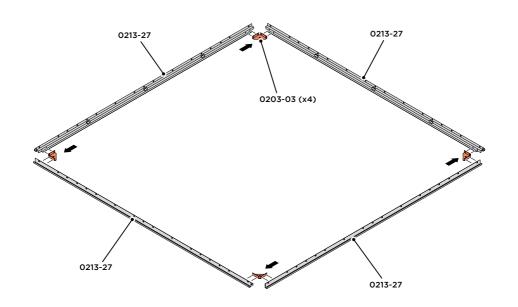

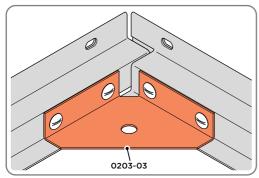


SECURE EACH CORNER BRACE 0203-03 AS SHOWN ABOVE.

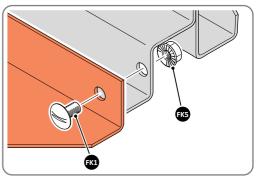



PLEASE NOTE: SECTION VIEW OF TYPICAL FIXING METHOD.


LOCATE AND LOOSELY ATTACH WALL PANEL 0213-03 (1850 x 324mm).



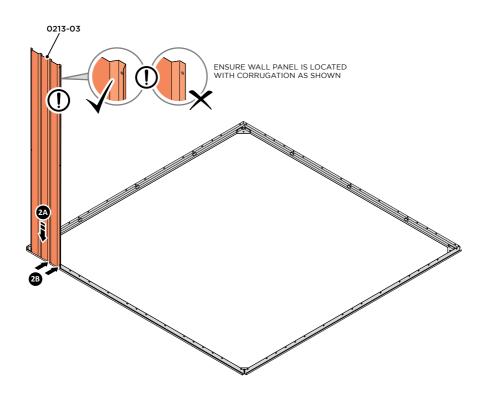

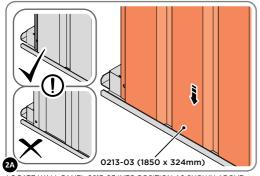




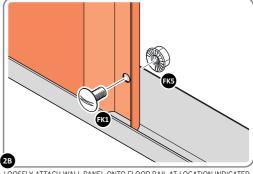



LOOSELY ATTACH WALL PANEL ONTO FLOOR RAIL AT LOCATION INDICATED.


LOCATE AND LOOSELY ATTACH CORNER POST 0205-14.



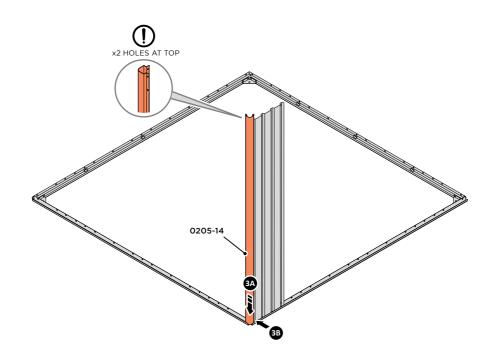

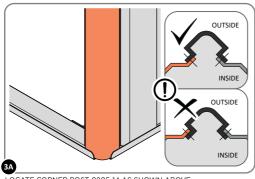





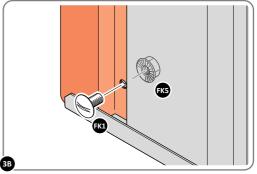


LOOSELY ATTACH CORNER POST AT LOCATION INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 ONTO WALL PANEL.

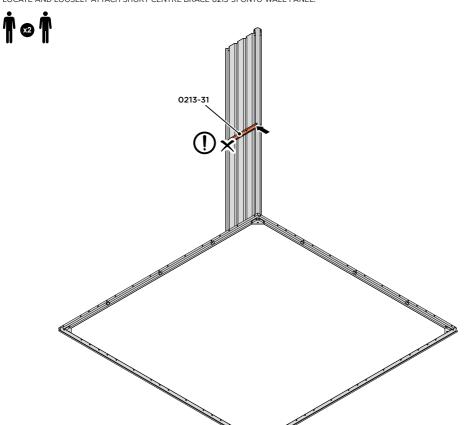

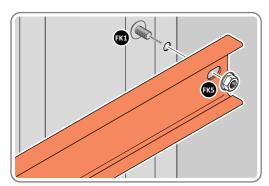


LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 AS SHOWN AT LOCATION INDICATED ABOVE.

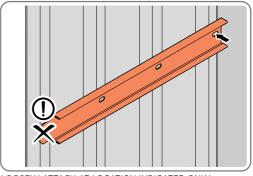


LOOSELY ATTACH AT LOCATION INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

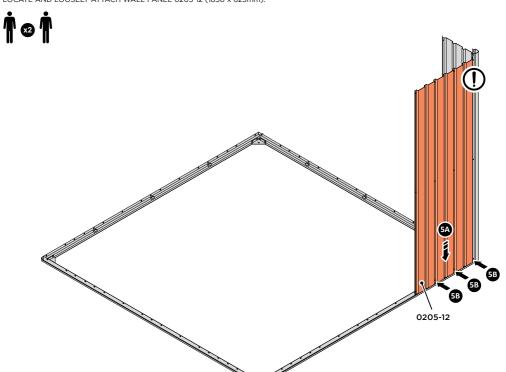

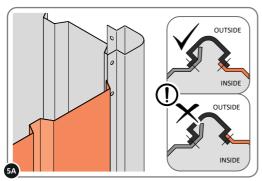


LOCATE FIRST WALL PANEL 0205-12 (1850 x 625mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

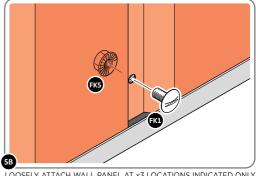


LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09.

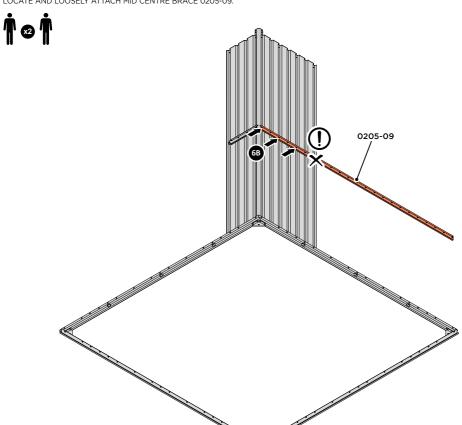

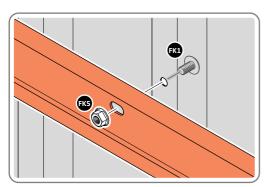


LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09 AS SHOWN AT x3 LOCATIONS INDICATED ABOVE.

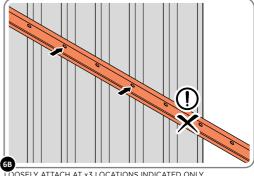



LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

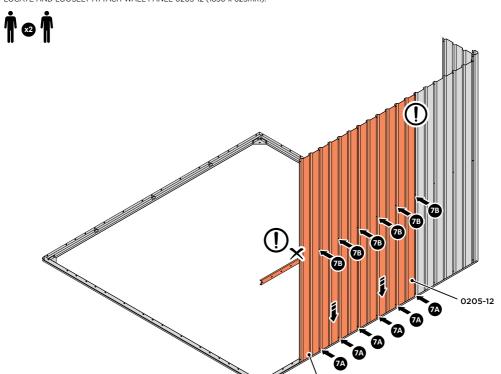

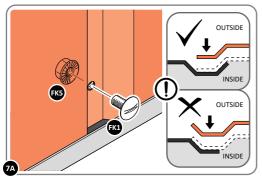




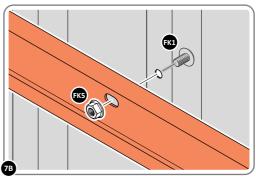


LOOSELY ATTACH AT LOCATIONS INDICATED ONLY.


0205-12


LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

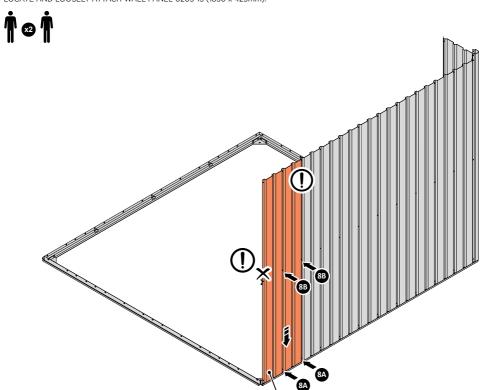

0205-13

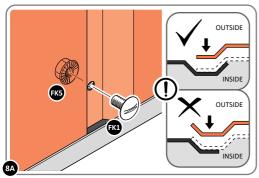




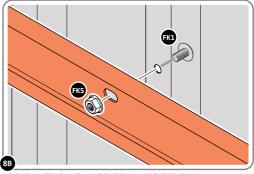


LOOSELY ATTACH AT x2 LOCATIONS INDICATED ONLY.


LOCATE AND LOOSELY ATTACH CORNER POST 0205-14.



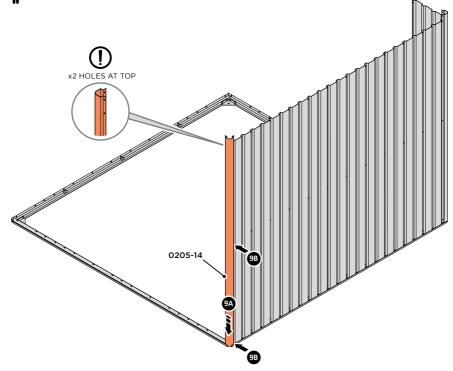

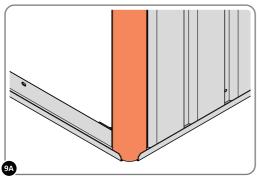



LOCATE CORNER POST 0205-14 AS SHOWN ABOVE.

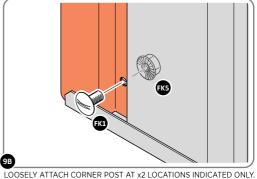


LOOSELY ATTACH CORNER POST AT X2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

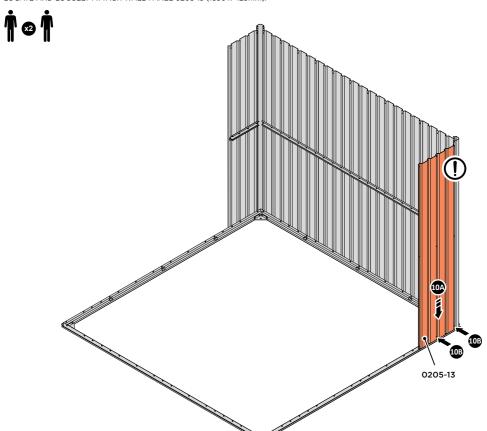

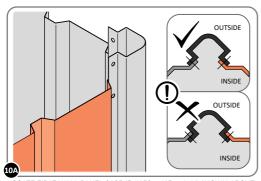



LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

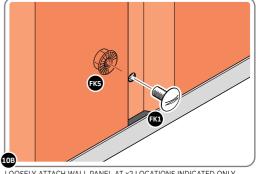


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY.
IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

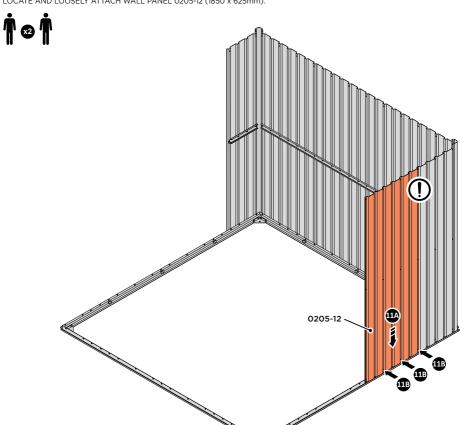

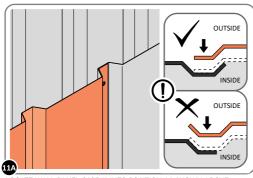


LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

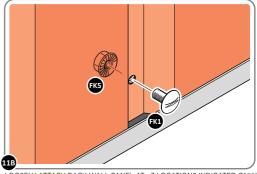


LOOSELY ATTACH BACK WALL PANEL AT x3 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.

LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-09

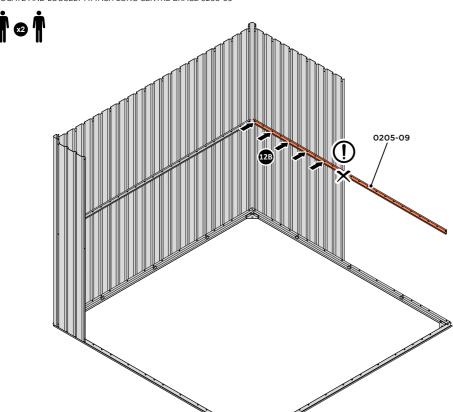

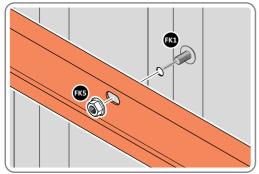


LOCATE AND LOOSELY ATTACH LONG CENTRE BRACE 0205-09 AS SHOWN AT x5 LOCATIONS INDICATED ABOVE.

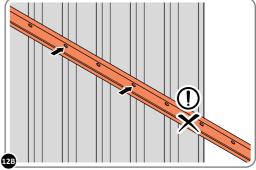



LOOSELY ATTACH AT x5 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

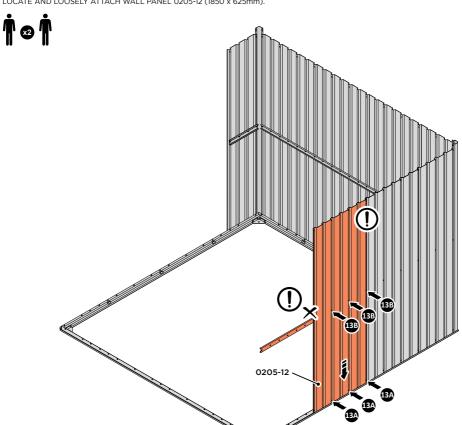

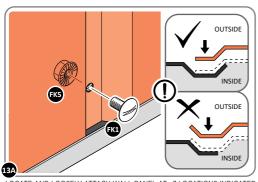





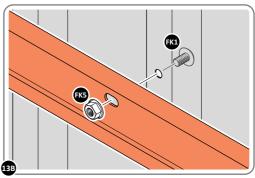



LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

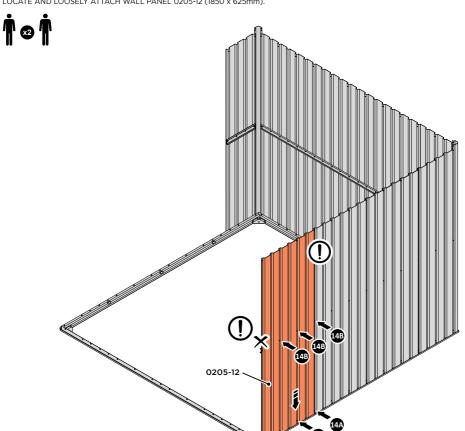

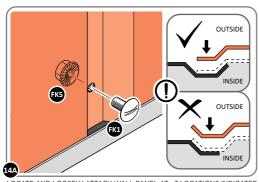




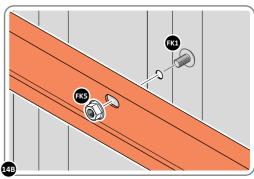



LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.


14A

LOCATE AND LOOSELY ATTACH CORNER POST 0205-14 (1885mm).

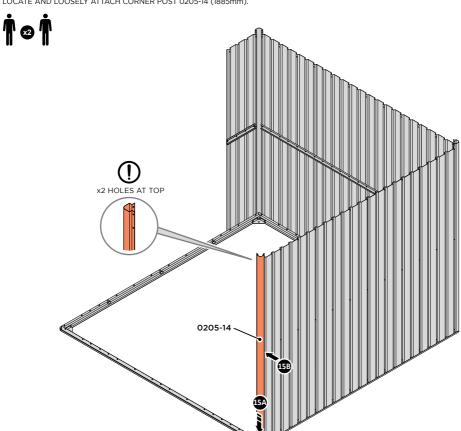

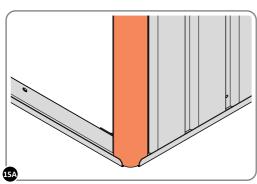





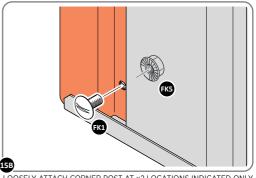


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-13 (1850 x 425mm).

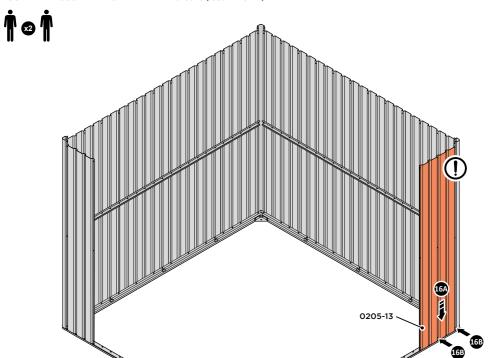

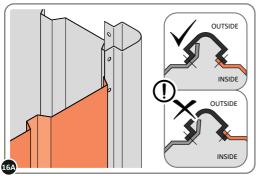

LOCATE FIRST WALL PANEL 0205-13 (1850 x 425mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

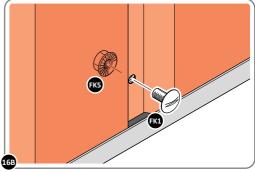



LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY.

IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.


LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).



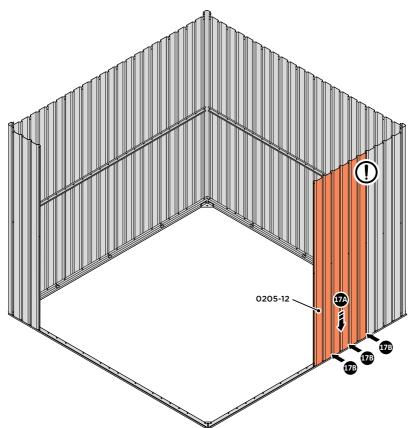

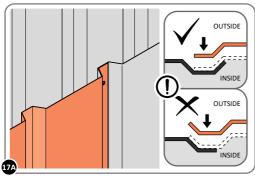

LOCATE WALL PANEL 0205-12 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

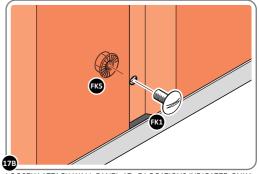



LOOSELY ATTACH WALL PANEL AT x3 LOCATIONS INDICATED ONLY.

IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.


LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09.



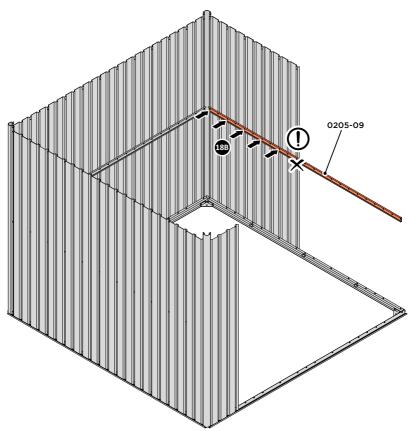

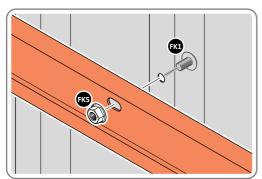


LOCATE AND LOOSELY ATTACH MID CENTRE BRACE 0205-09 AS SHOWN AT x5 LOCATIONS INDICATED ABOVE.

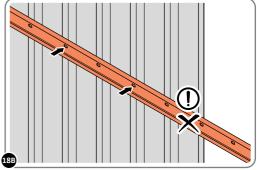



LOOSELY ATTACH AT X5 LOCATIONS INDICATED ONLY.


IMPORTANT: DO NOT SECURE AT OUTER FIXING POINT INDICATED.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

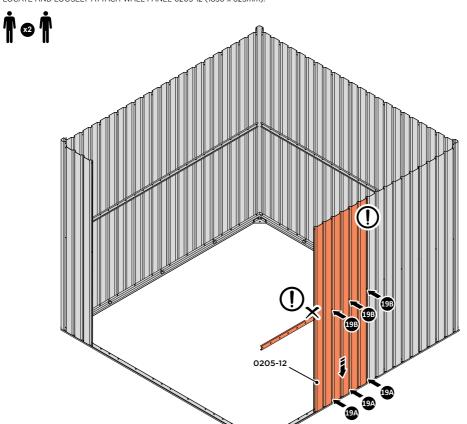

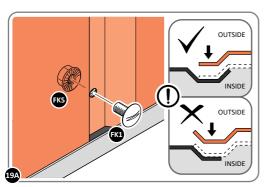





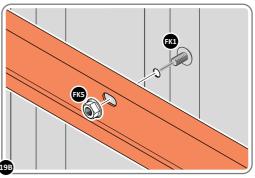



LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.

LOCATE AND LOOSELY ATTACH WALL PANEL 0205-12 (1850 x 625mm).

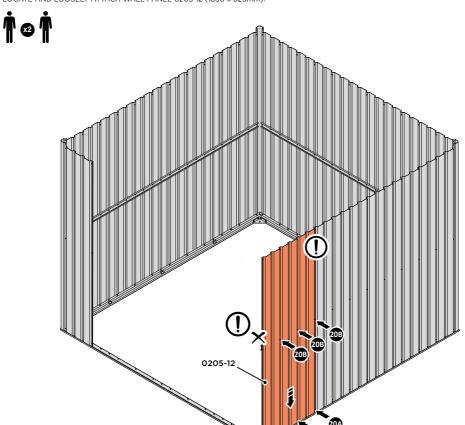

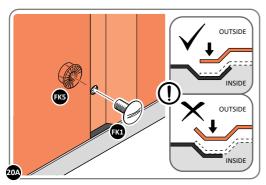




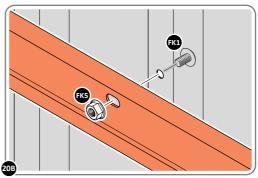



LOOSELY ATTACH AT x3 LOCATIONS INDICATED ONLY.


LOCATE AND LOOSELY ATTACH CORNER POST 0205-14.



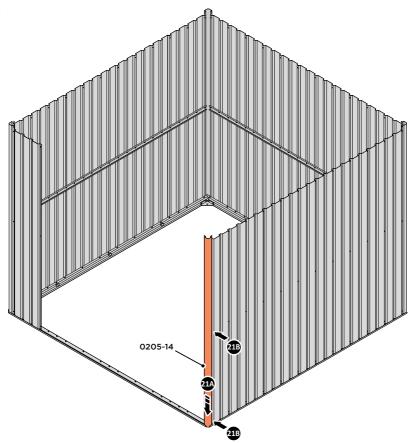

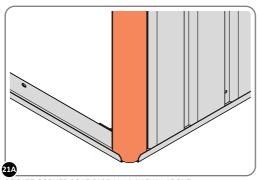





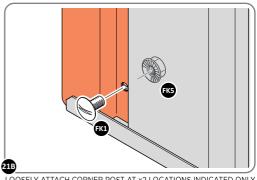


LOOSELY ATTACH CORNER POST AT x2 LOCATIONS INDICATED ONLY. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH WALL PANEL 0213-03 (1850 x 324mm).

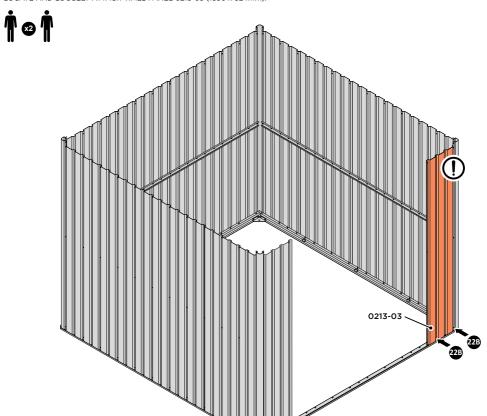

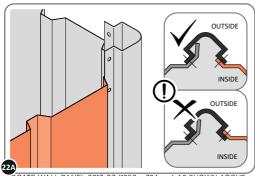


LOCATE WALL PANEL 0213-03 (1850 x 324mm) AS SHOWN ABOVE. IMPORTANT: ENSURE PANEL IS IN THE CORRECT ORIENTATION.

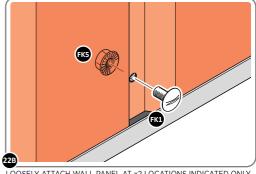


LOOSELY ATTACH WALL PANEL AT x2 LOCATIONS INDICATED ONLY.

IMPORTANT: DO NOT SECURE ANY FIXING POINTS OTHER THAN THOSE INDICATED.


LOCATE AND LOOSELY ATTACH DOOR POST 0205-16.
LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 ONTO WALL PANEL AND DOOR POST.

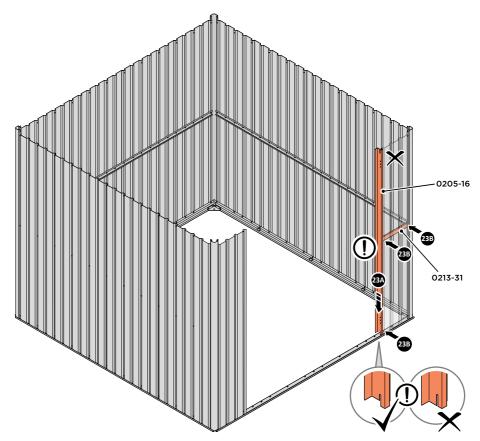

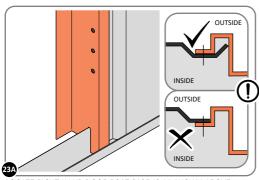

LOCATE RIGHT-HAND DOOR POST 0205-16 AS SHOWN ABOVE.


IMPORTANT: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

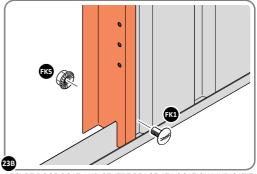


SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED.


IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH DOOR POST 0205-17.
LOCATE AND LOOSELY ATTACH SHORT CENTRE BRACE 0213-31 ONTO WALL PANEL AND DOOR POST.

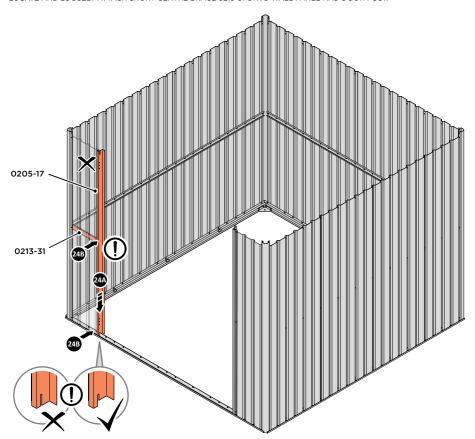

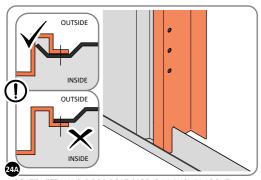



LOCATE LEFT-HAND DOOR POST 0205-17 AS SHOWN ABOVE. **IMPORTANT**: ENSURE DOOR POST IS IN THE CORRECT ORIENTATION.

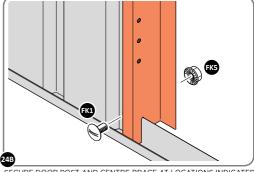



SECURE DOOR POST AND CENTRE BRACE AT LOCATIONS INDICATED. IMPORTANT: DO NOT SECURE AT UPPER FIXING POINT AT THIS STAGE.

LOCATE AND LOOSELY ATTACH SHORT ROOF RAIL 0213-02.

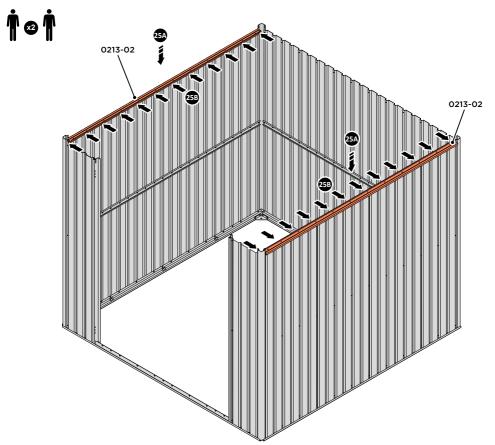

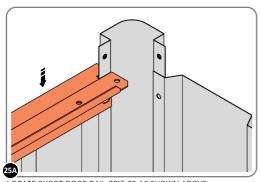





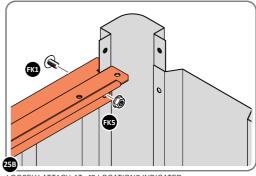


LOOSELY ATTACH AT x12 LOCATIONS INDICATED.

LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0213-02.

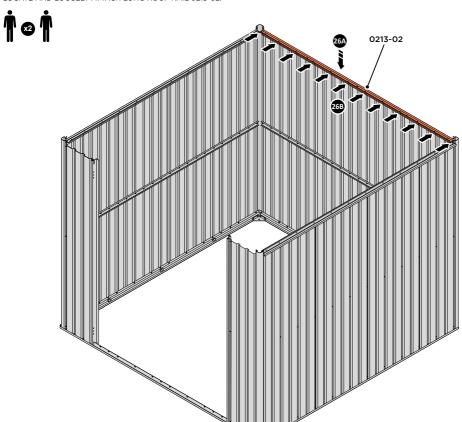

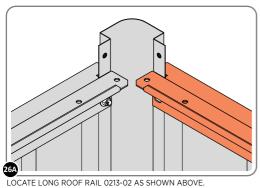





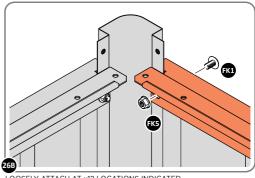



LOOSELY ATTACH AT x12 LOCATIONS INDICATED.

LOCATE AND LOOSELY ATTACH LONG ROOF RAIL 0213-02.

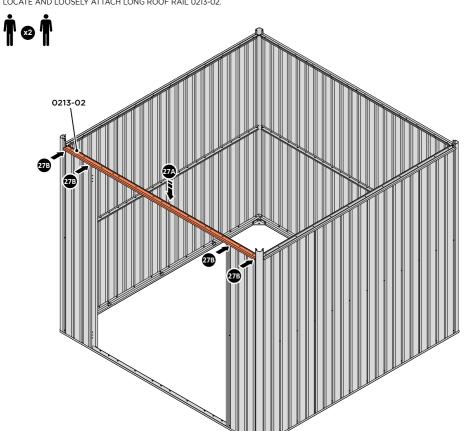

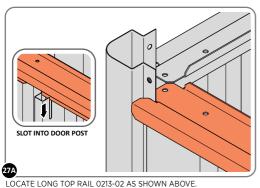




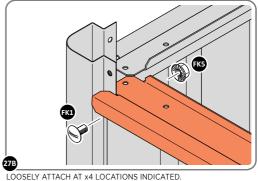


#### **ASSEMBLY STAGE 28**

LOCATE GROUND ANCHOR BRACKETS 0205-57.

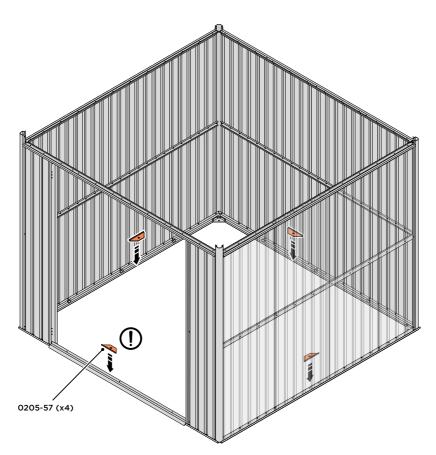





THESE BRACKETS ARE SECURED USING GROUND ANCHOR KIT ONCE THE SHED WALL PANELS ARE FULLY ASSEMBLED (SEE PAGE 'I')

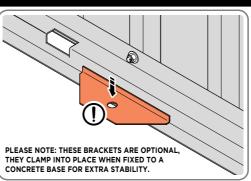


LOCATE x4 GROUND ANCHOR BRACKETS 0205-57 AS SHOWN ABOVE, THESE ALLOW FOR FIXING TO A CONCRETE BASE AT A LATER STAGE IF DESIRED.

LOCATE AND SECURE DOOR STRIP 0205-81.

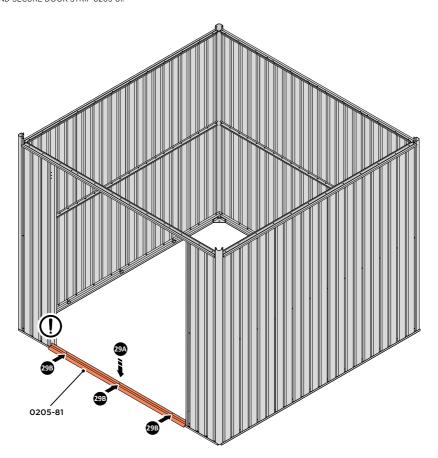

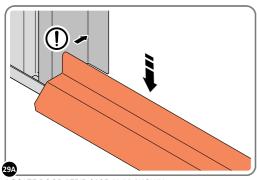


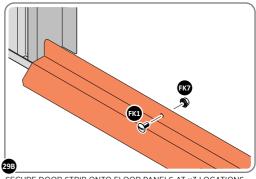


LOCATE DOOR STRIP 0205-81 AS SHOWN.

SECURE DOOR STRIP ONTO FLOOR PANELS AT x3 LOCATIONS IMPORTANT: ENSURE DOOR STRIP IS PUSHED AGAINST DOOR POST RETURN.


SECURE DOOR STRIP ONTO FLOOR PANELS AT x3 LOCATIONS INDICATED, USE EXISTING HOLE AS A LOCATION GUIDE.

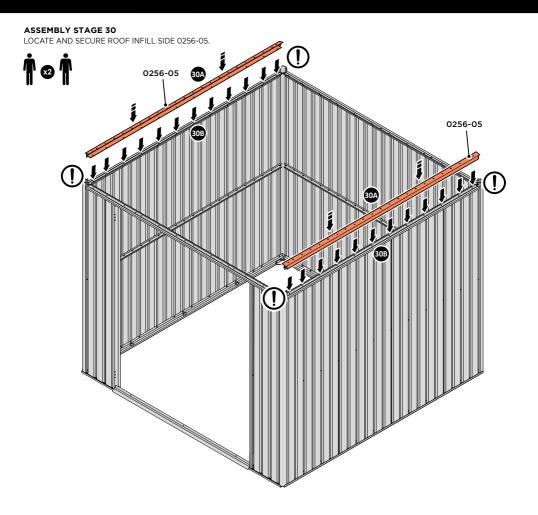


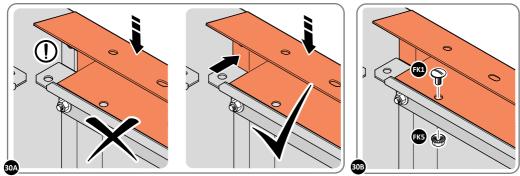

LOCATE AND SECURE ROOF SIDE INFILL 0256-05 AT x12 LOCATIONS INDICATED AS SHOWN ABOVE ON EACH SIDE.

IMPORTANT: ENSURE ROOF SIDE INFILL 0256-05 IS FITTED ON THE INSIDE AND NOT ON THE OUTSIDE AS ILLUSTRATED ABOVE.

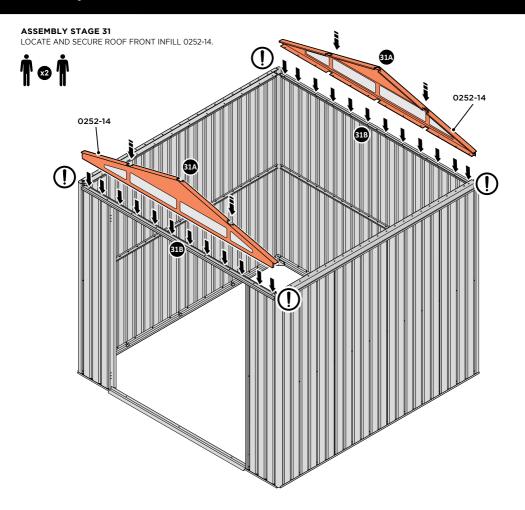


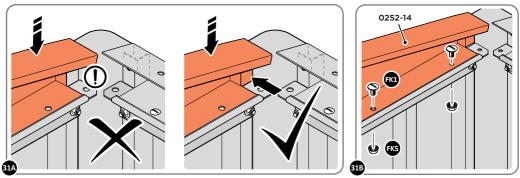


LOCATE AND SECURE WINDOW ASSEMBLY 0252-14 AT LOCATIONS INDICATED AS SHOWN ABOVE.


IMPORTANT: ENSURE WINDOW ASSEMBLY 0252-14 IS FITTED ON THE INSIDE AND NOT ON THE OUTSIDE AS ILLUSTRATED ABOVE.

LOCATE AND EACH CORNER BRACKET 0203-15 TO ROOF INFILL AT FOUR LOCATIONS.

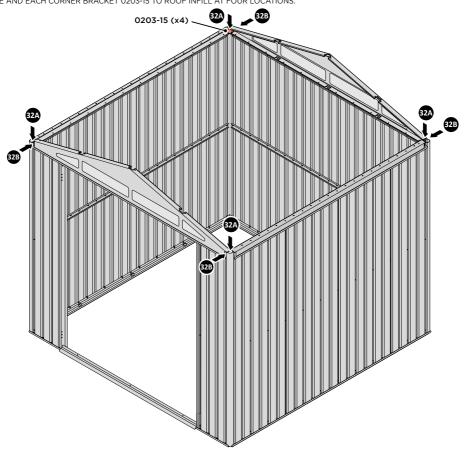

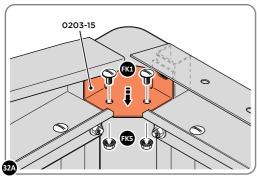

SECURE EACH CORNER BRACKET 0203-15 TO ROOF INFILLS AT LOCATIONS INDICATED AS SHOWN ABOVE.

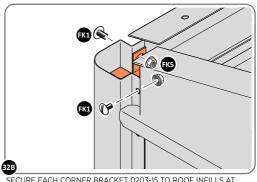



SECURE EACH CORNER BRACKET 0203-15 TO ROOF INFILLS AT LOCATIONS INDICATED AS SHOWN ABOVE.


# Assembly Guide

# **ASSEMBLY STAGE 33**

LOCATE AND SECURE ROOF SUPPORTS 0252-07 AND 0252-11.

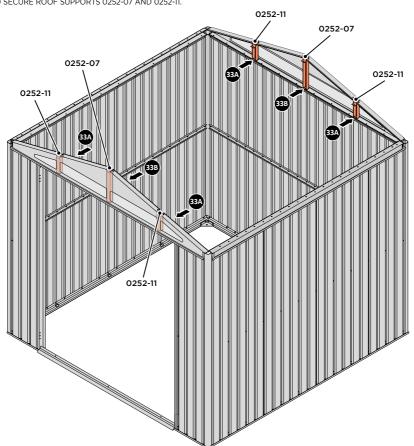

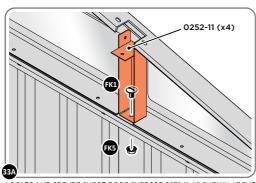


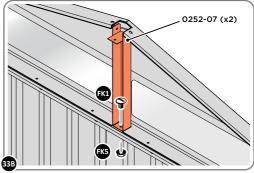


LOCATE AND SECURE SHORT ROOF SUPPORT 0252-11 AS SHOWN ABOVE.


LOCATE AND SECURE LONG ROOF SUPPORT 0252-07 AS SHOWN ABOVE.

LOCATE AND SECURE ROOF CHANNEL ASSEMBLY 0256-03.

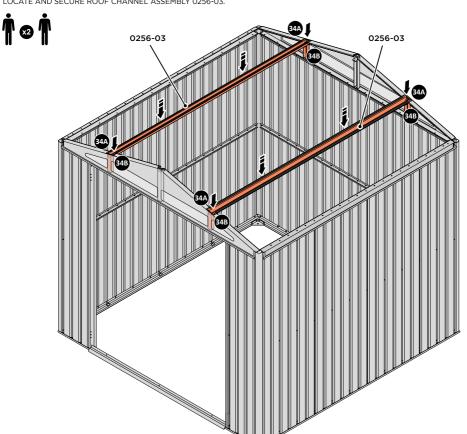


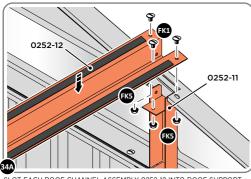


SLOT EACH ROOF CHANNEL ASSEMBLY 0252-12 INTO ROOF SUPPORT. FIXING POINT (x3 EACH SIDE) USING FASTENERS DETAILED ABOVE.

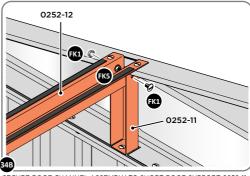


SECURE ROOF CHANNEL ASSEMBLY TO SHORT ROOF SUPPORT 0252-11 FIXING POINT (x2 EACH SIDE) USING FASTENERS DETAILED ABOVE.

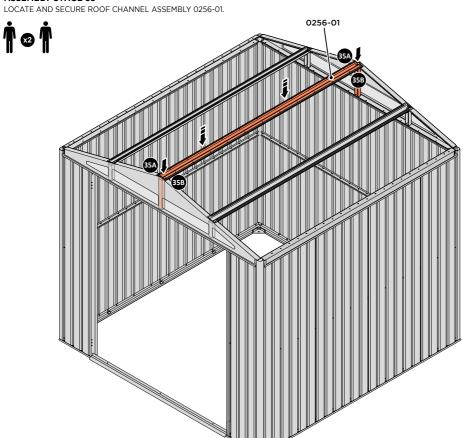

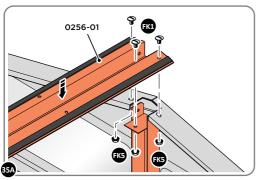


SLOT ROOF CHANNEL ASSEMBLY 0252-01 INTO ROOF SUPPORT. FIXING POINT (x3 EACH SIDE) USING FASTENERS DETAILED ABOVE.

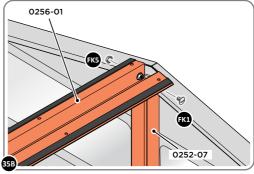


SECURE ROOF CHANNEL ASSEMBLY TO LONG ROOF SUPPORT 0252-07 FIXING POINT (x2 EACH SIDE) USING FASTENERS DETAILED ABOVE.

LOCATE AND SECURE ROOF PANEL 0252-03.




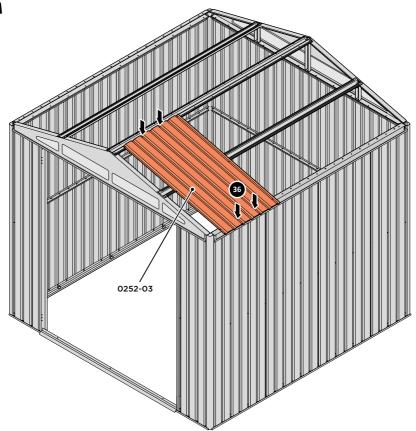


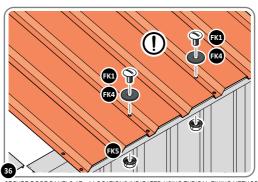


SECURE ROOF PANELS AT x4 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

LOCATE AND SECURE ROOF PANEL SIDE 0252-04.

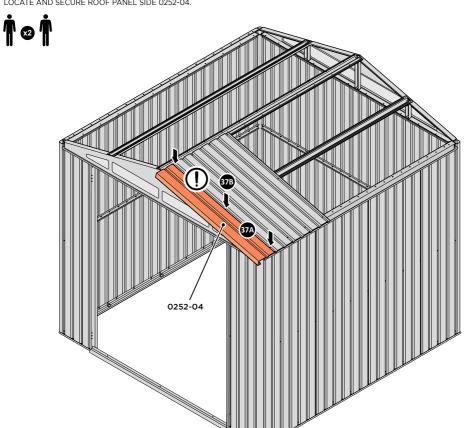


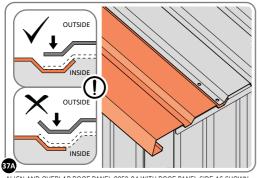


ALIGN AND OVERLAP ROOF PANEL 0252-04 WITH ROOF PANEL SIDE AS SHOWN. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

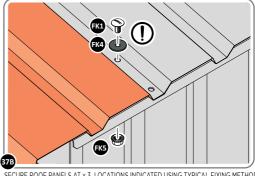


SECURE ROOF PANELS AT x 3 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

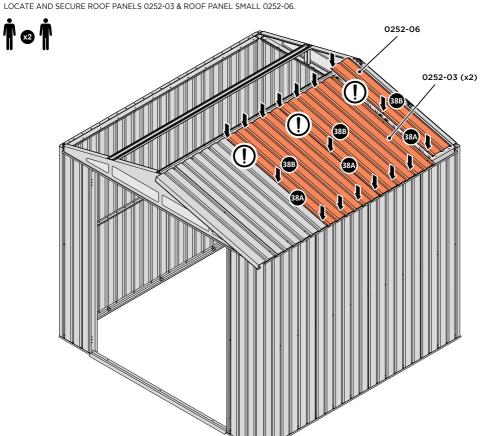


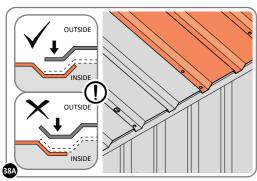


ALIGN AND OVERLAP ROOF PANEL WITH PREVIOUS ROOF PANEL IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

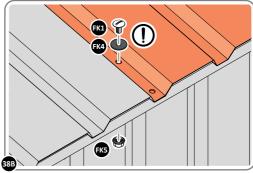


SECURE ROOF PANELS AT LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

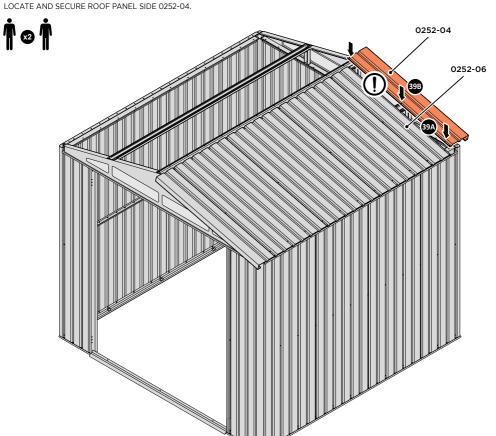

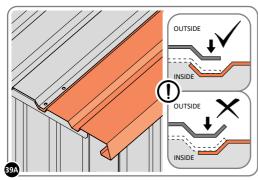


ALIGN AND OVERLAP ROOF PANEL 0252-04 WITH ROOF PANEL SIDE AS SHOWN. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

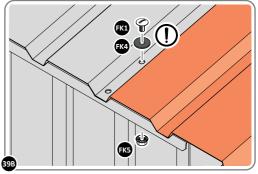


SECURE ROOF PANELS AT x 3 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

LOCATE AND SECURE ROOF PANEL 0252-03.




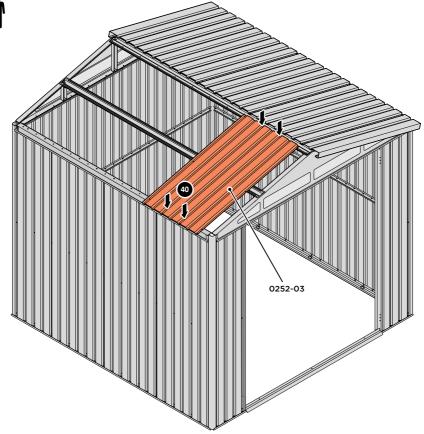


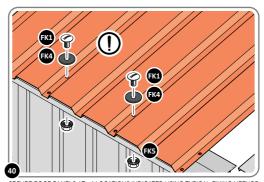

SECURE ROOF PANELS AT x4 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.


LOCATE AND SECURE ROOF PANEL SIDE 0252-04.

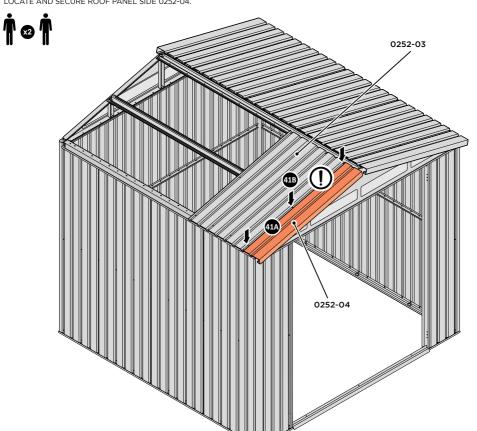

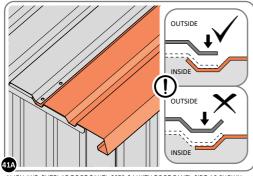


ALIGN AND OVERLAP ROOF PANEL 0252-04 WITH ROOF PANEL SIDE AS SHOWN.


IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

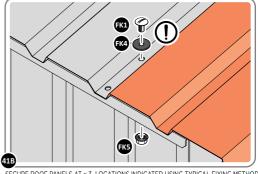


SECURE ROOF PANELS AT x 3 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

LOCATE AND SECURE ROOF PANELS 0252-03 & ROOF PANEL SMALL 0252-06.

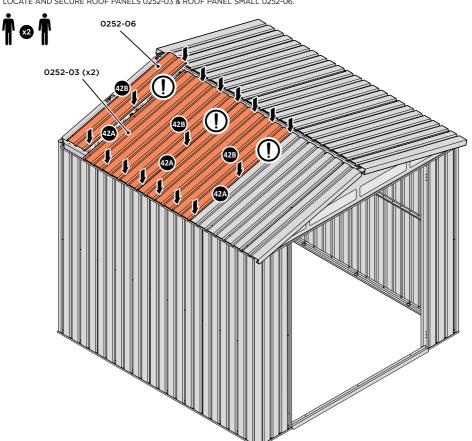

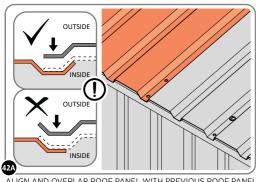


ALIGN AND OVERLAP ROOF PANEL WITH PREVIOUS ROOF PANEL. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

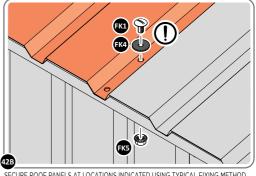


SECURE ROOF PANELS AT LOCATIONS INDICATED USING TYPICAL FIXING METHOD.


IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

LOCATE AND SECURE ROOF PANEL SIDE 0252-04.

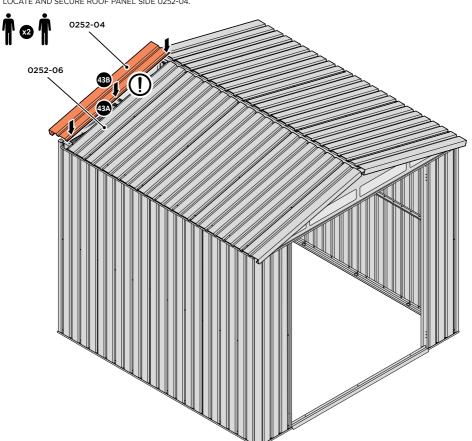

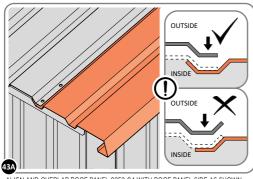



ALIGN AND OVERLAP ROOF PANEL 0252-04 WITH ROOF PANEL SIDE AS SHOWN. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP AS SHOWN.

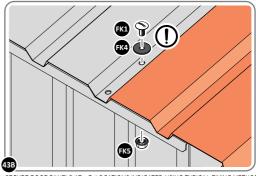


SECURE ROOF PANELS AT x 3 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

LOCATE AND SECURE ROOF RIDGE BRACKET 0244-16 TO ROOF RIDGE 0256-06. LOCATE AND SECURE ROOF RIDGE 0256-06 TO ROOF

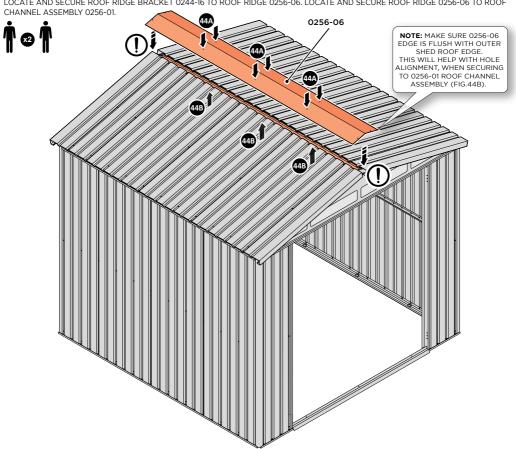

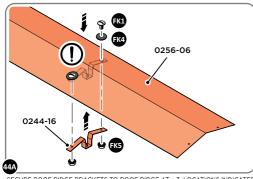



SECURE ROOF RIDGE BRACKETS TO ROOF RIDGE AT x 3 LOCATIONS INDICATED. IMPORTANT: ENSURE RUBBER WASHER FK4 IS LOCATED AS SHOWN.

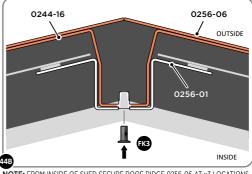



NOTE: FROM INSIDE OF SHED SECURE ROOF RIDGE 0256-06 AT x3 LOCATIONS INDICATED USING TYPICAL FIXING METHOD.

LOCATE AND SECURE ROOF RIDGE CAPS 0244-11 TO ROOF RIDGE 0256-06.

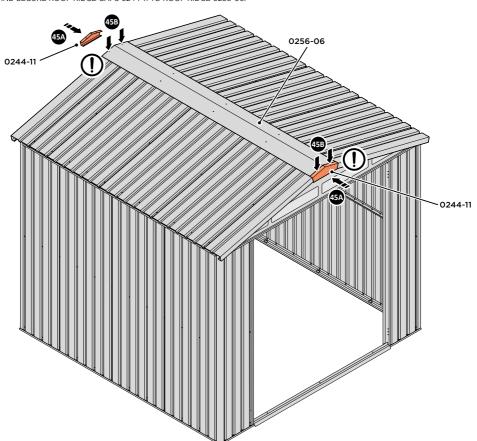


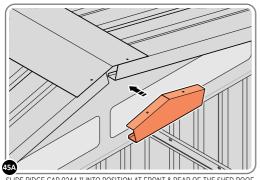




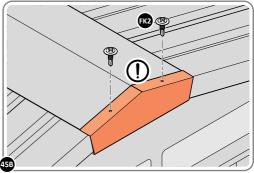



SECURE RIDGE CAP AT x4 LOCATIONS INDICATED USING TYPICAL FIXING METHOD. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.

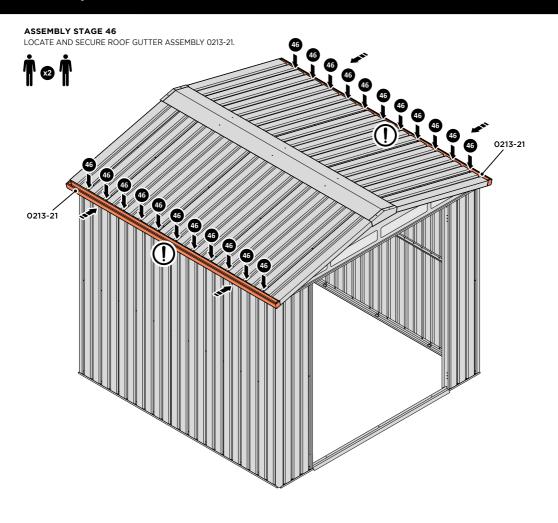

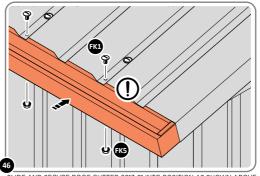


SLIDE AND SECURE ROOF GUTTER 0213-21 INTO POSITION AS SHOWN ABOVE. IMPORTANT: ENSURE PANELS ALWAYS OVERLAP GUTTER AS SHOWN.

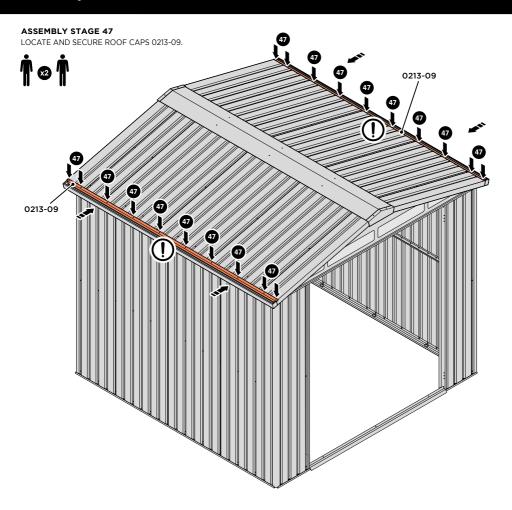


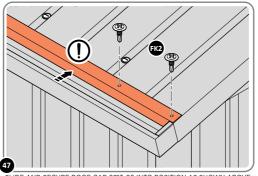


SLIDE AND SECURE ROOF CAP 0213-09 INTO POSITION AS SHOWN ABOVE. PLEASE NOTE: THE FIXING USED IS A SELF DRILLING COMPONENT.

# Assembly Guide

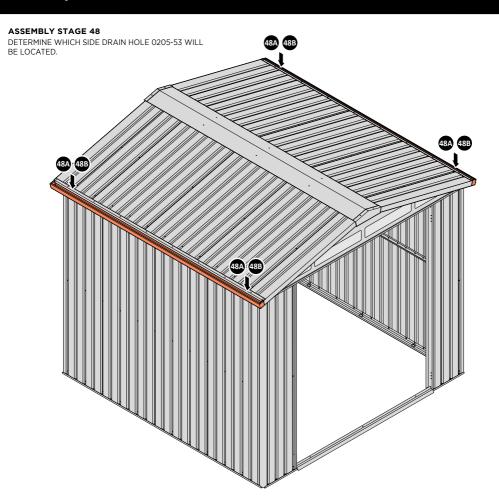

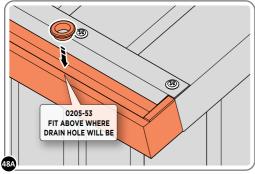



LOCATE AN OPEN GROMMET INTO THE ROOF GUTTER ABOVE WHERE THE DRAIN HOLE WILL BE LOCATED.

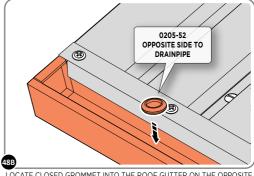


LOCATE CLOSED GROMMET INTO THE ROOF GUTTER ON THE OPPOSITE SIDE TO THE LOCATED DRAIN HOLE AS SHOWN ABOVE.

LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-97 FURNITURE.

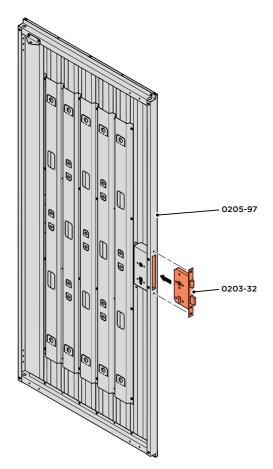

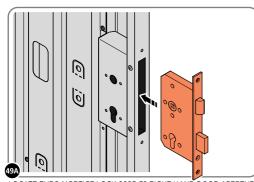


LOCATE EURO MORTICE LOCK 0203-32 RIGHT-HAND DOOR APERTURE AS SHOWN.

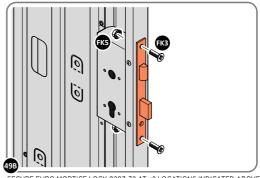


SECURE EURO MORTICE LOCK 0203-32 AT x2 LOCATIONS INDICATED ABOVE. SEE FOLLOWING DATA SHEET FOR COMPLETION OF MORTICE LOCK INSTALLATION.

#### **ASSEMBLY STAGE 49 CONTINUED**


LOCATE AND SECURE RIGHT-HAND DOOR ASSEMBLY 0205-97 FURNITURE.

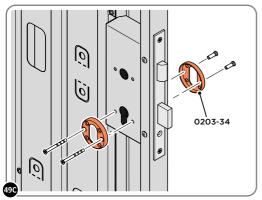


LOCATE AND SECURE EURO ESCUTCHEON 0203-34 AS SHOWN. PLEASE NOTE: FIXING IS PART OF THE ESCUTCHEON ASSEMBLY.

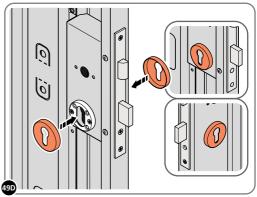

LOCATE EURO ESCUTCHEON COVER 0203-34 ONTO EURO CYLINDER AS SHOWN. PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

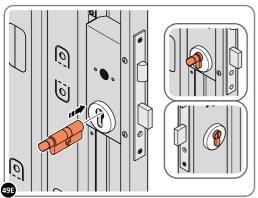


LOCATE EURO CYLINDER 0203-36 INTO DOOR APERTURE. IMPORTANT: ENSURE COVER IS FITTED AS SHOWN.

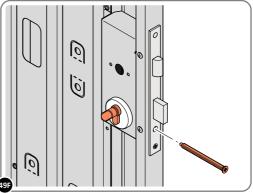


SECURE EURO CYLINDER 0203-36 AS SHOWN ABOVE.

PLEASE NOTE: FIXING IS PART OF THE EURO MORTICE LOCK ASSEMBLY.

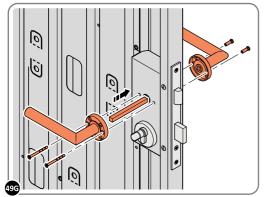



LOCATE AND SECURE DOOR HANDLE ASSEMBLY 0203-33 AS SHOWN. PLEASE NOTE: FIXING IS PART OF THE HANDLE ASSEMBLY.

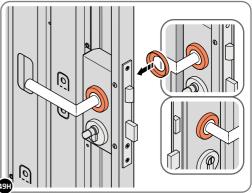



LOCATE COVER ONTO DOOR HANDLE AS SHOWN.
PLEASE NOTE: THESE ARE PUSHED ON AND WILL CLICK INTO PLACE.

LOCATE AND SECURE DOOR BOLTS 0203-35, CATCH PLATE 0203-32 AND CATCH PLATE COVER 0203-41 AT EACH LOCATIONS INDICATED.

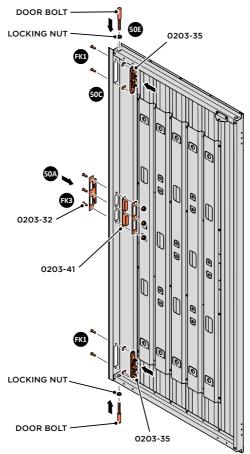

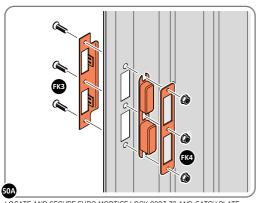




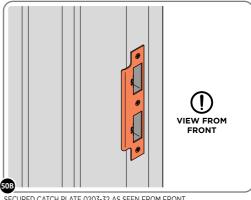


SECURED CATCH PLATE 0203-32 AS SEEN FROM FRONT.

#### **ASSEMBLY STAGE 50 CONTINUED**


LOCATE AND SECURE DOOR BOLTS 0203-35 AT BOTH LOCATIONS INDICATED.

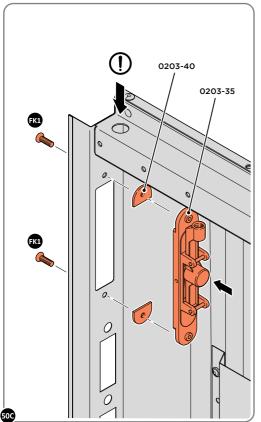


SECURE THE FLUSH BOLT BODY 0203-35, USING PACKERS 0203-40 AS SHOWN ABOVE, ENSURE THE THREADED BOSS IS FACING THE HOLE IN THE DOOR.

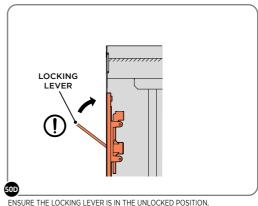


ENSURE THE LOCKING LEVER IS IN THE UNLOCKED POSITION, AS SHOWN ABOVE.

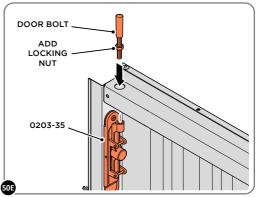

THREAD THE LOCKING NUT ONTO THE DOOR BOLT AND INSERT THROUGH THE HOLE IN THE DOOR AND SCREW INTO THE BOLT BODY 0203-35.

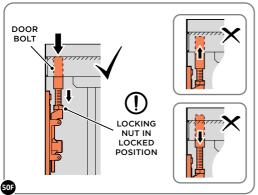



ADJUST THE DOOR BOLT UNTIL IT SITS FLUSH WITH THE EDGE OF THE DOOR. SECURE INTO POSITION WITH THE LOCKING NUT.

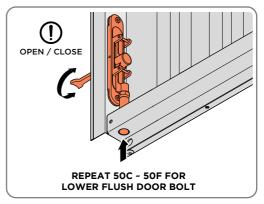


LOCATE AND SECURE A DOOR GROMMET 0203-57 AT EACH LOCATION INDICATED.



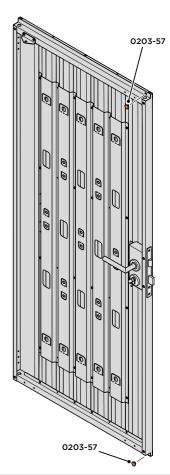

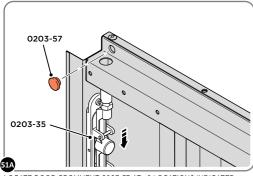





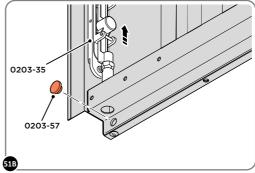


LOCATE DOOR GROMMENT 0203-57 AT x2 LOCATIONS AS SHOWN.

LOCATE AND SECURE DOOR HINGES ONTO DOOR ASSEMBLIES.

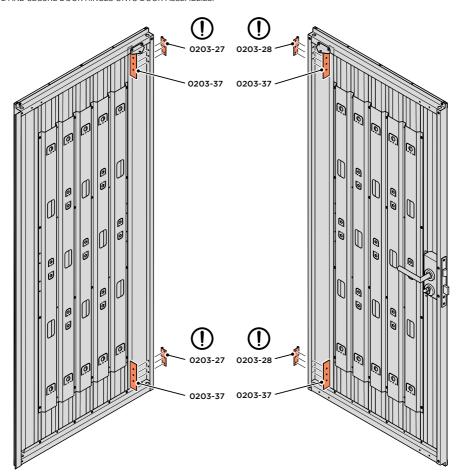

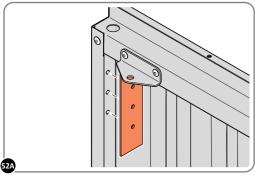




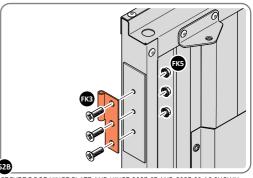


SECURE DOOR HINGE PLATE AND HINGE 0203-27 AND 0203-28 AS SHOWN.


IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.

LOCATE AND SECURE DOOR HINGES ONTO LEFT-HAND & RIGHT-HAND DOOR POST.

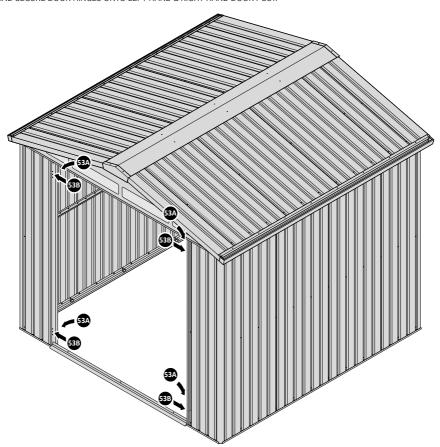

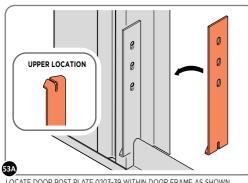



LOCATE DOOR POST PLATE 0203-39 WITHIN DOOR FRAME AS SHOWN. IMPORTANT: ENSURE CORRECT DOOR HINGE IS SECURED TO CORRECT DOOR.

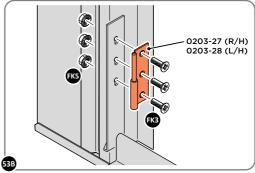


SECURE DOOR POST PLATES AND HINGES AS SHOWN.
PLEASE NOTE: REPEAT EACH PROCEDURE FOR UPPER LOCATION.

LOCATE AND SECURE GAS STRUT BRACKETS 0205-66.

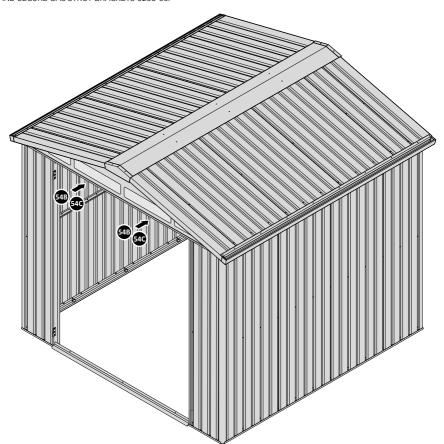


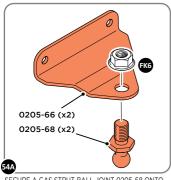

SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET 0205-66.

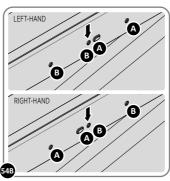

DETERMINE DOOR OPENING ANGLE: A: 90° OPENING OR B: 120° OPENING

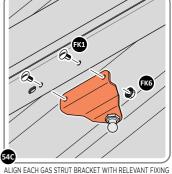



ALIGN EACH GAS STRUT BRACKET WITH RELEVANT FIXING HOLES, SECURE USING TYPICAL FIXING METHOD ABOVE.


# Assembly Guide


# **ASSEMBLY STAGE 55**

LOCATE DOOR ASSEMBLIES ONTO HINGES.

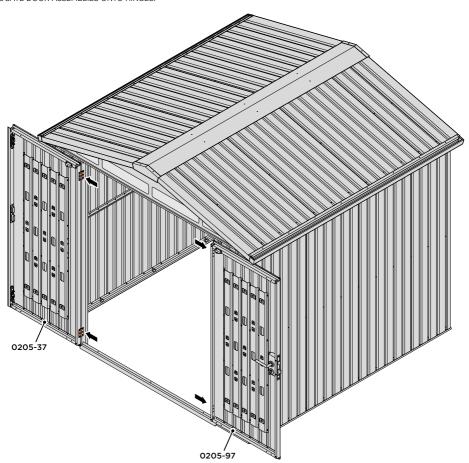

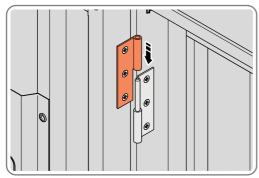



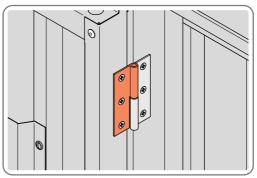



ASSEMBLED DOOR HINGE.

# Assembly Guide


# **ASSEMBLY STAGE 56**

LOCATE AND SECURE GAS STRUT 0205-63.

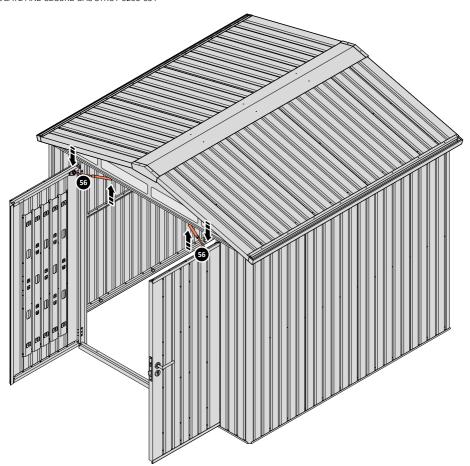

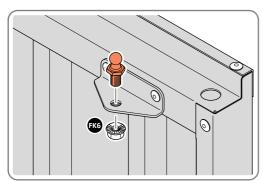


SECURE A GAS STRUT BALL JOINT 0205-68 ONTO EACH GAS STRUT BRACKET THAT IS PRE-RIVETED ONTO EACH DOOR ASSEMBLY.

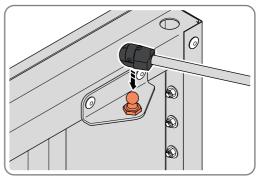


FIX EACH GAS STRUT 0205-63 ONTO RELEVANT GAS STRUT BALL JOINTS. PLEASE NOTE: PUSHES DOWN ON DOOR AND UPWARDS ON DOOR FRAME.


LOCATE AND SECURE SHELF ASSEMBLY 0205-BLACK-SRH KIT.

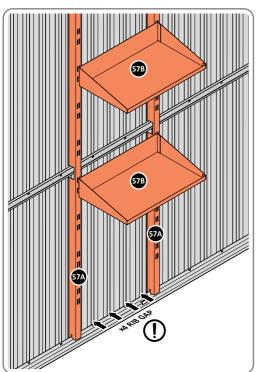

THE SHELF ASSEMBLY CAN BE LOCATED AS DESIRED, PLEASE DETERMINE THE MOST SUITABLE LOCATION AND ASSEMBLE AS SHOWN IN FIG.57A & 57B. PLEASE NOTE: THE SHELF SIMPLY HOOKS ONTO THE POST.

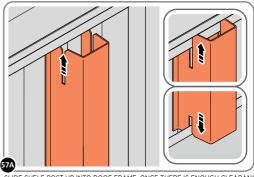


SLIDE SHELF POST UP INTO ROOF FRAME, ONCE THERE IS ENOUGH CLEARANCE AT THE BOTTOM LOCATE SHELF POST OVER FLOOR FRAME AND LOWER.

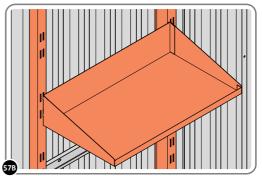

LOCATE EACH SHELF 0205-38-02 ONTO SHELF POST AS DESIRED.

# **ASSEMBLY STAGE 58**

LOCATE TOOL HANGERS 0205-BLACK-TH WITHIN SHED AS DESIRED LOCATION.

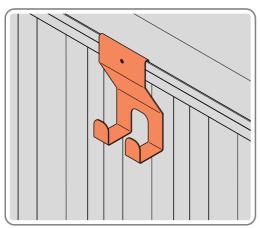

HOOK EACH TOOL HANGER ONTO ROOF FRAME AT DESIRED LOCATION.



#### IMPORTANT

ADJUST ALL COMPONENTS FOR BEST POSSIBLE FIT AND TIGHTEN ALL FASTENERS.

ONCE ALL FASTENERS HAVE BEEN CHECKED AND ARE SECURE THE ASSEMBLY IS COMPLETE

WE RECOMMEND YOU ANCHOR YOUR SHED TO A SOLID CONCRETE BASE, GUIDANCE CAN BE FOUND ON PAGE 'I'

# Caring for your HEX Living product

Your **HEX Living product** is designed to stand the test of time, which is why we're happy to offer a **lifetime warranty** on our products. With zero maintenance required, simply assemble your HEX Living product, and enjoy putting it to great use in your garden.

Periodically, you might want to give your product a clean, these simple care tips are not essential to the performance of your product:

- Remove surface dirt with plain water using a jet wash or sponge, the coating on our products will
  ensure dirt or mud simply wipes away.
- If you've purchased a HEX Living metal storage solution, periodically clear the roof of fallen leaves.
- If your product has guttering, remove leaves and garden debris as you would on your home.

# Ensure you have registered your HEX Living product

Using the unique serial number found on the cover of this document, please visit **www.hexliving.co.uk** to register your product and access the HEX Living lifetime warranty and video instructions.

Customer Service: +44 (0) 1889 272 056







